

# Easy connection setup guide

**Outdoors**  
Send your favorite still pictures or motion pictures

**Images sent to smartphone**

- Connects\*1
- Select still pictures or motion pictures, and send it\*2

\* Installation of the smartphone application "LUMIX LINK" is required.  
\* Still pictures or motion pictures can also be sent to the WEB service via a smartphone. Refer to the "Owner's Manual for advanced features (PDF format)" for details.

**Indoors**  
Send your favorite still pictures or motion pictures

Wireless access point (Broadband router)\*3

\*1 During Playback Mode, select [Easy Setup] to change settings for the first time only.  
\*2 To send one still picture or motion picture at a time, select the still picture or motion picture during Playback Mode and press the [Wi-Fi] button.  
\*3 To select multiple still pictures or motion pictures and send them, touch [Wi-Fi] during Playback Mode.  
\*4 Name will differ depending on the manufacturer.  
\*5 Setting is only required the first time using a smartphone or a PC.

The camera cannot be used to connect to a public wireless LAN connection.

**Easily send still pictures or motion pictures from your camera**

**Images sent to WEB service**  
Send images to services such as Facebook or YouTube.

- Connects\*1
- Register to "LUMIX CLUB"\*1
- Select still pictures or motion pictures, and send it\*2

See the back page

**Images sent to AV device**  
Send images to Panasonic AV device in your home.

- Connects\*1
- Select still pictures or motion pictures, and send it\*2

See the back page

**Images sent to PC**

- Connects\*1
- Select still pictures or motion pictures, and send it\*2

\* The "PHOTOfunSTUDIO 6.4 HD Lite Edition with Wi-Fi" software on the CD-ROM (supplied) must be installed.

See the back page

## Send still pictures or motion pictures from your camera to your smartphone

### Preparation Download and install the smartphone application "LUMIX LINK"

**About the "LUMIX LINK"**  
"LUMIX LINK" is a smartphone application provided by Panasonic to receive still pictures or motion pictures sent from LUMIX models with Wi-Fi, or to stream live to WEB services. "LUMIX LINK" is required to connect this camera and your smartphone.  
Download "LUMIX LINK" (available free of charge) using the method below.

**For Android:**

**Smartphone operations**

- Connect your Android device to the network.
- Select "Android Market".
- Enter "LUMIX LINK" into the search box.
- Select "LUMIX LINK" and install it.

The [LUMIX LINK] icon will be added to the menu.

**For iPhone:**

**Smartphone operations**

- Connect the iPhone to the network.
- Select "App Store".
- Enter "LUMIX LINK" into the search box.
- Select "LUMIX LINK" and install it.

The [LUMIX LINK] icon will be added to the menu.

**Compatible OSes (current as of August 2011)**  
For Android: Android2.1, Android2.2, Android2.3  
For iPhone: iOS3, iOS4  
\* The service may not be able to be used properly depending on the type of smartphone being used. For compatible devices, see the following support site.  
<http://panasonic.jp/support/global/cs/dsc/> (This Site is English only.)  
\* If you are downloading or transferring still pictures and motion pictures using your mobile network, you may be subject to high network usage fees under your contract.

## STEP 1 Setup Select [Easy Setup] on the camera

Setting is only required the first time.

**Camera operations**

- Turn the camera on and touch [ ] to set Playback Mode.
- Touch [MENU] to display the menu screen.
- Touch [Wi-Fi Setup] ([Wi-Fi Setup]).
- Touch [Easy Setup].
- Touch [Smartphone].
- Touch [Next].

The SSID and encryption key of the camera are displayed. Enter the displayed details in the next step.

## STEP 2 Connection Connect your smartphone and camera

**Smartphone operations**

- Set the Wi-Fi function to ON in the settings menu of the smartphone.
- Select the camera ([FX90-XXXXXX]) from the displayed network name (SSID) in the Wi-Fi settings.
- Input the encryption key displayed on the camera.
- Start the smartphone application "LUMIX LINK".

**Camera operations**

- If entering the encryption key takes longer than approximately 4 minutes, the camera will return to the screen in STEP 1 Step 5.
- A message is displayed on the camera when the connection is complete. Touch [OK] twice.
- Exit the menu after it is set. (Touch [ ] several times.)

## STEP 3 Send Send still pictures or motion pictures from your camera to your smartphone

**Camera operations**

- In Playback Mode, drag the screen horizontally and select an image.
- Press the [Wi-Fi] button.
- Touch [Smartphone].
- Touch [Yes].

**Smartphone operations**

- Touch [Smartphone].

**Camera operations**

- A list of smartphones that can be connected will appear. (This may take several minutes)
- Touch the destination name and touch [OK].

**Camera operations**

- If the screen is not displayed during the sending, reconnect your smartphone. Go to STEP 1.
- If still pictures or motion pictures cannot be sent, check "Message Display" and "Troubleshooting" on pages 28 to 31 of the "Basic Owner's Manual".

**Sending multiple still pictures or motion pictures**

Touch [Wi-Fi].

Refer to STEP 5 on the back page for details.

