



# Panasonic®

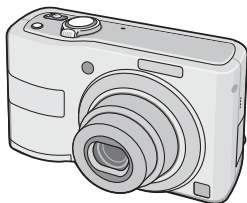

## Operating Instructions Digital Camera

Model No. **DMC-LS85**  
**DMC-LS86**

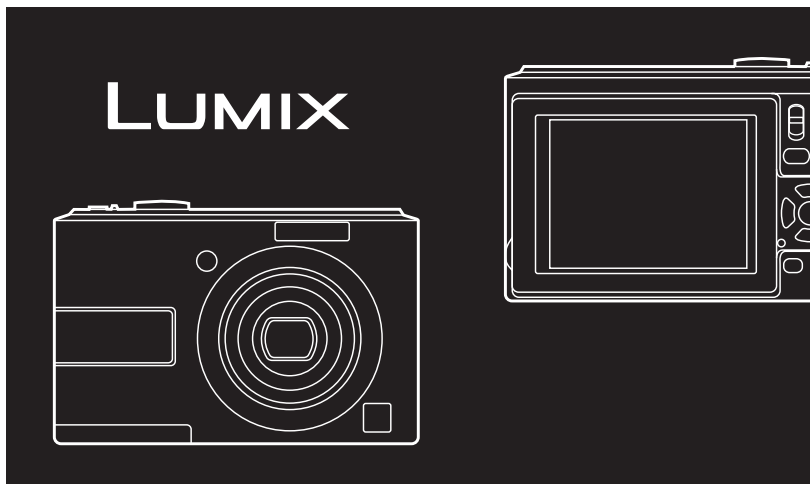

Before connecting, operating or  
adjusting this product, please read the  
instructions completely.

For USA and Puerto Rico assistance, please call: 1-800-211-PANA(7262) or, contact us via the web at:  
<http://www.panasonic.com/contactinfo>

For Canadian assistance, please call: 1-800-99-LUMIX (1-800-995-8649) or  
send e-mail to: [lumixconciierge@ca.panasonic.com](mailto:lumixconciierge@ca.panasonic.com)

**Dear Customer,**  
**Thank you for choosing Panasonic!**

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information in the box below.

The serial number is on the tag located on the underside of your Camera. Be sure to **retain this manual** as your convenient Camera information source.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Information for Your Safety

### **WARNING:**

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,**

- **DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.**
- **USE ONLY THE RECOMMENDED ACCESSORIES.**
- **DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

**Carefully observe copyright laws. Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.**

- Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.
- SDHC Logo is a trademark.
- Other names, company names, and product names printed in these instructions are trademarks or registered trademarks of the companies concerned.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.

THE SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.

#### CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer's instructions.

Product Identification Marking is located on the bottom of unit.

### THE FOLLOWING APPLIES ONLY IN THE U.S.A.

#### FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

#### Declaration of Conformity

Trade Name: Panasonic

Model No.: DMC-LS85

DMC-LS86

Responsible party: Panasonic Corporation of North America  
One Panasonic Way, Secaucus, NJ 07094

Support Contact: Panasonic Consumer Electronics Company  
1-800-211-PANA(7262)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**THE FOLLOWING APPLIES ONLY IN CANADA.**

This Class B digital apparatus complies with Canadian ICES-003.

**– If you see this symbol –**

**Information on Disposal in other Countries outside the European Union**



This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

**■ About the batteries**

- Do not heat or expose to flame.
- Do not leave the batteries in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

**■ Care of the camera****• Do not strongly shake or bump the camera by dropping it etc.**

This unit may malfunction, recording pictures may no longer be possible or the lens or the LCD monitor may be damaged.

- We strongly recommend you do not leave the camera in your trousers pocket when you sit down or forcefully insert it into a full or tight bag etc.

Damage to the LCD monitor or personal injury may result.

**• Be particularly careful in the following places as they may cause this unit to malfunction.**

– Places with a lot of sand or dust.

– Places where water can come into contact with this unit such as when using it on a rainy day or on a beach.

- **Do not touch the lens or the sockets with dirty hands. Also, be careful not to allow liquids, sand and other foreign matter to get into the space around the lens, buttons etc.**

- **If water or seawater splashes on the camera, use a dry cloth to wipe the camera body carefully.**

**■ About Condensation (When the lens is fogged up)**

- Condensation occurs when the ambient temperature or humidity changes. Be careful of condensation since it causes lens stains, fungus and camera malfunction.

- If condensation occurs, turn the camera off and leave it for about 2 hours. The fog will disappear naturally when the temperature of the camera becomes close to the ambient temperature.

**■ Read together with the “Cautions for Use”. (P84)**

## Contents

### Before Use

Information for Your Safety.....	2
Quick Guide.....	8
Standard Accessories.....	9
Names of the Components.....	10

### Preparation

About the Batteries (Number of recordable pictures).....	12
Inserting/Removing the Batteries/Card (Optional).....	14
About the Built-in Memory/the Card.....	15
Setting Date/Time (Clock Set).....	16
About the Mode and Menu Operation.....	17
• Mode switching.....	17
• About the menu operation.....	18
• Using the quick menu.....	20
About the [SETUP] Menu.....	21

### Basic

Taking Pictures Using the Automatic Function (Intelligent Auto Mode).....	25
• Scene detection.....	26
• About the flash.....	27
• Settings in intelligent auto mode.....	27
Taking Pictures with Your Favorite Settings (Normal Picture Mode).....	28
• Focusing.....	29
• When the subject is not in focus (such as when it is not in the center of the composition of the picture you want to take).....	29
• Preventing jitter (camera shake).....	30
• Direction detection function.....	30
Taking Pictures with the Zoom.....	30
• Using the optical zoom/ the extended optical zoom (EZ)/ the digital zoom.....	30
Playing Back Pictures (Normal playback mode).....	32
• Displaying multiple screens (Multi Playback).....	32
• Using the playback zoom.....	33
Deleting Pictures.....	33
• To delete a single picture.....	33

- To delete multiple pictures (up to 50) or all the pictures..... 34

### Advanced-Shooting

About the LCD Monitor.....	35
• Display in large size.....	35
Taking Pictures Using the Built-in Flash.....	36
• Switching to the appropriate flash setting.....	36
Taking Close-up Pictures.....	39
Taking Pictures with the Self-timer.....	40
Compensating the Exposure.....	41
Taking Pictures that Match the Scene being Recorded (Scene Mode).....	42
•  [PORTRAIT].....	43
•  [SOFT SKIN].....	43
•  [SELF PORTRAIT].....	43
•  [SCENERY].....	44
•  [SPORTS].....	44
•  [NIGHT PORTRAIT].....	44
•  [NIGHT SCENERY].....	44
•  [FOOD].....	44
•  [PARTY].....	45
•  [CANDLE LIGHT].....	45
•  [BABY1] /  [BABY2].....	45
•  [PET].....	46
•  [SUNSET].....	46
•  [HIGH SENS.].....	46
•  [HIGH-SPEED BURST].....	46
•  [STARRY SKY].....	47
•  [FIREWORKS].....	47
•  [BEACH].....	48
•  [SNOW].....	48
•  [AERIAL PHOTO].....	48
Motion Picture Mode.....	49
Useful Functions at Travel Destinations..	51
• Recording which day of the vacation you take the picture.....	51
• Recording date/time at overseas travel destinations (World time).....	52
Using the [REC] Menu.....	54
•  [PICTURE SIZE].....	54
•  [QUALITY].....	54
•  [SENSITIVITY].....	55
•  [WHITE BALANCE].....	55
•  [AF MODE].....	57

•  [BURST] .....	58	Troubleshooting .....	91
•  [DIGITAL ZOOM] .....	58	• Batteries and power source .....	91
•  [COLOR MODE] .....	59	• Shooting .....	91
•  [STABILIZER] .....	59	• LCD monitor .....	93
•  [AF* [AF ASSIST LAMP]] .....	60	• Flash .....	93
•  [CLOCK SET] .....	60	• Playback .....	94
		• TV, PC and printer .....	95
		• Others .....	95

## Advanced-Viewing

Playing Back Pictures in Sequence (Slide Show) .....	61	Number of Recordable Pictures and Available Recording Time .....	97
Selecting Pictures and Playing Them Back .....	63	Specifications .....	100
•  [FAVORITE PLAY] .....	63	Digital Camera Accessory System .....	103
Playing Back Motion Pictures .....	64	Digital Camera Accessory Order Form (For USA and Puerto Rico Customers) .....	104
Using the [PLAYBACK] Menu .....	65	Request for Service Notice (For USA and Puerto Rico Only) .....	105
•  [CALENDAR] .....	65	Limited Warranty (For USA and Puerto Rico Only) .....	106
•  [TITLE EDIT] .....	66	Customer Services Directory (For USA and Puerto Rico Only) .....	108
•  [TEXT STAMP] .....	67	Précautions à prendre (pour le Canada) .....	109
•  [RESIZE] Reducing the picture size (number of pixels) .....	68	Index .....	111
•  [ROTATE DISP.] .....	70		
•  [FAVORITE] .....	70		
•  [PRINT SET] .....	71		
•  [PROTECT] .....	73		
•  [COPY] .....	74		

## Connecting to other equipment

Connecting to a PC .....	75
• Using a PC with an SD Memory Card slot or a card reader .....	76
Printing the Pictures .....	77
• Selecting a single picture and printing it .....	78
• Selecting multiple pictures and printing them .....	78
• Print Settings .....	79
• Using a printer with an SD Memory Card slot .....	80
Playing Back Pictures on a TV Screen ...	81
• Playing back pictures using the AV cable (optional) .....	81
• Playing back pictures on a TV with an SD Memory Card slot .....	81

## Others

Screen Display .....	82
Cautions for Use .....	84
Message Display .....	89


## Quick Guide

This is the overview of the procedure to record pictures with this camera. For each operation, be sure to refer to the corresponding pages.

### 1

#### Insert the batteries.


- When you do not use the card (optional), you can record or play back pictures on the built-in memory. Refer to P15 when you use a card.

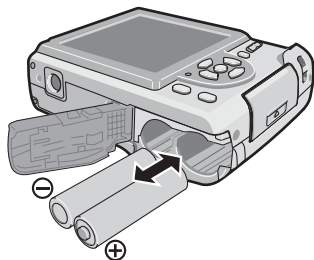

### 2

#### Turn the camera on to take pictures.


- Set the clock. (P16)
- ❶ Set the recording/playback switch to [📷].
- ❷ Press the shutter button to take pictures. (P25)

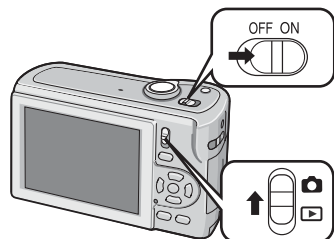

### 3

#### Play back the pictures.

- ❶ Set the recording/playback switch to [▶].
- ❷ Select the picture you want to view. (P32)

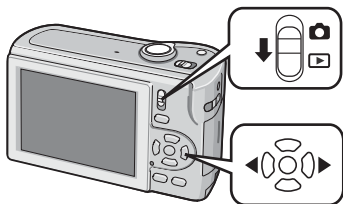




## Standard Accessories

Before using your camera, check the contents.

 - 1 Batteries
    - AA Alkaline batteries (LR6)
  - 2 USB Connection Cable
  - 3 CD-ROM
    - Software:  
Use it to install the software to your PC.
  - 4 Hand Strap
- SD Memory Card, SDHC Memory Card and MultiMediaCard are indicated as **card** in the text.
  - **Card is optional.**  
**You can record or play back pictures on the built-in memory when you are not using a card.**
  - For information about optional accessories, please refer to "Digital Camera Accessory System". (P103)
  - If any of the accessories are lost, customers in the USA and Puerto Rico should contact Panasonic's parts department at 1 800 833-9626 and customers in Canada should contact 1 800 99-LUMIX (1-800-995-8649) for further information about obtaining replacement parts.



1



2 K1HA08AD0001





3



4 VFC4297


## Names of the Components

- 1 [ **A** ] button (P25)
- 2 Zoom lever (P30)
- 3 Shutter button (P25)
- 4 Microphone (P49)
- 5 Flash (P36)
- 6 Self-timer indicator (P40)  
AF assist lamp (P60)
- 7 Lens part
- 8 Lens barrel
- 9 [AV OUT/DIGITAL] socket (P75,  
77, 81)
- 10 Speaker (P21, 64)
- 11 LCD monitor (P35, 93)
- 12 Recording/playback switch (P17)
- 13 [MENU/SET] button (P17)
- 14 Camera ON/OFF  
switch (P16)

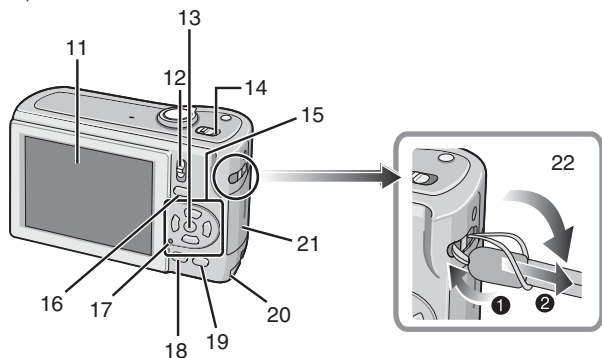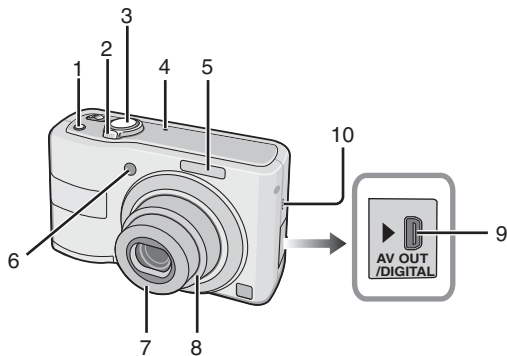


## 15 Cursor buttons

- Ⓐ: ▲ /Exposure compensation (P41)
- Ⓑ: ▼ /Macro button (P39)
- Ⓒ: ◀ /Self-timer button (P40)
- Ⓓ: ▶ /Flash mode button (P36)

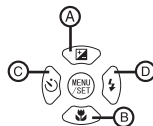

In these operating instructions, operations using the cursor buttons are described as follows.

e.g.: When you press the ▼ (  ) button.



## 16 [MODE] button (P17)

## 17 Status indicator (P14, 22, 25)

## 18 [DISPLAY] button (P35)

## 19 [Q.MENU] (P20)/Delete (P33) button

## 20 DC coupler door (P103)

## 21 Card door (P14)


## 22 Hand strap eyelet

- Attach the strap when using the camera to prevent it from dropping.

## 23 Tripod receptacle

- When you use a tripod, make sure the tripod is stable with the camera attached to it.

## 24 Battery door (P14)

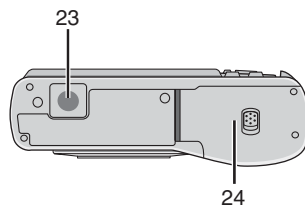

Please read "Batteries" in "Cautions for Use" for more details. (P85)

## About the Batteries (Number of recordable pictures)

### ■ Usable batteries

AA Alkaline batteries (supplied)	AA Rechargeable Ni-MH (nickel metal hydride) batteries (optional)
----------------------------------	---

- AA EVOLTA batteries (Panasonic new battery) can also be used.

 
### ■ Unusable batteries

Manganese batteries	Lithium batteries	Oxyride batteries
Nickel batteries	Ni-Cd batteries	

- Operation is not guaranteed when using the batteries listed above. The batteries can leak and the following malfunctions can occur:
  - The remaining battery power is not displayed accurately.
  - The camera does not turn on.
  - Data written to the built-in memory or the card is damaged resulting in loss of the photographs.
- Never use these type of batteries.
  - All or part of the covering on the battery is peeled off.
  - The ⊖ pole is flat.

### ■ Battery indication

- The battery indication is displayed on the LCD monitor.  
[It does not appear when you use the camera with the AC adaptor (optional: P103) connected.]



- The indication turns red and blinks if the remaining battery power is exhausted. (The status indicator blinks when the LCD monitor turns off.) Replace with new batteries or fully charged Ni-MH batteries.

### ■ Battery life

The number of recordable pictures (By CIPA standard in Normal Picture Mode [  ])

Batteries Used	Number of recordable pictures (Approx.)
Panasonic Alkaline batteries (supplied or optional)	270 pictures (135 min)
Fully charged Panasonic Ni-MH batteries (optional)	550 pictures (275 min)


**Recording conditions by CIPA standard**

- Temperature: 23 °C (73.4 °F)/Humidity: 50% when the LCD monitor is on\*<sup>1</sup>.
- Using a Panasonic SD Memory Card (32 MB)
- Starting recording 30 seconds after the camera is turned on. (When the optical image stabilizer function is set to [AUTO])
- **Recording once every 30 seconds**, with full flash every second recording.
- Rotating the zoom lever from Tele to Wide or vice versa in every recording.
- Turning the camera off every 10 recordings. Leaving the camera until the batteries cool down.

\*<sup>1</sup> The number of recordable pictures decreases when the Auto Power LCD, Power LCD or High Angle Mode is used (P22).

- CIPA is an abbreviation of [Camera & Imaging Products Association].

**The number of recordable pictures varies depending on the recording interval time. If the recording interval time becomes longer, the number of recordable pictures decreases. (e.g. When recording once every 2 minutes: about 1/4 the number when recording once every 30 seconds)**

**The number of recordable pictures in low temperature (In Normal Picture Mode [  ] when the temperature is 0 °C (32 °F) and other recording conditions comply with CIPA standard.)**

Batteries Used	Number of recordable pictures (Approx.)
Panasonic Alkaline batteries (supplied or optional)	50 pictures (25 min)
Fully charged Panasonic Ni-MH batteries (optional)	420 pictures (210 min)

- Please note that the performance of alkaline batteries significantly decreases in low temperature conditions.

**Playback time**

Batteries Used	Playback time (Approx.)
Panasonic Alkaline batteries (supplied or optional)	420 min
Fully charged Panasonic Ni-MH batteries (optional)	610 min


**Note**

- The number of recordable pictures and the playback time will also vary depending on the brand and type of batteries used.
- We recommend using Economy Mode (P22) or turning off the camera frequently while recording to maintain battery power. If you will be using the camera for long periods of time, using rechargeable Ni-MH batteries is recommended.

## Inserting/Removing the Batteries/Card (Optional)

- Check that the camera is turned off.
- Use alkaline batteries (supplied) or Ni-MH batteries (optional).
- We recommend using a Panasonic card.

- 1** Slide the battery door **A** or the card door **B** to open it.  
 ⓐ Press and keep the lever down and slide the door.

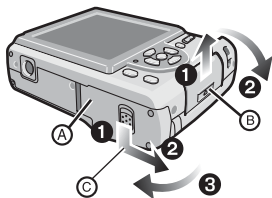


- 2** **Batteries:**  
 Insert the batteries with the  $\oplus$  and  $\ominus$  poles aligned correctly.

**Card:**

Insert the card with the label side facing the back of the camera until it clicks and locks.


To remove the card, push the card until it clicks, then pull the card out upright.

- Do not touch the connection terminals on the back side of the card.
- The card may be damaged if it is not fully inserted.

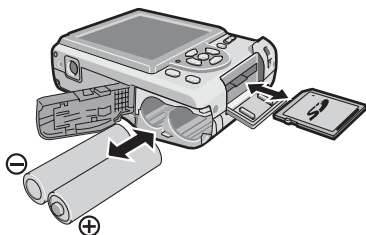

- 3** **1:** Close the battery door or the card door.  
**2:** Slide the battery door or the card door to the end and then close it firmly.

- If the card door cannot be completely closed, remove the card, check its direction and insert it again.

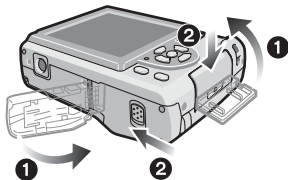

**Note**

- Before removing the card or batteries, turn the camera off, and wait until the status indicator has gone off completely. (Otherwise, this unit may no longer operate normally and the card itself may be damaged or the recorded pictures may be lost.)
- Remove the batteries after use. Batteries may heat up soon after you start using the unit. Turn the camera off and wait until the battery temperature decreases before removing them.
- Always use 2 new batteries of the same type when replacing batteries.

## About the Built-in Memory/the Card

The following operations can be performed using this unit.

- When a card has not been inserted: Pictures can be recorded in the built-in memory and played back.
- When a card has been inserted: Pictures can be recorded on the card and played back.
- **When using the built-in memory**  
[ **IN** ] → [ **IN** ] (access indication<sup>\*1</sup>)
- **When using the card**  
[ **IN** ] (access indication<sup>\*1</sup>)

<sup>\*1</sup> The access indication lights red when pictures are being recorded on the built-in memory (or the card).




### Built-in Memory

- **Memory size: Approx. 50 MB**
- **Recordable motion pictures: QVGA (320 × 240 pixels) only**
- The built-in memory can be used as a temporary storage device when the card being used becomes full.
- You can copy the recorded pictures to a card. (P74)
- The access time for the built-in memory may be longer than the access time for a card.

### Card

The following types of cards can be used with this unit.  
(These cards are indicated as card in the text.)

Type of card	Characteristics
<b>SD Memory Card (8 MB to 2 GB)</b> (Formatted using the FAT12 or FAT16 format in compliance with the SD standard)	<ul style="list-style-type: none"> <li>• Fast recording and writing speed</li> <li>• Write-Protect switch <b>A</b> provided (When this switch is set to the [LOCK] position, no further data writing, deletion or formatting is possible. The ability to write, delete and format data is restored when the switch is returned to its original position.)</li> </ul> 
<b>SDHC Memory Card (4 GB to 32 GB)<sup>*2</sup></b> (Formatted using the FAT32 format in compliance with the SD standard)	
<b>MultiMediaCard</b>	<ul style="list-style-type: none"> <li>• Still pictures only.</li> </ul>

<sup>\*2</sup> The SDHC Memory Card is a memory card standard decided by the SD Association in 2006 for high capacity memory cards more than 2 GB.

You can use an SDHC Memory Card in equipment that is compatible with SDHC Memory Cards however you cannot use an SDHC Memory Card in equipment that is only compatible with SD Memory Cards. (Always read the operating instructions for the equipment being used.)

- You can only use cards with SDHC logo (indicating compliance with the SD standard) if using cards with 4 GB or more capacity.
- Please confirm the latest information on the following website.

<http://panasonic.co.jp/pavc/global/cs>

(This Site is in English only.)

## Note

- Do not turn this unit off, remove its battery or card or disconnect the AC adaptor (optional: P103) when the access indication is lit [when pictures are being read or deleted or the built-in memory or the card is being formatted (P24)]. Furthermore, do not subject the camera to vibration or impact. The card or the data on the card may be damaged, and this unit may no longer operate normally.
- The data on the built-in memory or the card may be damaged or lost due to electromagnetic waves, static electricity or breakdown of the camera or the card. We recommend storing important data on a PC etc.
- Do not format the card on your PC or other equipment. Format it on the camera only to ensure proper operation. (P24)
- Keep the Memory Card out of reach of children to prevent swallowing.


## Setting Date/Time (Clock Set)

- The clock is not set when the camera is shipped.

### 1 Turn the camera on.

- When you turn the camera on, [PLEASE SET THE CLOCK] message appears. (It does not appear in Playback Mode.)


- Ⓐ [MENU/SET] button
- Ⓑ Cursor buttons

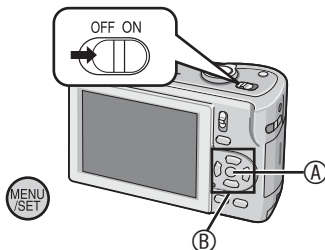

### 2 Press [MENU/SET].

### 3 Press ◀▶ to select the items (year, month, day, hour, minute, display sequence or time display format), and press ▲▼ to set.

- Ⓒ Time at the home area
- Ⓓ Time at the travel destination (P52)
- ✖ : Cancel without setting the clock.
- Select either [24HRS] or [AM/PM] for the time display format.
- AM/PM is displayed when [AM/PM] is selected.

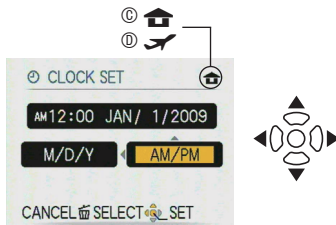

### 4 Press [MENU/SET].

- After completing the clock settings, turn the camera off. Then turn the camera back on, switch to Recording Mode, and check that the display reflects the settings that were performed.
- When [MENU/SET] has been pressed to complete the settings without the clock having been set, set the clock correctly by following the “Changing the clock setting” procedure (P17).



## Changing the clock setting





- 1 Press [MENU/SET].
  - 2 Press ▲/▼ to select [CLOCK SET].
  - 3 Press ► and perform steps 3 and 4 for setting.
  - 4 Press [MENU/SET] to close the menu.
- You can also set the clock in the [SETUP] menu. (P21)


### Note

- The clock is displayed when [DISPLAY] is pressed several times during recording.
- When batteries have been inserted for more than 3 hours, the clock setting is stored in the camera for approximately 3 months even if the batteries are removed.
- You can set the year from 2000 to 2099.
- Set the date so that the correct date is printed when you order prints or use the text stamp. (P67)
- If the clock is set, the correct date can be printed even if the date is not displayed on the screen of the camera.


## About the Mode and Menu Operation

### Mode switching

- 1 Slide the recording/playback switch <sup>(A)</sup> to  (up) or  (down).
  -  : Recording Mode
  -  : Playback Mode

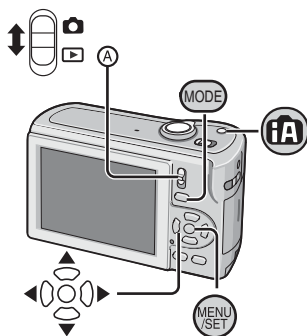

- 2 Press [MODE] to display the mode selection screen.  
(Example: Normal Picture Mode)

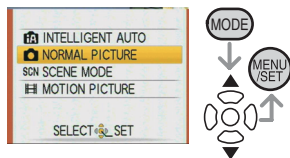

- 3 Press ▲/▼ to select a mode and press [MENU/SET] to close the menu.  
Refer to corresponding page for more details on each mode.

## ■ List of Recording modes

Intelligent Auto Mode	P25	Taking pictures easily. [IA] button is available.
Normal Picture Mode	P28	Taking pictures in the desired setting.
SCN Scene Mode	P42	Taking pictures according to the scene.
Motion Pictures Mode	P49	This mode allows you to record motion pictures with audio.

## ■ List of Playback modes

Normal Playback Mode	P32	Playing back the pictures normally.
Slide Show Mode	P61	Playing back the pictures continuously.
★ Favorite Playback Mode	P63	Playing back the pictures set as your favorite. • Pictures do not appear when the [FAVORITE] is set to [OFF].

## About the menu operation

The camera comes with menus that allow you to set the settings for taking pictures and playing them back just as you like.

In particular, the [SETUP] menu contains some important settings relating to the camera's clock and power. Check the settings of this menu before proceeding to use the camera.

### ■ In Recording Mode

[REC] menu	P54 to 60
This menu lets you set the coloring, sensitivity, or number of pixels, etc. of the pictures you are recording.	

### ■ In Playback Mode

[PLAYBACK] menu	P65 to 74
This menu lets you make the protection or print settings, etc. of recorded pictures.	


[SETUP] menu	P21 to 24
<ul style="list-style-type: none"> <li>This menu lets you perform the clock settings, select the operating beep tone settings and set other settings which make it easier for you to operate the camera.</li> <li>Available in recording or Playback Mode.</li> </ul>	

### ■ How to use the menu

1

#### Press [MENU/SET] to display the menu.


- You can switch menu screens by the page from any menu item by rotating the zoom lever.  
(Example: Selecting the Normal Picture Mode [CAM])

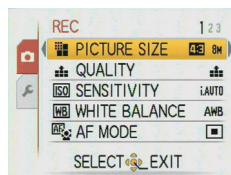


**2 Press ▲/▼ to select a menu item.**

(Example: Selecting [AF MODE])



- You can move to the next page by pressing ▼ at the very bottom.

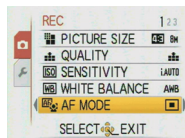**3 Press ►.**

- Depending on the item, the settings may not appear or it may be displayed in a different way.

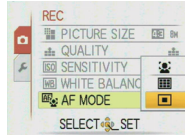**4 Press ▲/▼ to select a setting.**


(Example: Selecting [⊗])

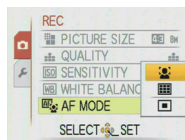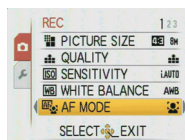**5 Press [MENU/SET] to confirm your setting.****6 Press [MENU/SET] to close the menu.**


## Switching to the [SETUP] menu

When the camera shows the menu screen after step 1 on “How to use the menu” (P18):


- ① Press ◀ to move the menu icon.

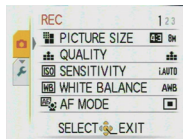

- ② Press ▼ to select the [SETUP] menu icon [⚙].

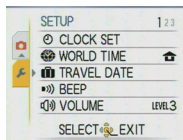

- ③ Press ▶ to move to the menu item list.  
Proceed to step 2 on “How to use the menu”.

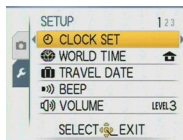

### Note

- Due to the camera's specification, it may not be possible to set some of the functions or some functions may not work in some of the conditions under which the camera is used.

## Using the quick menu

Using the quick menu, some of the menu items can be easily found.

- Some of the menu items cannot be set by the modes.
- When [DISPLAY] is pressed while [STABILIZER] (P59) is selected, [JITTER, SUBJ. MOVE DEMO.] can be displayed.

- 1 Press and hold [Q.MENU] when the camera is in the Recording Mode.

- 2 Press ▲/▼/◀/▶ to select the menu item and its setting and then press [MENU/SET] to close the menu.

- Ⓐ The item to be set and the setting are displayed.




Perform these settings if you need to.

## About the [SETUP] Menu

[CLOCK SET], [ECONOMY] and [AUTO REVIEW] are important items. Check their settings before using them.

- In the Intelligent Auto Mode, only [CLOCK SET], [WORLD TIME], [BEEP] and [LANGUAGE] can be set.


**For details on how to select the [SETUP] menu settings, refer to P20.**

 [CLOCK SET]	Set the date and time.
---	------------------------





- Refer to P16 for details.


 [WORLD TIME]	Set the time in your home area and travel destination.	
	 [DESTINATION]: Travel destination area	 [HOME]: Your home area

- Refer to P52 for details.





 [TRAVEL DATE]	Set the departure date and the return date of the vacation.	
	[TRAVEL SETUP] [OFF]/[SET]	[LOCATION] [OFF]/[SET]

- Refer to P51 for details.

 [BEEP]	Allows you to change the volume of operational sound.	
	 : No operational sound	 : Soft operational sound
	 : Loud operational sound	

 [VOLUME]	Allows you to adjust the volume of the speaker to any of 7 levels.
--	--



- When you connect the camera to a TV, the volume of the TV speakers does not change.

LCD [LCD MODE]	Makes the LCD monitor easier to see.
	<p>[OFF]: Suitable for normal use.</p> <p> [AUTO POWER LCD]: The brightness is adjusted automatically depending on how bright it is around the camera.</p> <p> [POWER LCD]: The LCD monitor becomes brighter and easier to see even when taking pictures outdoors.</p> <p> [HIGH ANGLE]: The LCD monitor is easier to see when taking picture with the camera held high above your head.</p> 

- High Angle Mode is canceled if you turn the camera off. (Same occurs in [POWER SAVE].)
- The LCD monitor automatically returns to normal brightness after 30 seconds when recording in Power LCD mode. Press any button to make the LCD monitor bright again.
- The brightness of the pictures displayed on the LCD monitor is adjusted when Power LCD Mode or High Angle Mode is activated. Therefore, some subjects may look different on the LCD monitor. However, this does not affect the recorded pictures.
- If the screen is difficult to see because of light from the sun etc. shining on it, use your hand or another object to block the light.
- The number of recordable pictures decreases when the Auto Power LCD, Power LCD or High Angle Mode is used.
- [AUTO POWER LCD] or [HIGH ANGLE] cannot be selected in the Playback Mode.


A A [DISPLAY SIZE]	The icons on the screen are displayed in large size for easy viewing.
	[STANDARD]/[LARGE]

- Refer to P35 for details.


ECO [ECONOMY]	Saves the battery consumption.
	<p> [POWER SAVE]: The camera is automatically turned off if the camera has not been used for the time selected on the setting. [OFF]/[2MIN.]/[5MIN.]/[10MIN.]</p> <p> [AUTO LCD OFF]: The LCD monitor is automatically turned off if the camera has not been used for the time selected on the setting. [OFF]/[15SEC.]/[30SEC.]</p>

- Press the shutter button halfway or turn the camera off and on to cancel [POWER SAVE].
- [POWER SAVE] is set to [5MIN.] in the Intelligent Auto Mode [iA].
- [POWER SAVE] is fixed to [2MIN.] when [AUTO LCD OFF] is set to [15SEC.] or [30SEC.].
- The status indicator lights while the LCD monitor is turned off. Press any button to turn on the LCD monitor again.
- [AUTO LCD OFF] does not work while operating menu or playback zoom.


- [POWER SAVE] does not work in the following cases.
  - When using the AC adaptor/When connecting to a PC or a printer/When recording or playing back motion pictures/During slide show/[AUTO DEMO]
- [AUTO LCD OFF] does not work in the following cases.
  - When using the AC adaptor/When connecting to a PC or a printer/While the self-timer is set/While recording motion pictures/While the menu screen is displayed/[AUTO DEMO]

 [AUTO REVIEW]	Set the length of time that the picture is displayed after taking it.
	<p>[OFF] [1SEC.] [2SEC.] [HOLD]: The pictures are displayed until one any of the buttons is pressed. [ZOOM]: The picture is displayed for 1 second and then at 4x zoom for further 1 second.</p>


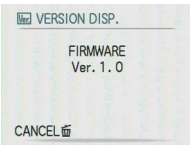
- The Auto Review works regardless of its setting when using [SELF PORTRAIT] and [HIGH SPEED BURST] in Scene Mode and [BURST]. However, [ZOOM] are disabled.
- In Intelligent Auto Mode [iA], the Auto Review function is fixed to [2SEC.].
- This does not work when recording motion pictures.


 [RESET]	The [REC] or [SETUP] menu settings are reset to the initial settings.
---	---

- When you reset the settings on the recording in Recording Mode, lens is also placed back to initial position. Despite the lens operation noise will be occurred, this is not a malfunction.
- When you reset the SETUP settings, following settings are also initialized.
  - Birthday and name settings in [BABY1]/[BABY2] and [PET] mode
  - [TRAVEL DATE] setting
  - [WORLD TIME] setting
- [FAVORITE] is fixed to [OFF], and [ROTATE DISP.] is fixed to [ON].
- The folder number and the clock setting are not changed.

 [TV ASPECT]	Set to match the type of TV. (Playback Mode only)
	<p>[16:9]: When connecting to a 16:9 screen TV. [4:3]: When connecting to a 4:3 screen TV.</p>

- This will work when the AV cable is connected.


 [VERSION DISP.]	It is possible to check which version of firmware is on the camera.	
---	---	---


 <b>[FORMAT]</b>	Initializes the built-in memory or card. Formatting irretrievably deletes all the data so check the data carefully before formatting.
---	---

- Use batteries with sufficient power or the AC adaptor (optional: P103) when formatting. Do not turn the camera off during formatting.
- If a card has been inserted, only the card is formatted. To format the built-in memory, remove the card.
- If the card has been formatted on a PC or other equipment, format it on the camera again.
- It may take longer to format the built-in memory than the card.
- If the built-in memory or the card cannot be formatted, consult your nearest Service Center.

For USA and Puerto Rico assistance, please call: 1-800-211-PANA (7262) or, contact us via the web at: <http://www.panasonic.com/contactinfo>

For Canadian assistance, please call: 1-800-99-LUMIX (1-800-995-8649) or send e-mail to: [lumixconcierge@ca.panasonic.com](mailto:lumixconcierge@ca.panasonic.com)


 <b>[LANGUAGE]</b>	Set the language displayed on the screen. <b>[ENGLISH]/[DEUTSCH]*/[FRANÇAIS]*/            [ITALIANO]*/[ESPAÑOL]/[繁體中文]*/[日本語]*</b> *Available in Canada only
--	--

- When you set to other language by mistake, select [  ] from the menu icons to set the desired language.

DEMO <b>[DEMO MODE]</b>	Allows you to show [JITTER, SUBJ. MOVE DEMO.] or the camera's features. <b>[JITTER, SUBJ. MOVE DEMO.]</b> <b>[AUTO DEMO]:</b> The camera's features are displayed as a slide show. <b>[OFF]/[ON]</b>
-------------------------	---

- Ⓐ Jitter detection demonstration
- Ⓑ Movement detection demonstration

- In Playback Mode, [JITTER, SUBJ. MOVE DEMO.] cannot be displayed.
- Press [DISPLAY] to close [JITTER, SUBJ. MOVE DEMO.].
- Press any button, such as [MENU/SET], to close [AUTO DEMO].
- [JITTER, SUBJ. MOVE DEMO.] is an approximation.
- [AUTO DEMO] has no TV output capability.

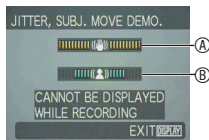




Recording mode: **iA**

## Taking Pictures Using the Automatic Function (Intelligent Auto Mode)

The camera automatically sets the appropriate settings according to the subject and recording condition. This mode is recommended for beginners to take pictures easily.

- The following functions are activated automatically.
  - Scene detection/[STABILIZER]/Face detection/Backlight Compensation
- The status indicator **A** lights when you turn this unit on **B**. (It turns off after about 1 second.)
- **C** Shutter button
- **D** Recording/playback switch

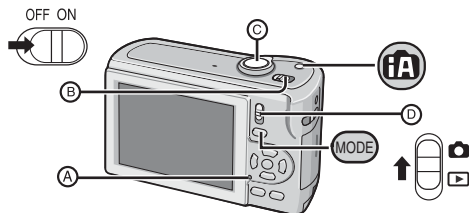

- 1** Slide the recording/playback switch to [ ] and press [ **MODE** ].

- 2** Press **▲/▼** to select [ **INTELLIGENT AUTO** ] and then press [ **MENU/SET** ].


This mode is for Intelligent Auto Mode.

- You can also select this mode using [ **iA** ] button.
- Press this button again to return to the previous mode.




- 3** Hold this unit gently with both hands, keep your arms still at your side and stand with your feet slightly apart.

- **E** Flash
- **F** AF assist lamp

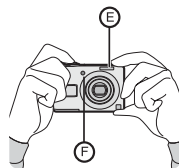

- 4** Press the shutter button halfway to focus.

- Refer to "Focusing" (P29) for details.
- The focus indication **G** lights green when the subject is focused.
- The AF area **H** is displayed around the subject's face by the face detection function. In other cases, it is displayed at the point on the subject which is in focus.
- The focus range is 5 cm (0.17 feet)(Wide)/50 cm (1.64 feet)(Tele) to ∞.
- The maximum close-up distance (the shortest distance at which the subject can be taken) differs depending on the zoom magnification.

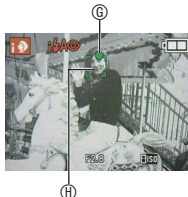

- 5** Press the shutter button fully (push it in further), and take the picture.

- The access indication (P15) lights red when pictures are being recorded on the built-in memory (or the card).









- **When taking pictures using the flash (P36)**
- **When taking pictures using the zoom (P30)**

 **Note**

- Be careful not to move the camera when you press the shutter button.
- Do not cover the photo flash or the AF assist lamp with your finger or other objects.
- Do not touch the lens.


 
## Scene detection

When the camera identifies the optimum scene, the icon of the scene concerned is displayed in blue for 2 seconds, after which its color changes to the usual red.



 →	 [i- PORTRAIT]
	 [i- SCENERY]
	 [i- MACRO]
	 [i- NIGHT PORTRAIT]
	 [i- NIGHT SCENERY]

• Only when [  ] is selected

• Only when [  ] is selected

- [  ] is set if none of the scenes are applicable, and the standard settings are set.
- If a tripod is used, for instance, and the camera has judged that camera shake is minimal when the Scene Mode has been identified as [  ], the shutter speed will be set to a maximum of 8 seconds. Take care not to move the camera while taking pictures.

### ■ Face detection

When [  ] or [  ] is selected, the camera automatically detects a person's face, and it will adjust the focus and exposure (P57).

 **Note**

- Due to conditions such as the ones below, a different scene may be identified for the same subject.
  - Subject conditions: When the face is bright or dark, The size of the subject, The distance to the subject, The contrast of the subject, When the subject is moving, When zoom is used
  - Recording conditions: Sunset, Sunrise, Under low brightness conditions, When the camera is shaken
- To take pictures in an intended scene, it is recommended that you take pictures in the appropriate Recording Mode.



 





### ■ The backlight compensation

Backlight refers to when light comes from the back of a subject.

In this case, the subject will become dark, so this function compensates the backlight by brightening the whole of the picture automatically.

## About the flash

 - When [  ] is selected, [  ], [  ] or [  ] is set depending on the type of subject and brightness.
- When [  ] or [  ] is set, the flash is activated twice.

## Settings in Intelligent auto mode

Only the following functions can be set in this mode.

### [REC] menu





– [PICTURE SIZE]\* (P54)/[BURST] (P58)/[COLOR MODE]\* (P59)

\* The settings which can be set are different from when other recording modes are used.

### [SETUP] menu

– [CLOCK SET]/[WORLD TIME]/[BEEP]/[LANGUAGE]


The settings of the following items are fixed.

Item	Settings
[POWER SAVE] (P22)	[5MIN.]
[AUTO REVIEW] (P23)	[2SEC.]
[FLASH] (P36)	[AUTO]/ 
[QUALITY] (P54)	
[SENSITIVITY] (P55)	[i.AUTO]
[WHITE BALANCE] (P55)	[AWB]
[AF MODE] (P57)	[  ] (Set to [  ] when a face cannot be detected)
[STABILIZER] (P59)	[AUTO]
[AF ASSIST LAMP] (P60)	[ON]
Self-timer (P40)	[10SEC.]/[OFF]
Focus range	The focus range becomes the same as Macro Mode. [5 cm (0.17 feet) (Wide)/50 cm (1.64 feet) (Tele) to ∞] (P39) <ul style="list-style-type: none"> <li>• The maximum close-up distance (the shortest distance at which the subject can be taken) differs depending on the zoom magnification.</li> </ul>

- The following functions cannot be used.
  - [AUTO LCD OFF]/Compensating exposure/[DIGITAL ZOOM]
- The other items on the [SETUP] menu can be set in a mode such as the Normal Picture Mode. What is set will be reflected in the Intelligent Auto Mode.


Recording mode: 

## Taking Pictures with Your Favorite Settings (Normal Picture Mode)

This mode allows you to take pictures freely as more options are available than Intelligent Auto Mode [] (P25).

- 1** Slide the recording/playback switch to [] and press [MODE].

Ⓐ Recording/playback switch

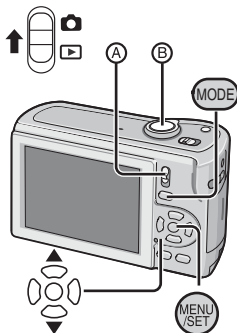

- 2** Press / to select [NORMAL PICTURE] and press [MENU/SET].

• To change the setting while taking pictures, refer to “Using the [REC] Menu” (P54).

- 3** Aim the AF area to the point you want to focus on.

- 4** Press the shutter button  halfway to focus.

- The focus indication (green) lights when the subject is focused.
- The focus range is 50 cm (1.64 feet) to  $\infty$ .
- If pictures are to be taken at an even closer range, refer to “Taking Close-up Pictures” (P39).



- 5** Press the shutter button fully (push it in further), and take the picture.


- The access indication (P15) lights red when a picture is being recorded on the built-in memory (or the card).



- To adjust the exposure and take pictures at times when the image appears too dark (P41)
- To adjust the colors and take pictures at times when the image appears too red (P55)

## Focusing

Aim the AF area at the subject, and then press the shutter button halfway.

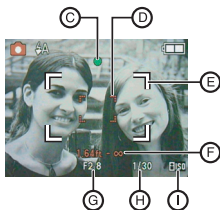

Focus	When the subject is focused	When the subject is not focused
Focus indication	On	Blinks
Focus indication	On	Blinks
AF area	White→Green	White→Red
Sound	Beeps 2 times	Beeps 4 times


- Ⓒ Focus indication
- Ⓓ AF area (normal)
- Ⓔ AF area (when using the digital zoom or when it is dark)
- Ⓕ Focus range (when using the zoom)
- Ⓖ Aperture value\*
- Ⓗ Shutter speed\*
- Ⓙ ISO sensitivity

\* If correct exposure cannot be achieved, it will be displayed in red. (However, it will not be displayed in red when the flash is used.)

### When the subject is not in focus (such as when it is not in the center of the picture you want to take)

- 1 Aim the AF area at the subject, and then **press the shutter button halfway** to fix the focus and exposure.
  - 2 **Press and hold the shutter button halfway** while moving the camera as you compose the picture.
- You can repeatedly retry the actions in step 1 before pressing the shutter button fully.

**We recommend that you use the Face Detection function when taking pictures of people. (P57)**

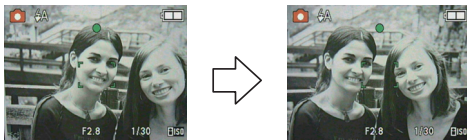

### ■ Subjects and recording conditions which are difficult to focus

- Fast-moving subjects, extremely bright subjects or subjects without contrast
- When recording subjects through windows or near shiny objects
- When it is dark or when jitter occurs
- When the camera is too close to the subject or when taking a picture of both distant and near subjects (when the recordable range display has appeared in red).

### Preventing jitter (camera shake)

When the jitter alert [ (Ⓜ) ] appears, use [STABILIZER] (P59), a tripod or the self-timer (P40).

- Shutter speed will be slower particularly in the following cases. Keep the camera still from the moment the shutter button is pressed until the picture appears on the screen. We recommend using a tripod.
  - Slow sync./Red-eye reduction
  - In [NIGHT PORTRAIT], [NIGHT SCENERY], [PARTY], [CANDLE LIGHT], [STARRY SKY] or [FIREWORKS] in Scene Mode

### Direction detection function

Pictures recorded with the camera held vertically are played back vertically (rotated). This function works only when [ROTATE DISP.] (P70) is set to [ON].

- Pictures may not be displayed vertically if they were taken with the camera aimed up or down.
- Motion pictures taken with the camera held vertically are not displayed vertically.

Recording mode:   SCN 

## Taking Pictures with the Zoom

### Using the optical zoom/ the extended optical zoom (EZ)/ the digital zoom

You can make people and subjects appear closer with the optical zoom, and landscapes can be recorded in wide angle. To make subjects appear even closer (maximum of 6.4 x), set the [PICTURE SIZE] to 5M or less.

Even higher levels of magnification are possible when [DIGITAL ZOOM] is set to [ON] in [REC] menu.

**To make subjects appear closer use (Tele)**

**Rotate the zoom lever towards Tele.**






**To make subjects appear further away use (Wide)**

**Rotate the zoom lever towards Wide.**



## ■ Types of zooms

Feature	Optical zoom	Extended optical zoom (EZ)	Digital zoom
Maximum magnification	4x	6.4x*	25.5x [including extended optical zoom 6.4x]
Picture quality	No deterioration	No deterioration	The higher the magnification level, the greater the deterioration.
Conditions	None	[PICTURE SIZE] with [EZ] (P54) is selected.	[DIGITAL ZOOM] (P58) on the [REC] menu is set to [ON].
Screen display		 Ⓐ [EZ] is displayed.	 Ⓑ The digital zoom range is displayed.*

• When using the zoom function, an estimate of the focus range will appear in conjunction with the zoom display bar. (Example : 0.5 m (1.64 feet)- ∞)

\* The magnification level differs depending on [PICTURE SIZE] setting.

## ■ How the extended optical zoom works

When you set the picture size to [3M] (3 million pixels), the 8M (8.1 million pixels) CCD area is cropped to the center 3M (3 million pixels) area, allowing a picture with a higher zoom effect.


### Note


- The Digital zoom does not operate in Intelligent Auto Mode [iA]
- The indicated zoom magnification is an approximation.
- “EZ” is an abbreviation of “Extended Optical Zoom”.
- The optical zoom is set to Wide (1 x) when the camera is turned on.
- If you use the zoom function after focusing on the subject, focus on the subject again.
- The lens barrel extends or retracts according to the zoom position. Take care not to interrupt the motion of the lens barrel while the zoom lever is rotated.
- When using the Digital zoom, [STABILIZER] may not be effective.
- When using the Digital zoom, we recommend using a tripod and the self-timer (P40) for taking pictures.
- The following cases cannot be used in Extended Optical Zoom.
  - [HIGH SENS.] and [HIGH-SPEED BURST]/Motion picture mode
- The following cases cannot be used in Digital zoom.
  - [SPORTS], [BABY1]/[BABY2], [PET], [HIGH SENS.] and [HIGH-SPEED BURST] in [SCENE MODE]
  - When ISO sensitivity is set to [i.AUTO]

Playback mode: 

## Playing Back Pictures (Normal Playback Mode)

### 1 Slide the recording/playback switch to .

- Normal playback is set automatically in the following cases.
  - When the mode was switched to the Playback Mode.
  - When the camera was turned on while the recording/playback switch was at .

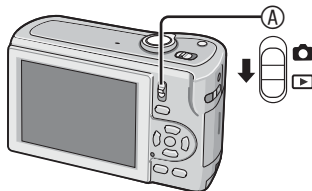







### 2 Press to select the picture.

- ◀: Play back the previous picture
- ▶: Play back the next picture
- Speed of picture forwarding/rewinding changes depending on the playback status.



#### ■ Fast forwarding/Fast rewinding

 
Press and hold   during playback.

- The file number  and the picture number  only change one by one.
  - Release   when the number of the desired picture appears to play back the picture.
- If you keep pressing  , the number of pictures forwarded/rewound increases.

## Displaying multiple screens (Multi Playback)




### Rotate the zoom lever towards (W).

1 screen → 12 screens → 30 screens → Calendar screen display (P65)

- ① Number of the selected picture and the total number of recorded pictures
- Rotate the zoom lever towards  (T) to return to the previous screen.
- Pictures are not rotated for display.



#### ■ To return to normal playback

- 1 Press    to select a picture.
  - An icon will be displayed depending on the recorded picture and the settings.
- 2 Press [MENU/SET].
  - The picture that was selected will appear.



## Using the playback zoom

Rotate the zoom lever towards [ Q ] (T) to enlarge the picture.

1×→2×→4×→8×→16×

- When you rotate the zoom lever towards [ W ] (W) after enlarging the picture, the magnification becomes lower.
- When you change the magnification, the zoom position indication Ⓐ appears for about 1 second, and the position of the enlarged section can be moved by using ▲/▼/◀/▶.
- The more a picture is enlarged, the more its quality deteriorates.
- When you move the position to be displayed, the zoom position indication appears for about 1 second.



### Note

- This camera complies with the DCF standard “Design rule for Camera File system” established by JEITA “Japan Electronics and Information Technology Industries Association” and with Exif “Exchangeable Image File Format”. Files which do not comply with the DCF standard cannot be played back.
- You cannot play back the audio of still pictures with audio recorded on other equipment.
- The lens barrel retracts about 15 seconds after switching from the Recording Mode to the Playback Mode.
- The Playback zoom may not operate if pictures have been recorded with other equipment.
- The Playback zoom cannot be used when playing back motion pictures.

Playback mode: [▶] ★

## Deleting Pictures


Once deleted, pictures cannot be recovered.

- Pictures on the built-in memory or the card, which is being played back, will be deleted.


### To delete a single picture

- 1 Select the picture to be deleted, and then press [  ].

- 2 Press ◀ to select [YES] and then press [MENU/SET].

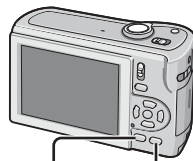


 
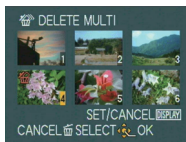
DISPLAY

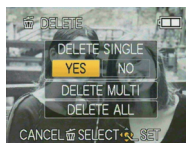

## To delete multiple pictures (up to 50) or all the pictures

- 1 Press [  ].
- 2 Press ▲/▼ to select [DELETE MULTI] or [DELETE ALL] and then press [MENU/SET].
  - [DELETE ALL] → step 5.

- 3 Press ▲/▼/◀▶ to select the picture and then press [DISPLAY] to set. (Repeat this step.)
  - The selected pictures appear with [  ]. When [DISPLAY] is pressed again, the setting is canceled.




- 4 Press [MENU/SET].

- 5 Press ▲ to select [YES] and then press [MENU/SET] to set.

### ■ When [DELETE ALL] has been selected with the [FAVORITE] (P70) setting

The selection screen is displayed again. Select [DELETE ALL] or [ALL DELETE EXCEPT ★], press ▲ to select [YES] and delete the pictures. ([ALL DELETE EXCEPT ★] cannot be selected if no pictures have been set as [FAVORITE].)

### Note


- Do not turn the camera off while deleting (while [  ] is displayed). Use batteries with a sufficient power or the AC adaptor (optional: P103).
- If you press [MENU/SET] while deleting pictures using [DELETE MULTI], [DELETE ALL] or [ALL DELETE EXCEPT ★], the deleting will stop halfway.
- Depending on the number of pictures to be deleted, it may take some time to delete them.
- If pictures do not conform to the DCF standard or are protected (P73), they will not be deleted even if [DELETE ALL] or [ALL DELETE EXCEPT ★] is selected.

## About the LCD Monitor

Press **[DISPLAY]** to switch the screen to be used.

Ⓐ LCD monitor

- When the menu screen appears, the **[DISPLAY]** button is not activated.
- During playback zoom, while playing back motion pictures and during a slide show, you can only select "Normal display" or "No display"

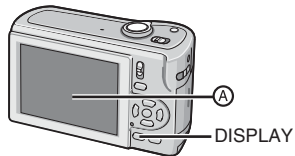


### In Recording Mode

Ⓑ Normal display

Ⓒ No display

Ⓓ Guideline display\*

\* When recording, you can refer to the guideline for composing.

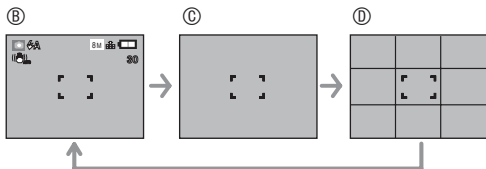


### In Playback Mode

Ⓔ Normal display

Ⓕ Display with recording information

Ⓖ No display

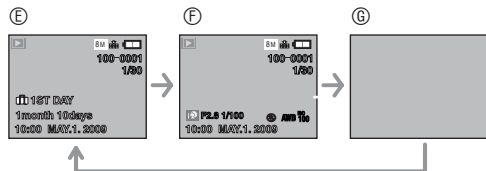

### Note

- In **[NIGHT PORTRAIT]**, **[NIGHT SCENERY]**, **[STARRY SKY]** and **[FIREWORKS]** in Scene Mode, the guideline is gray.

## Display in large size


Select **[LARGE]** in the **[DISPLAY SIZE]** in **[SETUP]** menu. (P22)

- In the Recording Mode, Recording Mode icon is displayed in large size.
- In the menu screen, the items you selected will be displayed in large size.

Recording Screen




Menu Screen

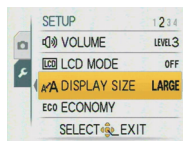

Recording mode: **FA** **CA** **SCN**

## Taking Pictures Using the Built-in Flash

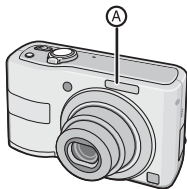

### A Photo flash

- Do not cover the photo flash with your fingers or any other items.

## Switching to the appropriate flash setting

Set the flash to match the recording.

**1** Press **▶** [**⚡**].

**2** Press **▲/▼** to switch the flash setting.

- You can also press **▶** [**⚡**] to switch the setting.
- For the selectable flash settings, refer to “Available flash settings by Recording Mode”. (P37)

**3** Press **[MENU/SET]**.

- You can also press the shutter button halfway to finish.
- When 5 seconds pass without any operation, the setting selected at the time is automatically adopted.



Item	Description of settings
<b>⚡A : AUTO</b>	The flash is automatically activated according to the recording condition.
<b>⚡AⓄ : AUTO/Red-eye reduction<sup>*1</sup></b>	The flash is automatically activated according to the recording condition. It is activated once before the actual recording to reduce the red-eye phenomenon (eyes of the subject appearing red in the picture) and then activated again for the actual recording. <ul style="list-style-type: none"> <li>Use this when you take pictures of people in low lighting conditions.</li> </ul>
<b>⚡ : Forced Flash ON</b> <b>⚡Ⓞ : Forced ON/Red-eye reduction<sup>*1</sup></b>	The flash is activated every time regardless of the recording conditions. <ul style="list-style-type: none"> <li><b>Use this when your subject is back-lit or under fluorescent light.</b></li> <li><b>The flash setting is set to [⚡Ⓞ] only when you set [PARTY] or [CANDLE LIGHT] in Scene Mode. (P45)</b></li> </ul>
<b>⚡SⓄ : Slow sync./Red-eye reduction<sup>*1</sup></b>	When you take a picture with a dark background landscape, this feature makes the shutter speed slow when the flash is activated, so that the dark background landscape will become bright. Simultaneously it reduces the red-eye phenomenon. <ul style="list-style-type: none"> <li><b>Use this when you take pictures of people in front of a dark background.</b></li> <li><b>The flash setting is set to [⚡SⓄ] only when you set [NIGHT PORTRAIT], [PARTY], or [CANDLE LIGHT] in Scene Mode.</b></li> </ul>
<b>Ⓞ : Forced Flash OFF</b>	The flash is not activated in any recording conditions. <ul style="list-style-type: none"> <li><b>Use this when you take pictures in places where the use of the flash is not permitted.</b></li> </ul>

<sup>\*1</sup> The flash is activated twice. The subject should not move until the second flash is activated. Interval until the second flash depends on the brightness of the subject.

## ■ Available flash settings by Recording Mode

The available flash settings depend on the Recording Mode.

(○ : Available, — : Not available, ⊙ : Scene Mode initial setting)

	⚡A	⚡A⊙	⚡	⚡S⊙	⚡⊙	⊙
	○*2	—	—	—	—	○
	○	○	○	—	—	○
	○	⊙	○	—	—	○
	○	⊙	○	—	—	○
	○	⊙	○	—	—	○
	—	—	—	—	—	⊙
	⊙	—	○	—	—	○
	—	—	—	⊙	—	○
	—	—	—	—	—	⊙
	○	—	○	—	—	⊙
	—	—	—	⊙	○	○
	—	—	—	○	○	⊙

	⚡A	⚡A⊙	⚡	⚡S⊙	⚡⊙	⊙
	○	⊙	○	—	—	○
	○	⊙	○	—	—	○
	○	—	○	—	—	⊙
	—	—	—	—	—	⊙
	○	—	○	—	—	⊙
	—	—	—	—	—	⊙
	—	—	—	—	—	⊙
	—	—	—	—	—	⊙
	—	—	—	—	—	⊙
	—	—	—	—	—	○
	⊙	—	○	—	—	○
	—	—	—	—	—	⊙
	—	—	—	—	—	○

\*2 When [⚡A] is selected, [i⚡A], [i⚡A⊙] or [i⚡S⊙] is set depending on the type of subject and brightness.

- The flash setting may change when you change the Recording Mode. Change the flash setting again if necessary.
- The flash settings are memorized even if you switch the camera off. However, the Scene Mode flash settings return to the initial settings when you change the Scene Mode.

## ■ The available flash range to take pictures

- The available flash range is an approximation.

ISO sensitivity	Available flash range	
	Wide	Tele
i.AUTO	30 cm (0.99 feet) to 5.9 m (19.36 feet)	50 cm (1.64 feet) to 2.8 m (9.18 feet)
ISO80	30 cm (0.99 feet) to 1.6 m (5.25 feet)	50 cm (1.64 feet) to 0.8 m (2.62 feet)
ISO100	30 cm (0.99 feet) to 1.8 m (5.91 feet)	50 cm (1.64 feet) to 0.8 m (2.62 feet)
ISO200	40 cm (1.32 feet) to 2.6 m (8.53 feet)	50 cm (1.64 feet) to 1.2 m (3.93 feet)
ISO400	60 cm (1.97 feet) to 3.7 m (12.14 feet)	50 cm (1.64 feet) to 1.7 m (5.57 feet)
ISO800	80 cm (2.63 feet) to 5.3 m (17.39 feet)	60 cm (1.96 feet) to 2.5 m (8.20 feet)
ISO1600	115 cm (3.78 feet) to 7.5 m (24.61 feet)	90 cm (2.95 feet) to 3.5 m (11.48 feet)

- The available focus range differs depending on the Recording Mode.
- When you use the flash when you have set ISO sensitivity to [i.AUTO], ISO sensitivity automatically becomes a maximum of [ISO1000].
- The edges of the picture may appear dark if you shoot a very close subject with the flash while the zoom lever is close to the W side. Zoom in slightly if this occurs.
- In [HIGH SENS.] in Scene Mode, the ISO sensitivity is automatically adjusted between [ISO1600] and [ISO6400] and the available flash range also differs.
  - Wide: Approx. 1.15 m (3.78 feet) to approx. 15 m (49.22 feet)
  - Tele: Approx. 0.9 m (2.95 feet) to approx. 7.1 m (23.29 feet)

## ■ Shutter speed for each flash setting

Flash setting	Shutter speed (Sec.)
☑A : AUTO	1/30 to 1/2000
☑A☉ : AUTO/ Red-eye reduction	1/30 to 1/2000
☑ : Forced ON	1/30 to 1/2000
☑☉ : Forced ON/Red-eye reduction	1/30 to 1/2000
☑S☉ : Slow sync./Red-eye reduction	1 or 1/8 to 1/2000 <sup>*1</sup>
☑ : Forced OFF	1 or 1/8 to 1/2000 <sup>*2</sup> 1 or 1/4 to 1/2000 <sup>*3</sup>

\*1 The shutter speed changes depending on the [STABILIZER] setting.

\*2 When [i.AUTO] is set

\*3 [SPORTS], [BABY1]/[BABY2], [PET] in Scene Mode

- The shutter speed reaches the maximum of 1 second for \*1, \*2 and \*3 when:
  - Optical image stabilizer is [OFF]
  - When the optical image stabilizer is set, the camera determines that there is minimum possibility of blurring.
- In Intelligent Auto Mode, shutter speed changes depending on the identified scene.

### Note

- Do not bring the flash too close to objects or close the flash while it is activated. The objects may be discolored by its heat or lighting.
- While the flash is charged, the LCD monitor turns off and you cannot take pictures. The status indicator lights up.
  - If the remaining battery power is low, the screen may be turned off for a longer period of time.
- When you take a picture beyond the available flash range, the exposure may not be adjusted properly and the picture may become bright or dark.
- The white balance may not be properly adjusted if the photo flash is insufficient.
- When the shutter speed is fast, the flash effect may not be sufficient.
- It may take time to charge the flash if you repeat taking a picture. Take a picture after the access indication disappears.
- The red-eye reduction effect differs between people. Also, if the subject was far away from the camera or was not looking at the first flash, the effect may not be evident.



Recording mode:  

## Taking Close-up Pictures

 

This mode allows you to take close-up pictures of the subject, e.g. when taking pictures of flowers.

You can take pictures approaching the subject at a distance up to 5 cm (0.17 feet) from the lens by rotating the zoom lever upmost to Wide (1 ×).


### 1 Press [].

- Macro shooting starts and [] is displayed. To cancel the macro shooting, press  again.


### 2 Take the pictures.

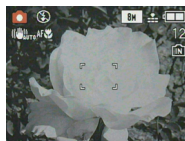

### ■ Focus range

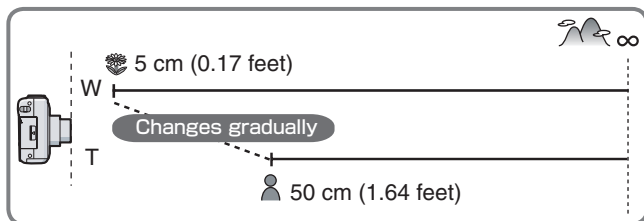

### Note

- Use a tripod and the self-timer for best results.
- We recommend setting the flash to Forced Flash OFF [] when you take pictures at close range.
- When the camera lens is at a distance beyond the available range from the subject, the subject may not be focused even if the focus indication lights.
- When the subject is close to the camera, the effective focus range is significantly narrowed. Therefore, you will have difficulty in focusing on the subject if the distance between the camera and the subject is changed after focusing on the subject.
- Macro shooting gives priority to a subject close to the camera. Therefore, if the distance between the camera and the subject is more than 50 cm (1.64 feet) it takes longer to focus on it in macro shooting than normal shooting.
- When you take pictures at close range, the resolution of the periphery of the picture may decrease slightly. This is not a malfunction.

Recording mode:   SCN


## Taking Pictures with the Self-timer


 
**1** Press  [].



**2** Press / to select the time.  
• You can also press  [] to select.

**3** Press [MENU/SET].  
• You can also press the shutter button halfway to finish.  
• When 5 seconds pass without any operation, the setting selected at the time is automatically adopted.

**4** Press the shutter button halfway to focus and then press it fully to take a picture.  
• The self-timer indicator  blinks and the shutter goes off after 10 seconds (or 2 seconds).  
• If you press [MENU/SET] when the self-timer is being set, the self-timer setting is canceled.

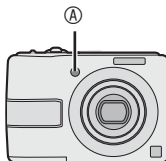

### Note

- When using a tripod or in other cases, setting the self-timer to 2 seconds is a convenient way to stabilize the jitter caused by pressing the shutter button.
- When you press the button fully with one stroke, the subject is automatically focused just before the recording. In dark places, the self-timer indicator blinks and then it may turn on brightly to work as the AF assist lamp for focusing on the subject.
- We recommend using a tripod when setting the self-timer.
- The number of pictures which can be taken in [BURST] is fixed to 3.
- Self-timer cannot be set to 2 seconds in Intelligent Auto Mode.
- Self-timer cannot be set to 10 seconds in [SELF PORTRAIT] in Scene Mode.
- Self-timer cannot be used in [HI-SPEED BURST] in Scene Mode.



Recording mode:  SCN 

## Compensating the Exposure

Use this function when you cannot achieve appropriate exposure due to the difference of brightness between the subject and the background.

**Under exposed**



**Properly exposed**



**Over exposed**



Compensate the exposure toward positive.

Compensate the exposure toward negative.

- 1 Press **▲** [] to display [EXPOSURE] and press **◀▶** to compensate the exposure.

- Select [0 EV] to return to the original exposure.



- 2 Press [MENU/SET] to finish.

- You can also press the shutter button halfway to finish.

### Note

- EV is an abbreviation of “Exposure Value”, and it is the amount of light given to the CCD according to the aperture value and the shutter speed.
- The exposure compensation value appears on the lower left of the screen.
- The exposure value is memorized even if the camera is turned off.
- The compensation range of the exposure will be limited depending on the brightness of the subject.
- You cannot compensate the exposure in [STARRY SKY] in Scene Mode.

Recording mode: SCN


## Taking Pictures that Match the Scene being Recorded (Scene Mode)

When you select a Scene Mode to match the subject and recording situation, the camera sets the optimal exposure and hue to obtain the desired picture.

**1** Slide the recording/playback switch to [  ].


**2** Press [MODE] to display the mode selection screen.

**3** Press / to select [SCENE MODE] and then press [MENU/SET].

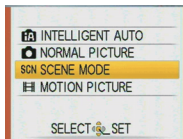

**4** Press /// to select the Scene Mode.

- You can switch menu screens by the page from any menu item by rotating the zoom lever.

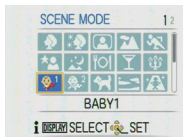


**5** Press [MENU/SET] to set.


- The menu screen is switched to the recording screen in the selected Scene Mode.
- Depending on the scene mode, the setting screen appears.

### ■ Scene mode help [ ] INFORMATION

- To see explanations about the scene modes, press [DISPLAY] while a Scene Mode is selected in step 4. Press again to return to the Scene Mode menu.

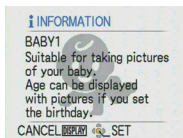

### Note

- To change the Scene Mode, press [MENU/SET] and , and then perform steps 4 and 5 above.
- Refer to P38 for the shutter speed.
- The flash settings return to the initial settings when you change the Scene Mode.
- The color of the picture may seem strange if you use a scene mode that is unsuitable for the shot.
- The following cannot be set in Scene Mode.
  - [SENSITIVITY]/[COLOR MODE]

 [PORTRAIT]


The person stands out with a healthier complexion.

### ■ Technique for Portrait mode

To make this mode more effective:

- 1 Rotate the zoom lever to Tele as far as possible.
- 2 Move close to the subject.

### Note

- Suitable for outdoors in the daytime.
- The ISO sensitivity is fixed to [ISO80].
- The initial setting for [AF MODE] is [].

 [SOFT SKIN]


The camera detects the face or skin area to achieve a smoother appearance than portrait mode. Use when taking portraits from the chest up.

### ■ Technique for Soft skin mode

To make this mode more effective:

- 1 Rotate the zoom lever to Tele as far as possible.
- 2 Move close to the subject.

### Note

- Suitable for daylight shooting.
- Other flesh-colored elements are also softened.
- The effect may not be as obvious if there is not enough light.
- The ISO sensitivity is fixed to [ISO80].
- The initial setting for [AF MODE] is [].

 [SELF PORTRAIT]


For taking pictures of yourself easily.

### ■ Technique for Self portrait mode

- Press the shutter button halfway to focus. The self-timer indicator lights up when you are brought into focus. Making sure you hold the camera still, press the shutter button fully to take the picture.
- The subject is not focused when the self-timer indicator is blinking. Make sure to press the shutter button halfway again to focus.
- The recorded picture automatically appears on the LCD monitor for reviewing.
- If the picture is blurry due to the slow shutter speed, we recommend using the 2 second self-timer.



### Note

- The focus range is about 30 cm (0.99 feet) to 1.2 m (3.94 feet) (Wide).
- When you select [SELF PORTRAIT], the zoom magnification is automatically moved to Wide.
- The self-timer can only be set to [OFF] or [2SEC.]. If it is set to 2 seconds, this setting will remain until the camera is turned off, the Scene Mode is changed or the camera is switched to the Playback Mode.
- Optical image stabilizer is fixed to [MODE2]. (P59)
- The initial setting for [AF MODE] is [].

 [SCENERY]

The camera focuses on distant subjects to allow you to take pictures of wide landscapes.

 **Note**

- Flash is fixed to Forced flash OFF [☹].
- The focus range is 5 m (16.41 feet) to ∞.

 [SPORTS]

Allows you to shoot fast moving subjects (e.g. outdoor sports).

 **Note**

- Suitable for daylight shooting, 5 m (16.41 feet) or more away from the subject.
- [i.AUTO] is activated, and maximum ISO sensitivity level becomes [ISO1600].

 [NIGHT PORTRAIT]

Shoot the subject with natural brightness using the flash and slow shutter speed.

**■ Technique for Night portrait mode**

- **Use the flash. (You can set to [☹☹].)**
- Due to the slow shutter speed, use a tripod and the self-timer for best results.
- Keep the subject still for about 1 second after taking a picture.
- Rotate the zoom lever to Wide (1×), about 1.5 m (4.93 feet) from the subject.

 **Note**

- The focus range is 1.2 m (3.94 feet) to 5 m (16.41 feet).
- The shutter may close (max. about 8 sec.) after shooting due to signal processing. This is not a malfunction.
- When shooting in dark places, noise may become visible.
- The initial setting for [AF MODE] is [∞].

 [NIGHT SCENERY]

The nightscape can be recorded vividly.

**■ Technique for Night scenery mode**

- When the camera is set to [STABILIZER] and there is very little jitter, or if [STABILIZER] is set to [OFF], shutter speed may slow down up to 8 seconds. We recommend using the tripod and the self-timer for best results.

 **Note**

- Flash is fixed to Forced flash OFF [☹].
- The focus range is 5 m (16.41 feet) to ∞.
- The shutter may close (max. about 8 seconds) after shooting due to signal processing. This is not a malfunction.
- When shooting in dark places, noise may become visible.

 [FOOD]

Use to take pictures of food in restaurants, irrespective of the lighting, so that the natural colors of the subject come out.





 **Note**

- The focus range is 5 cm (0.17 feet) (Wide)/50 cm (1.64 feet) (Tele) to ∞.

## [PARTY]

Use to take pictures at wedding receptions, indoor parties, etc. Both the people and the background can be shot with natural brightness using the flash and slow shutter speed.

### ■ Technique for Party mode

- Use the flash. (You can set to [  S  ] or [   ].)
- Use a tripod and the self-timer for best results.
- Rotate the zoom lever to Wide (1 ×), about 1.5 m (4.93 feet) from the subject.

### Note

- The initial setting for [AF MODE] is [  ].


## [CANDLE LIGHT]

Use to get the most from the mood created by candlelight.

### ■ Technique for Candle light mode

- Don't use the flash.
- Use a tripod and the self-timer for best results.

### Note




- The focus range is 5 cm (0.17 feet) (Wide)/50 cm (1.64 feet) (Tele) to ∞.
- The initial setting for [AF MODE] is [  ].

## [BABY1] / [BABY2]

This takes pictures of a baby with a healthy complexion. When you use the flash, the light from it is weaker than usual.


It is possible to set different birthdays and names for [BABY1] and [BABY2]. You can select to have these appear at the time of playback, or have them stamped on the recorded image using [TEXT STAMP] (P67).

### ■ Birthday ([AGE])/name setting

- 1 Press  to select [AGE] or [NAME] and then press .
- 2 Press  to select [SET] and then press [MENU/SET].
- 3 Enter the birthday or name.

Birthday:

: Select the items (year/month/day).

: Setting.

[MENU/SET]: Exit.


Name: For details on how to enter characters, read the [TITLE EDIT] section on P66.

- When the birthday or name is set, [AGE] or [NAME] is automatically set to [ON].
- If [ON] is selected when the birthday or name has not been registered, the setting screen appears automatically.


- 4 Press [MENU/SET] to finish.

### ■ To cancel [AGE] and [NAME]

Select the [OFF] setting in step 2 of the “Birthday ([AGE])/Name setting” procedure.

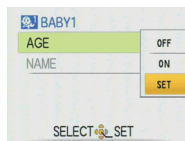

### Note

- The age and name can be printed out using the “PHOTOfunSTUDIO” bundled software on the CD-ROM (supplied).
- If [AGE] or [NAME] is set to [OFF] even when the birthday or name has been set, the age or name will not be displayed. Before taking pictures, set [AGE] or [NAME] to [ON].
- The focus range is 5 cm (0.17 feet) (Wide)/50 cm (1.64 feet) (Tele) to ∞.
- [i.AUTO] is activated, and maximum ISO sensitivity level becomes [ISO1600].
- If you turn on the camera in [BABY1]/[BABY2], the age and name will be displayed at the lower left of the screen for about 5 seconds, along with the current date and time.
- If the age is not properly displayed, check the clock and birthday settings.
- The birthday setting can be reset with [RESET].
- The initial setting for [AF MODE] is [  ].

 [PET]

Suitable for taking pictures of your pet. This allows you to set the birthday (age) and name of your pet. For details on how to set age and birthday, see [BABY1]/[BABY2]. (P45)

 **Note**

- [i.AUTO] is activated and maximum ISO sensitivity level becomes [ISO1600].
- The initial setting for the AF assist lamp is [OFF].
- The initial setting for [AF MODE] is [□].
- The focus range is 5 cm (0.17 feet) (Wide)/50 cm (1.64 feet) (Tele) to ∞.
- Refer to [BABY1]/[BABY2] for more details.

 [SUNSET]

Use to take pictures of the sunset. Sunset color can be reproduced vividly.

 **Note**

- Flash is fixed to Forced flash OFF [☺].
- The ISO sensitivity is fixed to [ISO80].

 [HIGH SENS.]

This mode minimizes the jitter of the subjects, and enables you to take pictures of these subjects in dimly lit rooms. (Select this for high-sensitivity processing. The sensitivity automatically switches to between [ISO1600] and [ISO6400].)

**Picture size**

Press ▲/▼ to select the picture size and then press [MENU/SET] to set.

- 3M (4:3), 2.5M (3:2) or 2M (16:9) is selected as the picture size.

 **Note**


- [QUALITY] is automatically fixed to [L].
- You can take pictures suitable for 4"x6"/10x15 cm printing.
- The focus range becomes the same as Macro Mode. [5 cm (0.17 feet)(Wide)/50 cm (1.64 feet)(Tele) to ∞]


 [HIGH-SPEED BURST]

This is a convenient mode for shooting rapid movement or a decisive moment.

**Picture size**

- 1 Press ▲/▼ to select the picture size and then press [MENU/SET] to set.
  - 3M (4:3), 2.5M (3:2) or 2M (16:9) is selected as the picture size.
- 2 Take pictures.
  - Still pictures are taken continuously while the shutter button is pressed fully.

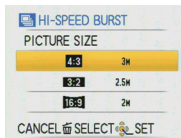

<b>Maximum Burst speed</b>	approx. 4.5 pictures/second
<b>Number of recordable pictures</b>	approx. 10 (built-in memory)/approx. 10 to 100* (card) * The maximum is 100.

- The burst speed changes according to the recording conditions.
- The number of burst recording pictures are limited by the picture-taking conditions and the type and/or status of the card used.
- The number of burst recording pictures increase immediately after formatting.

### Note

- Flash is fixed to Forced flash OFF [☹].
- [QUALITY] is automatically fixed to [L-III].
- You can take pictures suitable for 4"x6"/10x15 cm printing.
- The shutter speed becomes 1/8th of a second to 1/2000th of a second.
- The focus range becomes the same as in Macro Mode. [5 cm (0.17 feet)(Wide)/50 cm (1.64 feet)(Tele) to ∞]
- The focus, zoom, exposure, white balance, shutter speed and ISO sensitivity are fixed to the settings for the first picture.
- The ISO sensitivity automatically switches to between [ISO500] and [ISO800]. However, the ISO sensitivity is increased to make the shutter speed become high-speed.
- The batteries will run out faster in High Speed Burst Mode than in Normal Mode.

## [STARRY SKY]


Take clear pictures of the night sky or other dark subjects.

### Setting the shutter speed

Choose a shutter speed; 15, 30, or 60 seconds.


#### 1 Press ▲/▼ to select the shutter speed and then press [MENU/SET].

- The shutter speed can also be changed in quick menu (P20).

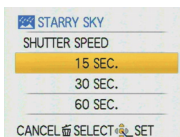

#### 2 Take a picture.

- The countdown screen appears. Do not move the camera. [PLEASE WAIT...] appears for the number of seconds you chose for shutter speed after the countdown. This is to process the signals.
- To cancel the shot, press [MENU/SET] while the countdown screen is displayed.

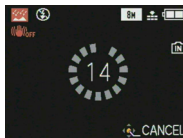

### Technique for Starry sky mode

- The shutter opens for 15, 30 or 60 seconds, so use a tripod and the self-timer for best results.

### Note

- Flash is fixed to Forced flash OFF [☹].
- The ISO sensitivity is fixed to [ISO80].
- The Optical Image Stabilizer function is fixed to [OFF].

## [FIREWORKS]

Take beautiful pictures of fireworks exploding in the night sky.

### Technique for Fireworks mode

- Shutter speed becomes slower so use a tripod.


### Note

- This is most effective on subjects 10 m (32.81 feet) or more from the camera.
- The shutter speed becomes:
  - When [OFF] is set on the Optical Image Stabilizer function: 2 seconds
  - When Optical Image Stabilizer [AUTO], [MODE1] or [MODE2] is on: 1/4th or 2 seconds (The shutter speed becomes 2 seconds when the camera determines that there is little jitter such as when using a tripod etc.). You can change shutter speed when exposure is compensated.
- AF area is not displayed.
- The ISO sensitivity is fixed to [ISO80].

 [BEACH]

Prevents underexposure of the subject under strong sunlight to allow you to take pictures on a beach.

 **Note**

- The initial setting for [AF MODE] is [].
- Do not touch the camera with wet hands.
- Sand or seawater may cause the camera to malfunction. Make sure that sand or seawater does not get into the lens or terminals.
- Problems caused by sand or seawater are not covered by the product warranty.

 [SNOW]

Exposure and white balance are adjusted to make the white of the snow stand out.


 [AERIAL PHOTO]

Allows you to take pictures through an airplane window.

**■ Technique for Aerial photo mode**

Use this technique if it is difficult to focus when taking pictures of clouds etc. Aim the camera at something with high contrast, press the shutter button halfway to fix the focus, then aim the camera at the subject and press the shutter button fully to take the picture.

 **Note**


- Flash is fixed to Forced flash OFF [].
- **Turn the camera off when taking off or landing.**
- **When using the camera, follow all instructions from the cabin crew.**
- The focus range is 5 m (16.41 feet) to  $\infty$ .
- Be careful about the reflection from the window.



Recording mode:

## Motion Picture Mode


- 1** Slide the recording/playback switch to [ ].
- 2** Press [MODE] to display to the mode selection screen.
- 3** Press  $\blacktriangle/\blacktriangledown$  to select [MOTION PICTURE] and then press [MENU/SET].
- 4** Press the shutter button halfway to focus and then press it fully to start recording.
  - Ⓐ Audio recording
  - The available recording time Ⓑ is displayed on the top right and the elapsed recording time Ⓒ is displayed on the bottom right of the screen.
  - After pressing the shutter button fully, release it straight away. If the button is held down, the sound will not be recorded for a few seconds when recording starts.
  - When the subject is focused, the focus indication lights.
  - The focus and zoom are fixed to those set at the beginning of recording (for the first frame).
  - The audio is also recorded through the built-in microphone. (Motion pictures cannot be recorded without audio.)
- 5** Press the shutter button fully to stop recording.
  - If the built-in memory or the card becomes full in the middle of recording, the camera stops recording automatically.

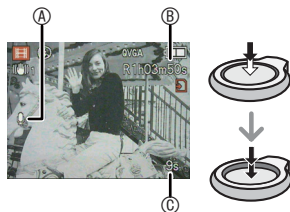

### Changing the settings for the picture quality

When you set the picture quality to [WVGA] or [VGA], we recommend using a high-speed card with “10MB/s” or greater displayed on the package for shooting motion pictures.

- 1** Press [MENU/SET].
- 2** Press  $\blacktriangle/\blacktriangledown$  to select [REC QUALITY] and then press  $\blacktriangleright$ .

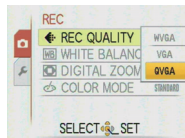



Press **▲/▼** to select the item and then press **[MENU/SET]**.

Item	Picture size	fps	Aspect ratio
<b>WVGA*</b>	848 × 480 pixels	30 fps	16:9
<b>VGA*</b>	640 × 480 pixels	30 fps	4:3
<b>QVGA</b>	320 × 240 pixels	30 fps	

• fps (frame per second); This refers to the number of frames used in 1 second.

\* Cannot be recorded in the built-in memory.



Press **[MENU/SET]** to close the menu.

- You can also press the shutter button halfway to close the menu.



#### Note

- Refer to P99 for information about the available recording time.
- The remaining recordable time shown on the LCD may not reduce regularly.
- Depending on the type of card you are using, the card access indication may appear for a while after shooting motion pictures. This is normal.
- The volume of motion picture is limited to 2 GB per recording session. The maximum available recording time for up to 2 GB only is displayed on the screen.
- When motion pictures recorded with this camera are played back on other equipment, the quality of pictures may be deteriorated or it may not be possible to play them back. Also the recording information may not be displayed correctly.
- This camera has improved sound quality so motion pictures recorded on this camera cannot be played back on a Panasonic Digital Camera (LUMIX models) that was sold in June 2008 or before. (However, motion pictures recorded on previous models can be played back on this camera.)
- In Motion Picture Mode [] the following functions cannot be used.
  - [] / [] in [AF MODE]
  - Direction detection function
  - [AUTO], [MODE2] and [OFF] on the Optical Image Stabilizer function
- This camera cannot take motion pictures if you are using a MultiMediaCard.
- In Motion Picture Mode, the angle of view may become narrower than in Normal Picture Mode.








 
Recording mode:   SCN 







## Useful Functions at Travel Destinations

### Recording which day of the vacation you take the picture


If you set the departure date or the travel destination of the vacation in advance, the number of days that have passed since the departure date (which day of the vacation it is) is recorded when you take the picture. You can display the number of days that have passed when playing back the pictures and stamp it on the recorded pictures with [TEXT STAMP] (P67).

- The number of days that have passed since the departure date can be printed out using the "PHOTOfunSTUDIO" bundled software on the CD-ROM (supplied).
- Select [CLOCK SET] to set the current date and time in advance. (P16)

- Select [TRAVEL DATE] from the [SETUP] menu, and then press . (P21)
- Press  to select [TRAVEL SETUP] and then press .
- Press  to select [SET] and then press [MENU/SET].
- Press  to set the departure date (year/month/day), and then press [MENU/SET].
- Press  to set the return date (year/month/day), and then press [MENU/SET].
  - If you do not want to set the return date, press [MENU/SET] while the date bar is displayed.
- Press  to select [LOCATION] and then press .

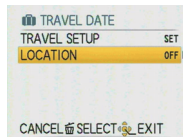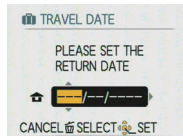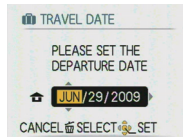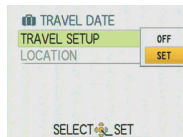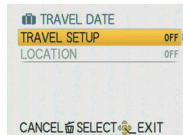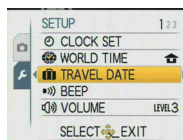

**7** Press **▼** to select **[SET]** and then press **[MENU/SET]**.

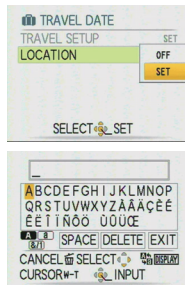

**8** Enter the location.

- For details on how to enter characters, read the **[TITLE EDIT]** section on P66.

**9** Press **[MENU/SET]** twice to close the menu.

**10** Take a picture.

- The number of days that have passed since the departure date is displayed for about 5 seconds if this unit is turned on etc. after setting the travel date or when the travel date is set.
- When the travel date is set, **[ ]** appears on the lower right of the screen.

#### ■ Canceling the travel date

The travel date is cleared if the current date is after the return date. If you want to cancel part way through the setting, select **[OFF]** in step 3 or 7 and press **[MENU/SET]** twice. If the **[TRAVEL SETUP]** is set to **[OFF]** in step 3, **[LOCATION]** will be also set to **[OFF]**.

#### Note

- The **[TRAVEL DATE]** function is available in Intelligent Auto Mode; however, the setting cannot be changed.
- The travel date is calculated using the date in the clock setting and the departure date you set. If you set **[WORLD TIME]** to the travel destination, the travel date is calculated using the date in the clock setting and the travel destination setting.
- The travel date setting is memorized even if the camera is turned off.
- If you set a departure date and then take a picture on a date before this departure date, **[-]** (minus) is displayed in orange and the day of the vacation that you took the picture is not recorded.
- If you set a departure date and then change the clock setting to the date and time at the travel destination, **[-]** (minus) is displayed in white and the day of the vacation that you took the picture on is recorded when the travel destination date is, for example, one day before the departure date.
- If **[TRAVEL DATE]** is set to **[OFF]**, the number of days that have passed since the departure date will not be recorded even if you set the travel date. Even if **[TRAVEL DATE]** is set to **[SET]** after taking the pictures, the day of the vacation you took them on is not displayed.
- The text set as **[LOCATION]** can be edited later with **[TITLE EDIT]**.
- The name for **[BABY1]/[BABY2]** and **[PET]** will not be recorded when **[LOCATION]** is set.
- **[LOCATION]** cannot be recorded when taking motion pictures.

### Recording date/time at overseas travel destinations (World time)

You can display the local time at the travel destinations and record them on the pictures you take.


- Select **[CLOCK SET]** to set the current date and time in advance. (P16)

## 1 Select [WORLD TIME] from the [SETUP] menu, and then press **▶**. (P21)

- When you are setting the world time for the first time, the [PLEASE SET THE HOME AREA] message appears. Press [MENU/SET], and set the home area on the screen in step 3.




## 2 Press **▼** to select [HOME], and then press [MENU/SET].

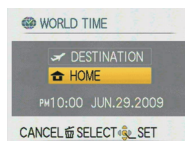


## 3 Press **◀▶** to select the home area, and then press [MENU/SET].

- Ⓐ Current time
  - Ⓑ Time difference from GMT (Greenwich Mean Time)
- If daylight saving time [☀] is used at the home area, press **▲**. Press **▲** again to return to the original time.
  - The daylight saving time setting for the home area does not advance the current time. Advance the clock setting by one hour.

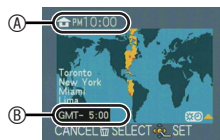


## 4 Press **▲** to select [DESTINATION] and then press [MENU/SET].

- Depending on the setting, the time at the travel destination area or the home area is displayed.

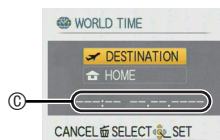

## 5 Press **◀▶** to select the area the travel destination is in and then press [MENU/SET] to set.

- Ⓓ Current time of the destination area
  - Ⓔ Time difference
- If daylight saving time [☀] is used at the travel destination, press **▲**. (The time advances by one hour.) Press **▲** again to return to the original time.

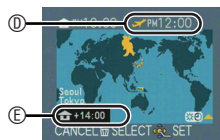

## 6 Press [MENU/SET] to close the menu.

### Note

- Return the setting to [HOME] when the vacation is finished by performing steps 1, 2 and 3.
- If [HOME] is already set, change only the travel destination, and use.
- If you cannot find the travel destination in the areas displayed on the screen, set by the time difference from the home area.
- Now when you play photographs taken while on holiday, the travel icon [✈] appears.





## Using the [REC] Menu

### [PICTURE SIZE]

 
For details on [REC] menu settings, refer to P18.


Set the number of pixels and aspect ratio of the pictures. Select a higher number of pixels for clearer pictures. Select a lower number of pixels to store more pictures.


**Applicable modes:**   SCN

Settings	Number of pixels
4:3 [8M]	3264 × 2448 pixels
4:3 [5M 	2560 × 1920 pixels
4:3 [3M 	2048 × 1536 pixels
3:2 [7M]	3264 × 2176 pixels
3:2 [2.5M 	2048 × 1360 pixels
16:9 [6M]*	3264 × 1840 pixels
16:9 [2M 	1920 × 1080 pixels

\* Cannot be set in Intelligent Auto Mode [  ]

[  ]: aspect ratio of a 4:3 TV or PC

[  ]: aspect ratio of a 35 mm film camera

[  ]: aspect ratio of a high-definition TV, etc.

#### Note


- A digital picture is made of numerous dots called pixels. The higher the numbers of pixels, the finer the picture will be when it is printed on a large piece of paper or displayed on a PC monitor.

Ⓐ Many pixels (Fine)

Ⓑ Few pixels (Rough)

\* These pictures are examples to show the effect.


- [EZ] is an abbreviation of “Extended Optical Zoom”.
- The Extended Optical Zoom does not work in [HIGH SENS.] and [HI-SPEED BURST] mode, so the picture size for [EZ] is not displayed.
- Pictures may have a mosaic-like appearance depending on the subject or the recording condition.
- Refer to P97 for the number of recordable pictures.

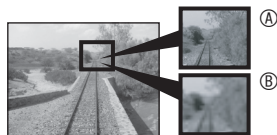


### [QUALITY]

For details on [REC] menu settings, refer to P18.

Set the compression rate at which the pictures are to be stored.

**Applicable modes:**  SCN

[  ]: Fine (when giving priority to the picture quality)

[  ]: Standard (when giving priority to the number of pictures to be recorded without changing the number of pixels)


#### Note

- Refer to P97 for information about the number of recordable pictures.


## [ISO] [SENSITIVITY]

**For details on [REC] menu settings, refer to P18.**

ISO sensitivity represents the sensitivity of the image sensor to light. If you set the ISO sensitivity higher, the camera becomes more suitable for recording in dark places.

**Applicable modes:** 

[i.AUTO]/[80]/[100]/[200]/[400]/[800]/[1600]

ISO sensitivity	80  1600	
Recording location (recommended)	When it is light (outdoors)	When it is dark
Shutter speed	Slow	Fast
Noise	Less	More

### Note







- When setting to [i.AUTO], the camera detects movement of the subject and then sets the optimal ISO sensitivity and shutter speed according to movement and brightness of the subject.
- The ISO sensitivity automatically changes between [ISO1600] and [ISO6400] in [HIGH SENS.] mode.
- To avoid picture noise we recommend reducing the ISO sensitivity or setting [COLOR MODE] to [NATURAL]. (P59)


## [WB] [WHITE BALANCE]

**For details on [REC] menu settings, refer to P18.**

This function allows you to reproduce a white color closer to the tone in real life on the pictures recorded under sunlight, halogen lighting, etc. in which the white color may appear reddish or bluish.

**Applicable modes:**  SCN 


- [AWB]:** for auto setting (auto white balance)
-  (Daylight): for recording outdoors on a bright day
-  (Cloudy): for recording outdoors on a cloudy day
-  (Shade): for recording in shaded areas outdoors on a bright day
-  (Halogen): for recording under halogen lighting
-  (White set): for using the preset white balance
-  (White set): for using set mode with a different white balance setting

- The optimum white balance under fluorescent lights depends on the type of light, so use [AWB] or [SET].

## ■ Auto White Balance (AWB)



Depending on the conditions prevailing when pictures are taken, the pictures may take on a reddish or bluish tinge. Furthermore, when a multiple number of light sources are being used or there is nothing with a color close to white, Auto White Balance may not function properly. In a case like this, set the white balance to a mode other than [AWB].

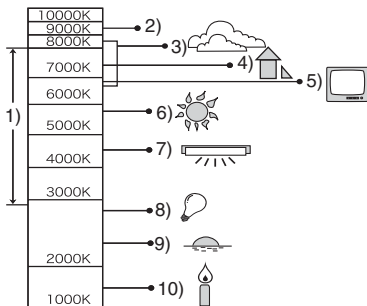- 1 The range that is controlled by the Auto White Balance adjustment mode of this camera
- 2 Blue sky
- 3 Cloudy sky (Rain)
- 4 Shade
- 5 TV screen
- 6 Sunlight
- 7 White fluorescent light
- 8 Incandescent light bulb
- 9 Sunrise and sunset
- 10 Candlelight



K=Kelvin Color Temperature

## ■ Setting the white balance manually (White set )

- 1 Select [SET] and then press [MENU/SET].
- 2 Aim the camera at a sheet of white paper etc. so that the frame in the center is filled by the white object only and then press [MENU/SET].
- 3 After setting, select [].



### Note

- The white balance setting is memorized even if you switch the camera off, but if you change the Scene Mode, the white balance setting returns to [AWB].
- [WHITE BALANCE] is fixed to [AWB] in the following scene modes.
  - [SCENERY], [NIGHT PORTRAIT], [NIGHT SCENERY], [FOOD], [PARTY], [CANDLE LIGHT], [SUNSET], [STARRY SKY], [FIREWORKS], [BEACH], [SNOW] and [AERIAL PHOTO] in [SCENE MODE].










 [AF MODE]

**For details on [REC] menu settings, refer to P18.**

This allows the focusing method that suits the positions and number of the subjects to be selected.

**Applicable modes:**  SCN

 : Face detection		The camera automatically detects the person's face. The focus and exposure can then be adjusted to fit that face no matter what portion of the picture it is in. (max. 15 areas)
 : 9-area-focusing		The camera focuses on any of 9 focus areas. This is effective when the subject is not in the center of the screen.
 : 1-area-focusing		The camera focuses on the subject in the AF area on the center of the screen.

**■ About [  ] (Face detection)**


The following AF area frames are displayed when the camera detects the faces.

Yellow:

 

When the shutter button is pressed halfway, the frame turns green when the camera is focused.

White:

Displayed when more than one face is detected. Other faces that are the same distance away as faces within the yellow AF areas are also focused.

- Under certain picture-taking conditions including the following cases, the facial recognition function may fail to work, making it impossible to detect faces. [AF MODE] is switched to [  ].
  - When the face is not facing the camera
  - When the face is at an angle
  - When the face is extremely bright or dark
  - When there is little contrast on the faces
  - When the facial features are hidden behind sunglasses, etc.
  - When the face appears small on the screen
  - When there is rapid movement
  - When the subject is other than a human being
  - When the camera is shaking
  - When digital zoom is used

 **Note**





- When multiple AF areas (max. 9 areas) light at the same time, the camera is focusing on all the AF areas. If you want to determine the focus position to take pictures, switch the AF mode to 1-area-focusing mode.
- In 9-area focusing mode, AF areas are not displayed until the camera focused on a subject.
- The camera may detect the subjects other than a person as the face. In this case, switch the AF mode to any modes other than [  ] and then take a picture.
- The AF mode cannot be set in [FIREWORKS] in Scene Mode.
- It is not possible to set [  ] in the following cases.
  - In [NIGHT SCENERY], [FOOD], [STARRY SKY] and [AERIAL PHOTO] in Scene Mode.

 [BURST]

For details on [REC] menu settings, refer to P18.

When you press and hold the shutter button several pictures are taken in succession.

Applicable modes:   SCN


 

		[OFF]		
<b>Burst speed (pictures/second)</b>		—	3*	Approx. 2
<b>Number of recordable pictures</b>		—	Max. 4	Depends on the remaining capacity of the built-in memory/card.
		—	Max. 7	

\* The burst speed is constant regardless of the transfer speed of the card.

- The burst speed values given above apply when the shutter speed is 1/60 or faster and when the flash is not activated.

 Note

- When the burst mode setting is set to  [ ]

- The burst speed becomes slower halfway. The exact timing of this depends on the type of card, the picture size and the quality.
- You can take pictures until the capacity of the built-in memory or the card is full.
- The focus is fixed when the first picture is taken.
- When the burst speed is set to  [ ], the exposure and white balance are fixed at the settings used for the first picture for the subsequent pictures as well. When the burst speed is set to  [ ], they are adjusted each time you take a picture.
- When the self-timer is used, the number of recordable pictures in Burst Mode is fixed to 3.
- If you are following a moving subject while taking pictures in a place (landscape) indoors, outdoors etc. where there is a large difference between the light and shade, it may take time until the exposure is stable. If burst is used at this time, the exposure may not become optimal.
- The burst speed (pictures/second) may become slower depending on the recording environment such as in dark places, if the ISO sensitivity is high etc.
- Burst Mode is not canceled when the camera is switched off.
- If you take pictures in Burst Mode with the built-in memory, it will take time to write the picture data.
- In Burst Mode, the flash setting is fixed to Forced flash OFF  [ ].
- Burst Mode cannot be used [HIGH-SPEED BURST] and [STARRY SKY] in [SCENE MODE].

 [DIGITAL ZOOM]

For details on [REC] menu settings, refer to P18.

This can enlarge subjects even more than the optical zoom or extended optical zoom.

Applicable modes:  SCN 

[OFF]/[ON]

 Note

- Refer to P30 for details.
- If camera shake (jitter) is a problem during zooming, it is recommended that [STABILIZER] is set to [AUTO] or [MODE1].
- You cannot use digital zoom when ISO sensitivity is at [i.AUTO].

 [COLOR MODE]
**For details on [REC] menu settings, refer to P18.**

Using these modes, the pictures can be made sharper or softer, the colors of the pictures can be turned into sepia colors or other color effects can be achieved.

**Applicable modes:**   


<b>[STANDARD]:</b>	This is the standard setting.
<b>[NATURAL]:</b>	The picture becomes softer.
<b>[VIVID]:</b>	The picture becomes sharper.
<b>[B/W]:</b>	The picture becomes black and white.
<b>[SEPIA]:</b>	The picture becomes sepia.
<b>[COOL]:</b>	The picture becomes bluish.
<b>[WARM]:</b>	The picture becomes reddish.

 **Note**

- When you take pictures in dark places, noise may become visible. To avoid noise, we recommend setting to [NATURAL].
- You can set only [STANDARD], [B/W] or [SEPIA] in Intelligent Auto Mode.
- You cannot set [NATURAL] or [VIVID] in Motion Picture Mode.
- Different color modes can be set in different recording modes.

 [STABILIZER]
**For details on [REC] menu settings, refer to P18.**

Using one of these modes, jitter during picture taking is detected, and the camera automatically compensates the jitter, enabling jitter-free images to be taken.

**Applicable modes:**  SCN

<b>[OFF]</b>	
<b>[AUTO]:</b>	The optimum jitter compensation is selected depending on the condition.
<b>[MODE1]:</b>	Jitter is always compensated during Recording Mode.
<b>[MODE2]:</b>	The jitter is compensated for when the shutter button is pressed.

 **Note**

- The stabilizer function may not work in the following cases so take special care not to move the camera when pressing the shutter button.
  - When too much jitter occurs.
  - When the zoom magnification is high.
  - In digital zoom range.
  - When taking pictures while following subjects in motion.
  - When the shutter speed is extremely slow due to dark conditions or other reasons.
- The setting is fixed to [MODE2] with [SELF PORTRAIT] in Scene Mode and to [OFF] in [STARRY SKY] in Scene Mode.
- The setting is fixed to [MODE1] in Motion Picture Mode.

## AF\* [AF ASSIST LAMP]

For details on [REC] menu settings, refer to P18.


Illuminating the subject with the AF assist lamp allows the camera to focus on the subject in low light conditions.


**Applicable modes:**  SCN

**[OFF]:** The AF assist lamp does not turn on.

**[ON]:** When taking pictures in dark places, the AF assist lamp lights while the shutter button is pressed halfway. (Larger AF areas are now displayed.)

 **Note**

- The effective range of the AF assist lamp is 1.5 m (4.93 feet).
- When you do not want to use the AF assist lamp  (e.g. when you take a picture of animals in a dark place), set the [AF ASSIST LAMP] to [OFF]. In this case, it becomes difficult to focus on the subject.
- The AF assist lamp is fixed to [OFF] in [SELF PORTRAIT], [SCENERY], [NIGHT SCENERY], [SUNSET], [FIREWORKS] and [AERIAL PHOTO] in [SCENE MODE].

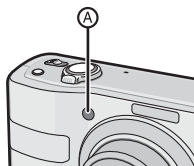

 [CLOCK SET]

For details on [REC] menu settings, refer to P18.

To set the year, month, day and time.

It functions in exactly the same way as [CLOCK SET] in the [SETUP] menu.

Playback mode: 

## Playing Back Pictures in Sequence (Slide Show)

You can play back the pictures you have taken in synchronization with music, and you can do this in sequence while leaving a fixed interval between each of the pictures.

Furthermore, you can play back only those pictures you have set as favorites as a slide show.

This playback method is recommended when you have connected the camera to a TV set to view the pictures you have taken.

**1** Slide the recording/playback switch to [  ] and then press [MODE].


**2** Press  $\blacktriangle/\blacktriangledown$  to select [SLIDE SHOW] and then press [MENU/SET].




**3** Press  $\blacktriangle/\blacktriangledown$  to select an item and then press [MENU/SET].

[ALL]: All pictures

[FAVORITE]: Pictures set as FAVORITE (P70). (Set [FAVORITE] to [ON] and set any pictures as favorites.)

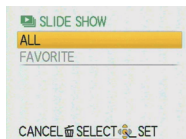

**4** Press  $\blacktriangle$  to select [START] and press [MENU/SET].

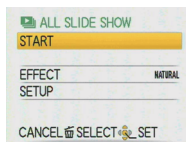

**5** Press  $\blacktriangledown$  to finish the slide show.

- Normal playback resumes after the slide show finishes.

### ■ Operations performed during slide show


The cursor displayed during playback corresponds to  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ .

- The menu screen is restored when [  ] is pressed.

- (A) Play/Pause
- (B) Stop
- (C) Back to previous picture\*
- (D) Ahead to next picture\*


\* These operations can be performed only in the Pause Mode.

- (E) Reduce volume level
- (F) Increase volume level

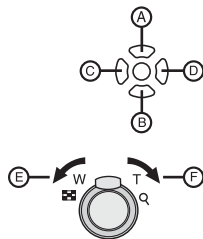

## ■ Changing the slide show settings

You can change the settings for slide show playback by selecting [EFFECT] or [SETUP] on the slide show menu screen.

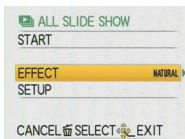

### [EFFECT]

This allows you to select the screen effects or music effects when switching from one picture to the next picture.

[NATURAL], [SLOW], [SWING], [URBAN], [OFF]

- When [URBAN] has been selected, the picture may appear in black and white as a screen effect.

### [SETUP]

[DURATION] or [REPEAT] can be set.

Item	Settings
[DURATION]	[1SEC.]/[2SEC.]/[3SEC.]/[5SEC.]
[REPEAT]	[ON]/[OFF]
[MUSIC]	[ON]/[OFF]

- [DURATION] can be set only when [OFF] has been selected as the [EFFECT] setting.
- [MUSIC] cannot be set when the [EFFECT] is set to [OFF].

### Note

- It is not possible to add new music effects.
- Motion pictures cannot be played back as a slide show.

Playback mode: ★

## Selecting Pictures and Playing Them Back


### ★ [FAVORITE PLAY]

You can play back the pictures put in the favorites list only. (When [FAVORITE] is set to [ON] and there is more than one picture in the favorites list.)

Refer to [FAVORITE] (P70) to put a picture on your favorites list or to remove it from the list.

**1** Slide the recording/playback switch to [▶] and then press [MODE].

**2** Press ▲/▼ to select [FAVORITE PLAY] and then press [MENU/SET]

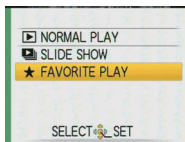

#### Note


- You can use only [ROTATE DISP.], [PRINT SET] or [PROTECT] in the [PLAYBACK] menu.

Playback mode:  ★

## Playing Back Motion Pictures

Press   to select a picture with a motion picture icon (such as ) , and then press  to play back.



- Ⓐ The motion picture recording time
- Ⓑ Motion picture icon
- Ⓒ Motion picture playback icon
- After playback starts, the elapsed playback time is displayed on the upper right of the screen.  
For example, 8 minutes and 30 seconds is displayed as [8m30s].

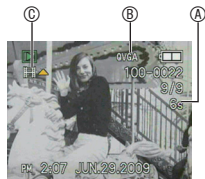

### ■ Operations performed during motion picture playback

The cursor displayed during playback corresponds to    .

 - Ⓐ Play/Pause
- Ⓑ Stop
- Ⓒ Fast rewind, Frame-by-frame rewind\*
- Ⓓ Fast forward, Frame-by-frame forward\*
- \* These operations can be performed only in the Pause Mode.
- Ⓔ Reduce volume level
- Ⓕ Increase volume level

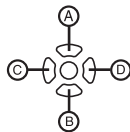

### Note

- Sound can be heard through the speaker. Refer to [VOLUME] (P21) for information about how to adjust the volume in the [SETUP] menu.
- The file format that can be played back with this camera is QuickTime Motion JPEG.
- Please note that the bundled software includes QuickTime to play back motion picture files created with the camera on the PC (P75).
- Some QuickTime Motion JPEG files recorded by a PC or other equipment may not be played back with this camera.
- When playing back motion pictures that have been recorded with other equipment, the quality of pictures may be deteriorated or it may not be possible to play them back.
- When using a high capacity card, it is possible that fast rewinding may be slower than usual.



Playback mode: ▶

## Using the [PLAYBACK] Menu


You can use various functions in Playback Mode to rotate pictures, set protection for them etc.

- With [TEXT STAMP] or [RESIZE], a new edited picture is created. A new picture cannot be created if there is no free space on the built-in memory or the card so we recommend checking that there is free space and then editing the picture.

### [CALENDAR]

You can display pictures by recording date.

#### **1** Select [CALENDAR] on the [PLAYBACK] menu. (P18)

- You can also rotate the zoom lever several times towards  (W) to display the calendar screen. (P32)

#### **2** Press /// to select the date to be played back.

- ▲/▼: Select the month
- ◀/▶: Select the date

- If there were no pictures recorded during a month, the month is not displayed.



#### **3** Press [MENU/SET] to display the pictures that were recorded on the selected date.

- To return to the calendar screen, press .



#### **4** Press /// to select a picture and then press [MENU/SET].

- The picture that was selected will appear.

#### Note

- The recording date of the picture selected in the playback screen becomes the date selected when the calendar screen is first displayed.
- If there are multiple pictures with the same recording date, the first picture recorded on that day is displayed.
- You can display the calendar between January 2000 and December 2099.
- If the date is not set in the camera, the recording date is set as January 1st, 2009.
- If you take pictures after setting the travel destination in [WORLD TIME], the pictures are displayed by the dates at the travel destination in calendar playback.

 [TITLE EDIT]



You can add text (comments) to pictures. After text has been registered, it can be included in prints using [TEXT STAMP] (P67). (Only alphabetical characters and symbols can be entered.)

**1** Select [TITLE EDIT] on the [PLAYBACK] menu. (P18)

**2** Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].



**3** Select the picture, and then press [MENU/SET] to set.

- [  ]  is displayed for pictures that have already been recorded with text in [BABY1]/[BABY2] or [PET] name settings in Scene Mode, [TRAVEL DATE] location setting or [TITLE EDIT].

[SINGLE]



Press ◀▶ to select the picture.

[MULTI]



 


Press ▲▼/◀▶ to select the pictures.


**For [MULTI] setting**

Press [DISPLAY] to set (repeat), and then press [MENU/SET].

- The setting is canceled when [DISPLAY] is pressed again.

**4** Press ▲▼/◀▶ to select text and press [MENU/SET] to register.

- Press [DISPLAY] to switch text between [A] (capitals), [a] (small case) and [&/1] (special characters and numbers).
- The cursor at the entry position can be moved to the left with [  ], and to the right with [  ].
- To enter a blank, move the cursor to [SPACE] and press [MENU/SET]. To delete an entered character, move the cursor to [DELETE], and press [MENU/SET].
- To stop editing during text entry, press [  ].
- A maximum of 30 characters can be entered.

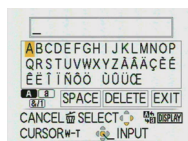

**5** Press ▲▼/◀▶ to move the cursor to [EXIT] and then press [MENU/SET] to finish text input.


**6** Press [  ] to return to the menu screen\*.

\* The menu screen is automatically restored when [MULTI] is selected.

- Press [MENU/SET] to close the menu.

■ Delete the title

[SINGLE] setting

- 1 In step 4, delete all the texts, select [EXIT], and press [MENU/SET].
- 2 Press [  ].
- 3 Press [MENU/SET] to close the menu.

**[MULTI] setting**


- In step 4, delete all the texts, select [EXIT], and press [MENU/SET].
- Press [MENU/SET] to close the menu.

**Note**

- Text can be scrolled if all of the registered text does not fit on the screen.
- The name setting of [BABY1]/[BABY2] or [PET] in Scene Mode or [TRAVEL DATE] location setting can also be registered by using the operation in steps 4 and following.
- The name setting of [BABY1]/[BABY2] or [PET] in Scene Mode, [TRAVEL DATE] location setting and [TITLE EDIT] cannot be registered at the same time.
- You can print out texts (comments) using the "PHOTOfunSTUDIO" bundled software on the CD-ROM (supplied).
- You can set up to 50 pictures at one time with [MULTI].
- You cannot use [TITLE EDIT] for motion pictures, pictures protected and pictures taken with other equipment.

**[TEXT STAMP]**

You can stamp the recording date/time, age, travel date or title onto the recorded pictures. It is suitable for regular size printing. (Pictures larger than 3M will be resized when stamping the date etc. on them.)

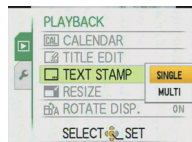**1 Select [TEXT STAMP] on the [PLAYBACK] menu. (P18)****2 Press ▲/▼ to select [SINGLE] or [MULTI] and press [MENU/SET].****3 Select the picture, and then press [MENU/SET] to set.**

- [ ] ④ appears on the screen if the picture have added the text stamp.

**For [MULTI] setting  
Press [DISPLAY] to set (repeat),  
and then press [MENU/SET].**

- The setting is canceled when [DISPLAY] is pressed again.

**4 Press ▲/▼/◀▶ to select [SHOOTING DATE], [AGE], [TRAVEL DATE] or [TITLE], and then press [MENU/SET] to set each item.****[SHOOTING DATE]**

[W/O TIME]: Stamp the year, month and date.


[WITH TIME]: Stamp the year, month, day, hour and minutes.

**[AGE] (P45)**

If this is set to [ON], [AGE] is stamped on the pictures.

**[TRAVEL DATE]**

If this is set to [ON], [TRAVEL DATE] is stamped on the pictures.

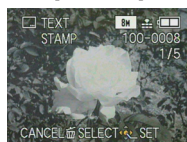**[SINGLE]**

Press ◀▶ to  
select the picture.

**[MULTI]**

Press ▲▼/◀▶ to  
select the pictures.

**[TITLE]**

Text is printed together with the image for pictures that have already been recorded with text in [BABY1]/[BABY2] or [PET] name settings in Scene Mode, [TRAVEL DATE] location setting or [TITLE EDIT].

**5 Press [MENU/SET].**

- If you set [TEXT STAMP] for a picture larger than 3M, the picture size will become smaller as shown below

8M / 5M → 3M

7M → 25M

6M → 2M

- The picture becomes slightly rougher.


**6 Press ▲ to select [YES] and press [MENU/SET].**

- The message [SAVE NEW PICTURES?] appears if the picture was recorded with a picture size 3M or less.

**7 Press [ ] to return to the menu screen\*.**

- \* The menu screen is automatically restored when [MULTI] is selected.
- Press [MENU/SET] to close the menu.

(Example)

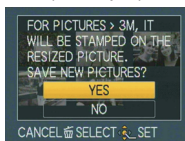**Note**

- Note that if you use text stamp and then specify printing the date when you order prints or on a printer, both dates will be printed and may overlap.
- You can set up to 50 pictures at one time in [MULTI].
- The text may be cut off with some printers. Check before printing.
- The printed texts may be blurred on the pictures with the resolution of 0.3M.
- Date or text stamps cannot be used in the following cases:
  - Motion pictures/Pictures recorded without setting the clock or title/Pictures stamped with [TEXT STAMP]/Pictures taken with other equipment

**[RESIZE] Reducing the picture size (number of pixels)**

This function is useful if you want to reduce the file size of the picture in cases when it needs to be attached to an e-mail or uploaded to a website.

**1 Select [RESIZE] on the [PLAYBACK] menu. (P18)****2 Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].**

### 3 Select the picture(s) and size(s).

#### [SINGLE] setting

- 1 Press **◀▶** to select the picture, and then press **[MENU/SET]**.
- 2 Press **◀▶** to select the size\*, and then press **[MENU/SET]**.

\* Only the sizes to which the pictures can be resized are displayed.

#### [MULTI] setting

- 1 Press **▲▼** to select the size, and then press **[MENU/SET]**.

- When **[DISPLAY]** is pressed, an explanation of resizing is displayed.


- 2 Press **▲▼/◀▶** to select the picture, and then press **[DISPLAY]**.

- Repeat this step for each picture, and press **[MENU/SET]** to set.

#### [SINGLE]



#### [MULTI]

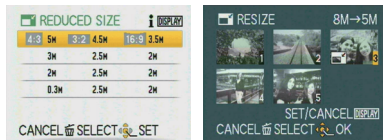


### 4 Press **▲** to select **[YES]** and then press **[MENU/SET]**.

### 5 Press **[ ]** to return to the menu screen\*.

\* The menu screen is automatically restored when **[MULTI]** is selected.

- Press **[MENU/SET]** to close the menu.

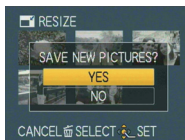

#### Note

- You can set up to 50 pictures at one time in **[MULTI]**.
- You may not be able to resize pictures you have taken using other equipment.
- The picture becomes slightly rougher.
- Motion pictures or pictures stamped with **[TEXT STAMP]** cannot be resized.


## [ROTATE DISP.]

This mode allows you to automatically display pictures vertically if they were recorded holding the camera vertically.

### 1 Select [ROTATE DISP.] on the [PLAYBACK] menu. (P18)

### 2 Press ▼ to select [ON] and then press [MENU/SET].

- When you select [OFF], the pictures are displayed without being rotated.
- Refer to P32 for information about how to play back pictures.

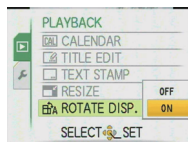

### 3 Press [MENU/SET] to close the menu.

#### Note

- When you play the picture on a PC, you cannot play rotated pictures without an OS or a software compatible with Exif. Exif is the file format for still pictures, to which recording information and other data can be added, established by JEITA [Japan Electronics and Information Technology Industries Association].
- You may not be able to rotate pictures shot on other equipment.
- [ROTATE DISP.] cannot be used when displaying multiple screens or using a calendar search.

## ★ [FAVORITE]

You can do the following if a mark [ ★ ] has been added to pictures and they have been set as favorites.

- Play back the pictures set as favorite. ([FAVORITE PLAY])
- Play back the pictures set as favorites only as a slide show.
- Delete all the pictures not set as favorites. ([ALL DELETE EXCEPT ★])
- Print only the pictures set as favorites.

### 1 Select [FAVORITE] on the [PLAYBACK] menu. (P18)

### 2 Press ▼ to select [ON] and then press [MENU/SET].

- You cannot set pictures as favorites if [FAVORITE] is set to [OFF]. Also the favorites icon [ ★ ] will not appear when [FAVORITE] is set to [OFF] even if it was previously set to [ON].



**3** Press [MENU/SET] to close the menu.

**4** Press ◀▶ to select a picture which you want to put on your favorites list, and then press ▼.

- Repeat the above procedure if necessary.
- [★] is added on the picture put in your favorites list.
- If you want to remove a picture from the favorites list, press ▼ again.



#### ■ Canceling all favorites

- 1 Select [CANCEL] on the screen shown in step 2 and then press [MENU/SET].
- 2 Press ▲ to select [YES] and then press [MENU/SET].
- 3 Press [MENU/SET] to close the menu.

- You cannot select [CANCEL] if no picture is on your favorites list.

#### 📌 Note

- You can place up to 999 pictures in your favorites list.
- When printing pictures at a photo printing store, [ALL DELETE EXCEPT ★] (P34) is useful so only the pictures you want to be printed remain on the card.
- You may not be able to set pictures shot on other equipment as favorites.
- You can perform, check and cancel the settings of images as favorites using the "PHOTOfunSTUDIO" bundled software on the CD-ROM (supplied).

## 🖨️ [PRINT SET]

Writes print information to media and then use the information on a DPOF compliant system. DPOF (Digital Print Order Format) is a system that allows the user to select which pictures to print, how many copies of each picture to print and whether or not to print the recording date on the pictures when using a DPOF compatible photo printer or photo printing store. For details, ask at your photo printing store.


When you want to use a photo printing store to print pictures recorded on the built-in memory, copy them to a card (P74) and then set the print setting.

For more information please visit:


[http://panasonic.jp/dc/dpof\\_110/white\\_e.htm](http://panasonic.jp/dc/dpof_110/white_e.htm)

**1** Select [PRINT SET] on the [PLAYBACK] menu. (P18)

**2** Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].

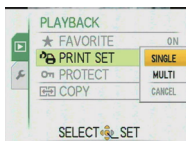

### 3 Select the picture, and then press [MENU/SET].

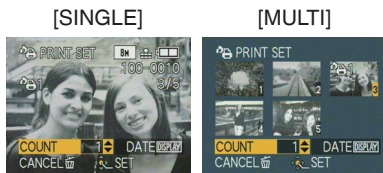

Press ◀▶ to select the picture.

Press ▲▼/◀▶ to select the pictures.

### 4 Press ▲/▼ to set the number of prints, and then press [MENU/SET] to set.

- When [MULTI] has been selected, repeat steps 3 and 4 for each picture. (It is not possible to use the same setting for a multiple number of pictures.)

### 5 Press [ ] to return to the menu screen.

- Press [MENU/SET] to close the menu.

#### ■ Canceling all the [PRINT SET] settings

- 1 Select [CANCEL] on the screen shown in step 2 and then press [MENU/SET].
- 2 Press ▲ to select [YES] and then press [MENU/SET].
- 3 Press [MENU/SET] to close the menu.

- You cannot select [CANCEL] if no picture has been set for printing.

#### ■ To print the date

After setting the number of prints, set/cancel printing with the recording date by pressing [DISPLAY].

- When you go to a photo printing store for digital printing, be sure to order the printing of the date additionally if required.
- Depending on the photo printing store or the printer, the date may not be printed even if you set to print the date. For further information, ask at your photo printing store or refer to the operating instructions for the printer.
- This function is canceled if you imprint the text stamp on the picture.
- The date cannot be printed on pictures stamped with text.

#### 🗉 Note

- The number of prints can be set from 0 to 999.
- With a printer supporting PictBridge, the date print settings of the printer may take precedence so check if this is the case.
- It may not be possible to use the print settings with other equipment. In this case, cancel all the settings, and reset the settings.
- If the file is not based on the DCF standard, the print setting cannot be set.




## ☰ [PROTECT]

You can set protection for the pictures you do not want to delete to prevent them from accidental erasure.

**1** Select [PROTECT] on the [PLAYBACK] menu. (P18)

**2** Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].

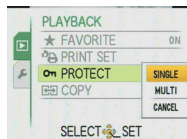

**3** Select the picture, and then press [MENU/SET] to set.

When [MULTI] has been selected

- Repeat these steps for each picture.
- The settings are canceled when [MENU/SET] is pressed again.

[SINGLE]



Press ◀▶ to select the picture.

[MULTI]



Press ▲/▼/◀▶ to select the pictures.

**4** Press [ ] to return to the menu screen.

- Press [MENU/SET] to close the menu.

### ■ Canceling all the [PROTECT] settings

**1** Select [CANCEL] on the screen shown in step 2 and then press [MENU/SET].

**2** Press ▲ to select [YES] and then press [MENU/SET].

**3** Press [MENU/SET] to close the menu.

- If you press [MENU/SET] while canceling protection, the canceling will stop halfway.

### 📌 Note



- The protect setting may not be effective in other equipment.
- Even if you protect pictures in the built-in memory or a card, they will be deleted if the built-in memory or the card is formatted.
- Even if you do not protect pictures on an SD Memory Card or an SDHC Memory Card, they cannot be deleted when the card's Write-Protect switch is set to [LOCK].


 
 [COPY]


You can copy recorded picture data from the built-in memory to a card or vice versa.

### 1 Select [COPY] on the [PLAYBACK] menu. (P18)

### 2 Press ▲/▼ to select the copy destination and then press [MENU/SET].

  : All the picture data in the built-in memory are copied onto the card at one time. → step 4.

  : One picture at a time is copied from the card to the built-in memory. → step 3.

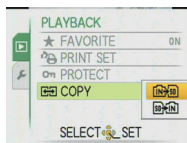

### 3 Press ◀▶ to select the picture and then press [MENU/SET].

### 4 Press ▲ to select [YES] and then press [MENU/SET].



- If you press [MENU/SET] while copying pictures from the built-in memory to the card, the copying will stop halfway.
- Do not turn the camera off before copying is finished.



### 5 Press [ ] to return the menu screen.

- Press [MENU/SET] to close the menu.
- If you copy from the built-in memory to a card, all the pictures are copied and then the screen automatically returns to the playback screen.

#### Note

- If you copy picture data from the built-in memory to a card which does not have sufficient free space, the picture data will only be copied halfway. We recommend using a card which has more free space than the built-in memory (about 50MB).
- In case of "", you can copy an image file even if there is already a file in the destination that has the same name (same file and folder numbers) by making new folder. In case of "", if a picture exists with the same name as the picture to be copied in the built-in memory, it is not copied. (P76)
- It may take time to copy the picture data.
- Only pictures recorded with a Panasonic digital camera (LUMIX) will be copied. (Even if the pictures were recorded with a Panasonic digital camera, you may not be able to copy them if they were edited on a PC.)
- [PRINT SET] on the original picture data will not be copied. Set the [PRINT SET] again after copying is finished.

## Connecting to a PC

You can acquire recorded pictures to a PC by connecting the camera and the PC.


- You can easily print out or mail the pictures you have imported. Use of the “PHOTOfunSTUDIO” bundled software on the CD-ROM (supplied) is a convenient way of doing this.
- Read the separate operating instructions for the supplied software for more information about the software in the CD-ROM (supplied) and how to install it.

Preparations:

Turn on the camera and the PC.

Remove the card before using the pictures in the built-in memory.

- 1 Connect the camera to a PC via the USB connection cable <sup>Ⓐ</sup> (supplied).**
  - Do not use any other USB connection cables except the supplied one.

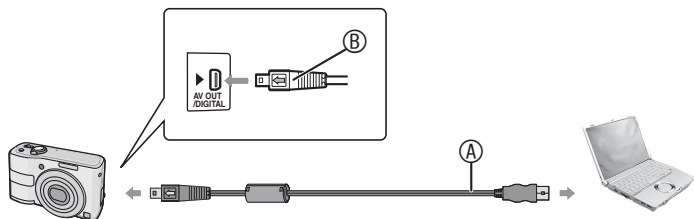


<sup>Ⓐ</sup> USB connection cable (supplied)

- Check the directions of the connectors, and plug them straight in or unplug them straight out. (Otherwise the connectors may be bent out of shape which will cause trouble.)
- <sup>Ⓑ</sup> Align the marks, and insert.
- Use batteries with sufficient battery power or the AC adaptor (optional: P103) and DC coupler (optional: P103). If the remaining battery power becomes low while the camera and the PC are communicating, the status indicator blinks and the alarm beeps. Refer to “Disconnecting the USB connection cable safely” (P76) before disconnecting the USB connection cable. Otherwise, data may be destroyed.
  - Always use a genuine Panasonic AC adaptor (DMW-AC6PP: optional) and DC coupler (DMW-DCC2: optional).

- 2 Press  $\blacktriangle/\blacktriangledown$  to select [PC], and then press [MENU/SET].**

- 3 Double-click on [Removable Disk] in [My Computer].**

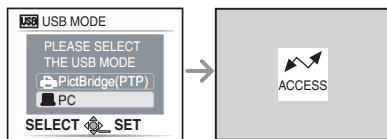

- When using a Macintosh, the drive is displayed on the desktop. (“LUMIX”, “NO\_NAME” or “Untitled” is displayed.)

#### 4 Double-click [DCIM] folder.

#### 5 Using a drag-and-drop operation, move the pictures you want to acquire or the folder storing those pictures to any different folder on the PC.

#### ■ Disconnecting the USB connection cable safely


- Proceed with the hardware removal using “Safely Remove Hardware” on the task tray of the PC. If the icon is not displayed, check that [ACCESS] is not displayed on the LCD monitor of the digital camera before removing the hardware.

#### Note

- We recommend placing a soft cloth under this unit to prevent scratching.
- Turn the camera off before connecting or disconnecting the AC adaptor (optional: P103).
- Before inserting or removing a card, turn the camera off and disconnect the USB connection cable. Otherwise, data may be destroyed.
- With the Mac OS X v10.2 or an earlier operating system, set the Write-Protect switch of the SDHC memory card to the [LOCK] position when importing pictures from an SDHC memory card.

#### ■ Viewing the contents of the built-in memory or card using the PC (folder composition)

- Built-in memory
- Card

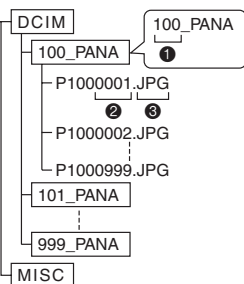

① Folder number

② File number

③ JPG : Pictures

MOV : Motion pictures

MISC: PRINT SET

Favorite

A new folder is created when pictures are taken in the following situations.

- When a card containing a folder with the same folder number has been inserted (Such as when pictures were taken using another make of camera)
- When there is a picture with file number 999 inside the folder

#### ■ Connection in the PTP mode (Windows® XP, Windows Vista® and Mac OS X only)

Select [PictBridge (PTP)] when connecting USB cable.

Data can now be read only from the card into the PC. When using Windows Vista, deleting pictures etc. is available.

- When there are 1000 or more pictures on a card, the pictures may not be imported in the PTP mode.

### Using a PC with an SD Memory Card slot or a card reader

Attach the SD card according to the operating instructions of computer or card reader and perform steps 3-5 on pages 75 and 76.

- You cannot use SDHC cards if the computer or card reader does not support SDHC cards.

## Printing the Pictures

By connecting the camera directly to a printer supporting PictBridge via the USB connection cable (supplied), you can select the pictures to be printed or start printing on the LCD monitor.


Preparations:



Turn on the camera and the printer.

Remove the card before printing the pictures in the built-in memory.


Perform the print quality and other settings at the printer before printing the pictures.

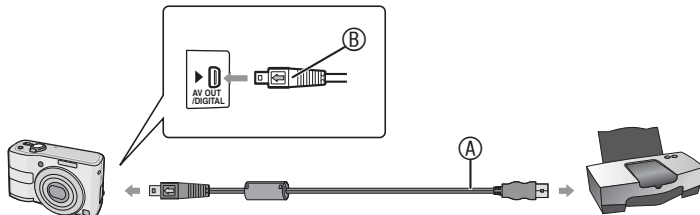- 1** **Connect the camera to a printer via the USB connection cable <sup>(A)</sup> (supplied).**
  - Do not use any other USB connection cables except the supplied one.



- (A)** USB connection cable (supplied)
- Check the directions of the connectors, and plug them straight in or unplug them straight out. (Otherwise the connectors may be bent out of shape which will cause trouble.)
- (B)** Align the marks, and insert.
- Use batteries with sufficient battery power or the AC adaptor (optional: P103) and DC coupler (optional: P103). If the remaining battery power becomes low while the camera and the printer are connected, the status indicator blinks and the alarm beeps. If this happens during printing, stop printing at once. If not printing, disconnect the USB connection cable.
  - Always use a genuine Panasonic AC adaptor (DMW-AC6PP: optional) and DC coupler (DMW-DCC2: optional).
  - When the camera is connected to the printer, the cable disconnect prohibit icon [  ] appears. Do not disconnect the USB connection cable while [  ] is displayed.

- 2** **Press  $\blacktriangle/\blacktriangledown$  to select [PictBridge(PTP)], and then press [MENU/SET].**

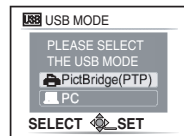


### Note

- We recommend placing a soft cloth under this unit to prevent scratching.
- Turn the camera off before connecting or disconnecting the AC adaptor (optional: P103).
- Before inserting or removing a card, turn the camera off, and disconnect the USB connection cable.
- You cannot switch between the built-in memory and the card while the camera is connected to the printer. Disconnect the USB connection cable, insert (or remove) the card and then connect the USB connection cable to the printer again.

## Selecting a single picture and printing it


- 1 Press **◀▶** to select the picture and then press **[MENU/SET]**.

- A message displays for about 2 seconds.

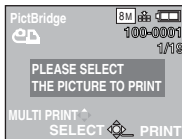

- 2 Press **▲** to select **[PRINT START]** and then press **[MENU/SET]**.

- Refer to P79 for the items which can be set before starting to print the pictures.
- Press **[MENU/SET]** to cancel printing halfway.
- Disconnect the USB connection cable after printing.

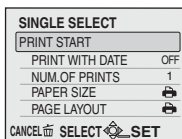


## Selecting multiple pictures and printing them

- 1 Press **▲**.

- 2 Press **▲▼** to select an item and then press **[MENU/SET]**.

- If the print check screen has appeared, select **[YES]**, and print the pictures.

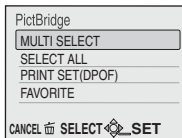


Item	Description of settings
<b>[MULTI SELECT]</b>	Multiple pictures are selected at once for printing. <ul style="list-style-type: none"> <li>• Press <b>▲▼/◀▶</b> to select pictures. When you press <b>[DISPLAY]</b>, <b>[ ]</b> is displayed with the picture you selected for printing. (When you press <b>[DISPLAY]</b> once more, the print setting is canceled.)</li> <li>• Press <b>[MENU/SET]</b> when you finish selection.</li> </ul>
<b>[SELECT ALL]</b>	Prints all stored pictures.
<b>[PRINT SET (DPOF)]</b>	Prints the pictures set in <b>[PRINT SET]</b> only. (P71)
<b>[FAVORITE]*</b>	Prints the pictures set as favorites only. (P70)

\* Only when **[FAVORITE]** is at **[ON]** and when there are pictures set as favorites. (P70)


- 3 Press **▲** to select **[PRINT START]** and then press **[MENU/SET]**.


- Refer to P79 for the items which can be set before starting to print the pictures.
- Press **[MENU/SET]** to cancel printing halfway.
- Disconnect the USB connection cable after printing.

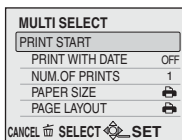

## Print Settings

Select and set the items on the screen in step 2 of the “Selecting a single picture and printing it” or in step 3 of the “Selecting multiple pictures and printing them”.

- When you want to print pictures in a paper size or a layout which is not supported by the camera, set [PAPER SIZE] and [PAGE LAYOUT] to [  ] and then set the paper size or the layout on the printer. (For details, refer to the operating instructions of the printer.)
- When [PRINT SET (DPOF)] has been selected, the [PRINT WITH DATE] and [NUM. OF PRINTS] items are not displayed.

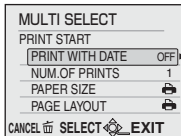

### [PRINT WITH DATE]

Item	Description of settings
[OFF]	Date is not printed.
[ON]	Date is printed.

- If the printer does not support date printing, the date cannot be printed on the picture.
- Since the printer's settings may take precedence over the print with date setting, check the printer's print with date setting as well.
- When you print pictures stamped with text, set [PRINT WITH DATE] to [OFF] since the date will be printed over the stamped text if you specify printing of the date.

### Note


#### When asking the photo shop to print the pictures

- By stamping the date using [TEXT STAMP] (P67) or setting date printing at the time of the [PRINT SET] (P71) before going to a photo shop, the dates can be printed at the photo shop.

### [NUM. OF PRINTS]






You can set the number of prints up to 999.

### [PAPER SIZE]

Item	Description of settings	Item	Description of settings
[  ]	Settings on the printer are prioritized.	[A3]	297 mm × 420 mm
[L/3.5" × 5"]	89 mm × 127 mm	[10 × 15 cm]	100 mm × 150 mm
[2L/5" × 7"]	127 mm × 178 mm	[4" × 6"]	101.6 mm × 152.4 mm
[POSTCARD]	100 mm × 148 mm	[8" × 10"]	203.2 mm × 254 mm
[16:9]	101.6 mm × 180.6 mm	[LETTER]	216 mm × 279.4 mm
[A4]	210 mm × 297 mm	[CARD SIZE]	54 mm × 85.6 mm

- Paper sizes not supported by the printer will not be displayed.

**[PAGE LAYOUT] (Layouts for printing that can be set with this unit)**


Item	Description of settings
[  ]	Settings on the printer are prioritized.
[  ]	1 page with no frame print
[  ]	1 page with frame print
[  ]	2 pages print
[  ]	4 pages print

- An item cannot be selected if the printer does not support the page layout.

**■ Layout printing****When printing a picture several times on 1 sheet of paper**

For example, if you want to print the same picture 4 times on 1 sheet of paper, set [PAGE LAYOUT] to [  ] and then set [NUM. OF PRINTS] to 4 for the picture that you want to print.

**When printing different pictures on 1 sheet of paper**

For example, if you want to print 4 different pictures on 1 sheet of paper, set [PAGE LAYOUT] to [  ] and then set [NUM. OF PRINTS] to 1 for each of the 4 pictures.

**Note**

- The camera is receiving an error message from the printer when the [●] indication lights orange during printing. After finishing printing, make sure there are no problems with the printer.
- If the number of prints is high, the pictures may be printed several times. In this case, the remaining number of prints indicated may differ from the number set.

**Using a printer with an SD Memory Card slot**

Attach the SD card according to the operating instructions of printer.

- You cannot use SDHC cards if the printer does not support SDHC cards.



## Playing Back Pictures on a TV Screen


### Playing back pictures using the AV cable (optional)

Preparations:

Set the [TV ASPECT]. (P23)

Turn this unit and the TV off.

- Do not use any other cables except a genuine Panasonic AV cable (DMW-AVC1: optional).

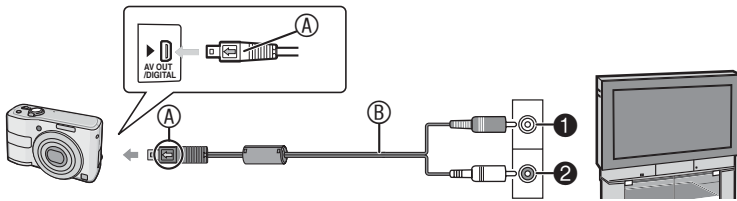

① Yellow: to the video input socket

② White: to the audio input socket

Ⓐ Align the marks, and insert.

Ⓑ AV cable (optional)

- Check the directions of the connectors, and plug them straight in or unplug them straight out. (Otherwise the connectors may be bent out of shape which will cause trouble.)

- Connect the AV cable Ⓑ (optional) to the video input and the audio input sockets on the TV.
- Connect the AV cable to the [AV OUT/DIGITAL] socket on the camera.
- Turn the TV on and select external input.
- Turn the camera on and playback the picture.

#### Note

- Depending on the [PICTURE SIZE], black bands may be displayed on the top and bottom or the left and right of the pictures.
- Read the operating instructions for the TV.
- When you play back a picture vertically, it may be blurry.
- You can play back pictures on a TV even when the recording/playback switch is at [📷].

### Playing back pictures on a TV with an SD Memory Card slot

Still pictures recorded on an SD Memory Card can be played back on a TV with an SD Memory Card slot.






#### Note


- Depending on the TV model, some pictures may not take up the whole screen.
- You cannot play motion pictures. To play back motion pictures, connect the camera to the TV with the AV cable (optional).
- You cannot play back pictures on SDHC cards if the TV does not support these cards.
- You may be unable to play MultiMedia Cards.

## Screen Display

### ■ In recording


#### Recording in Normal Picture Mode [ ] (Initial setting)


- 1 Recording mode (P18)
- 2 Flash mode (P36)
- 3 Macro shooting (P39)
- 4 AF area (P25, 29)
- 5 Focus indication (P25, 29)
- 6 Picture size (P54)
- 7 Quality (P54)
- 8 Battery indication (P12)
- 9 Remaining number of recordable pictures (P97)
- 10  : Built-in memory (P15)  
 : Card (P15) (appears during accessing only)
- 11 Recording indication
- 12 ISO sensitivity (P29, 55)
- 13 Shutter speed indication (P29)
- 14 Aperture value indication (P29)
- 15  : Optical image stabilizer (P59)  
 : Jitter alert indication (P30) : 

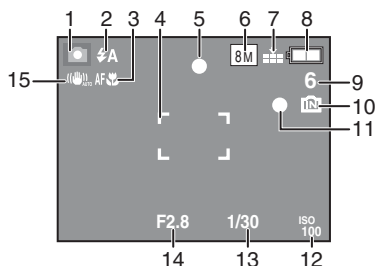

### ■ In recording (after settings)

- 16 White balance (P55)
- 17 ISO sensitivity (P29, 55)
- 18 Color mode (P59)
- 19 Picture mode (P49)
- 20 Available recording time in Motion Picture Mode  
 e.g. : **R 8m 30s**
- 21 Self-timer (P40)
- 22 Travel date (P51)
- 23 Elapsed recording time (P49)
- 24 Name (P45, 46)  
 This is displayed for about 5 seconds when this unit is turned on in [BABY1]/[BABY2] or [PET] in Scene Mode.
- 25 Exposure compensation (P41)
- 26 Age (P45, 46)

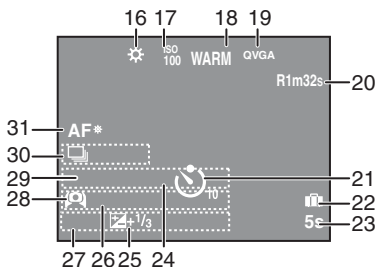


- 27 Current date and time/Destination settings :  (P53)  
 • It is displayed for about 5 seconds when turning the camera on, setting the clock and after switching from the [Playback] mode to the [Recording] mode.  
 Zoom (P30)/Extended Optical Zoom (P30)/Digital Zoom (P30):

- 28 LCD mode (P22)
- 29 Number of days that have passed since the departure date (P51)
- 30 Burst (P58)
  - 🎤 : Audio recording (P49)
- 31 AF assist lamp (P60) : AF\*

### ■ In playback

- 1 Playback mode (P18)
- 2 Protected picture (P73)
- 3 Favorites indicator (P70) : ★
- 4 Text stamp complete indicator (P67)
- 5 Picture size (P54)
- 6 Quality (P54)
- 7 Battery indication (P12)
- 8 Folder/File number (P76)
  - 📁 : Built-in memory (P15)
- 9 Elapsed playback time (P64) : 8m 30s
- 10 Picture number/Total pictures
- 11 Motion picture recording time (P64) : 8m 30s
- 12 Compensating the Exposure (P41)
- 13 Favorites setting (P70)
- 14 Recorded date and time
  - Destination settings (P53)
  - Name (P45, 46)
  - Title (P66)
- 15 Recording information
  - Age display (P45, 46)
- 16 Number of days that have passed since the departure date (P51)
- 17 LCD mode (P22)
- 18 Number of prints (P71)
- 18 Motion picture playback (P64)
  - 🔌 : Cable disconnection warning icon (P77)

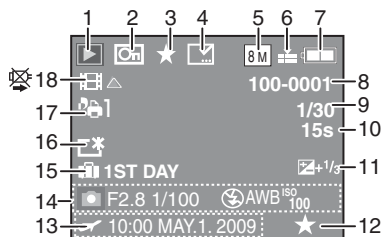

## Cautions for Use

### Optimal use of the camera

#### **Take care not to drop or knock the unit or put a lot of pressure on it.**

- Take care not to knock or drop the bag/case that you inserted the camera in as the shock may cause damage to the camera, lens or LCD monitor.
- Do not attach any other items to the hand strap that's included with your camera. While being stored, that item can rest against the LCD monitor and damage it.
- Do not use a paper bag as it can easily rip causing the camera to fall and be damaged.
- We strongly recommend you purchase a good camera bag/case from your local dealer to protect your camera.

#### **Keep the camera as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).**

- If you use the camera on top of or near a TV, the pictures and sound on the camera may be disrupted by electromagnetic wave radiation.
- Do not use the camera near cell phones because doing so may result in noise adversely affecting the pictures and sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect the camera, disturbing the pictures and sound.
- If the camera is adversely affected by electromagnetic equipment and stops functioning properly, turn the camera off and remove the battery or disconnect AC adaptor (DMW-AC6PP: optional). Then reinsert the battery or reconnect AC adaptor and turn the camera on.

#### **Do not use the camera near radio transmitters or high-voltage lines.**

- If you record near radio transmitters or high-voltage lines, the recorded pictures and sound may be adversely affected.

#### **Always use the supplied cords and cables. If you use optional accessories, use the cords and the cables supplied with them.**

#### **Do not extend the cords or the cables.**

#### **Do not spray insecticides or volatile chemicals onto the camera.**

- If the camera is sprayed with such chemicals, the camera body may be damaged and the surface finish may peel off.
- Do not keep rubber or plastic products in contact with the camera for a long period of time.

### Maintenance

#### **Uninstall the battery or DC coupler (optional: P103) and wipe them with a soft, dry cloth.**

- When the camera becomes dirty, clean it with a soft, slightly damp cloth. Then wipe the camera with a dry cloth.
- Do not use solvents such as benzine, thinner, alcohol or kitchen detergent. This can cause damage to the body of the camera and the surface may peel off.
- When using chemically treated cloth, read the instructions beforehand.
- When the LCD display becomes dirty, blow away dust and dirt with a commercially available blower brush. When the dirt is heavy, wipe it with a soft cloth such as an eyeglass cloth.

### About the LCD monitor

- Do not press the LCD monitor with excessive force. Uneven colors may appear on the LCD monitor and it may malfunction.
- Do not press the LCD monitor with a sharp and hard tip such as the one of a ballpoint pen.
- Do not scrub or press the LCD monitor with excessive force.
- If the camera is cold when you turn it on, the picture on the LCD monitor will be slightly darker than usual at first. However, the picture will return to normal brightness when the internal temperature of the camera increases.

**Extremely high precision technology is employed to produce the LCD monitor screen. However there may be some dark or bright spots (red, blue or green) on the screen. This is not a malfunction. The LCD monitor screen has more than 99.99% effective pixels with a mere 0.01% of the pixels inactive or always lit. The spots will not be recorded in pictures in the built-in memory or a card.**

### About the Lens

- Do not press the lens with excessive force.
- Do not leave the camera with the lens facing the sun as rays of light from the sun may cause it to malfunction. Also, be careful when placing the camera outside or near a window.

### Batteries

**Be sure to remove the batteries when you will not be using the camera for a long period of time.**

- **If the temperature is too high or low, the terminals may rust causing a malfunction.**

**If you drop the batteries accidentally, check to see if the body of the batteries and the terminals are damaged.**

- Inserting a damaged battery in the camera will damage the camera.

**Bring charged spare batteries when going out.**

- Be aware that the operating time of the batteries becomes shorter in low temperature conditions such as at a ski resort.
- Battery performance may vary greatly depending on the brand used and the storage life and conditions of the batteries.
- Battery performance temporarily deteriorates in low temperature conditions [10 °C (50 °F) or less]. However, it recovers when the temperature returns to normal.
- Depending on the temperature and the conditions of use, the camera may not operate properly and the batteries may become exhausted without warning because the battery indication is not displayed correctly. This is not a malfunction.
- Exhausted batteries may recover some performance if left for a period of time. However, they cannot be used for a long time. Be sure to replace them with new batteries.

**Dispose of unusable batteries.**

- Batteries have a limited life.
- Do not throw batteries into fire because they may cause an explosion.
- Unusable batteries should be discarded in accordance with battery recycling laws. Call the RBRC hotline on 1-800-822-8837 for information.

**Do not allow battery terminals to come into contact with metal objects (such as necklaces, hairpins, etc.).**

- This can cause short circuiting or heat generation and you may be badly burned if you touch the batteries.

**Never leave the camera and the batteries in a car or on a car dashboard in the summer.**

- It may cause leakage of the battery electrolyte, a generation of heat, and may cause a fire and batteries to burst due to the high temperature.

**■ Proper care and handling of batteries**

Mishandling batteries may cause leakage, heat generation, fire or explosion. Observe the following.

- Do not splash batteries with water/sea water or wet battery terminals.
- Do not peel off or scratch the covering on batteries.
- Do not drop, throw or subject batteries to other strong impacts.
- Do not use batteries that show signs of leakage, deformation, discoloration etc.
- Do not store batteries in high humidity areas or high temperatures.
- Keep batteries away from children.
- Remove the batteries if you do not intend to use the unit for a long time.
- Battery performance deteriorates and recording/playback time decreases when the ambient temperature is low [10 °C (50 °F) or less]. This is particularly true when using alkaline batteries so warm them in your pocket etc. before using them. Make sure that no metal objects such as a lighter are placed together with the batteries when warming them in your pocket.
- If there is grease or dirt on the battery poles, the recording/playback time may become extremely short. Before inserting the batteries, clean the battery terminals with a soft, dry cloth.

If battery leakage occurs, remove the batteries and thoroughly wipe the leakage in the battery compartment. Insert new batteries or fully charged Ni-MH batteries.

If battery electrolyte spills on your hands or clothes, thoroughly wash them with water. Battery electrolyte can cause loss of sight if it comes into contact with your eyes. Do not rub your eyes. Wash them immediately with clean water and consult a doctor.

**■ Ni-MH batteries (Nickel Metal Hydride)**

You can use Ni-MH batteries after charging them with a nickel metal hydride battery charger. However, improper handling of the batteries may cause leakage, heat generation, fire or explosion. Observe the following.

- If there is dirt on the battery poles, you may not be able to charge normally. Clean the battery poles and the battery recharger terminals with a soft, dry cloth.
- When charging batteries for the first time, or after having not used them for a long period of time, they may not charge fully. This is a feature of Ni-MH batteries and is not a malfunction. Battery performance will become normal after a few charges and discharges.
- We recommend charging the batteries after they are fully discharged. If you charge the batteries before they are fully discharged, it can reduce battery performance. This is called “memory effect”.
- If “memory effect” occurs, continue using the batteries until the camera stops working and then charge them fully. Battery performance will be restored after a few charges and discharges.
- Over time Ni-MH batteries naturally discharge and their capacity lowers even when they are not used.
- Once the batteries have reached full charge, do not continue to charge them.
- Do not peel off or scratch the covering on Ni-MH batteries.
- Read the operating instructions for the battery charger.

Ni-MH batteries have a limited life. Battery capacity gradually decreases over time. If the length of time you can use the camera is extremely short even after fully charging the batteries, they may have exceeded their life span. Purchase new batteries.

- Battery life differs depending on the conditions of storage and usage and the environment.

#### **When not using the batteries for a long period of time**

- If the batteries are left in the camera they will discharge. This is because a small electrical current continues to flow even when the camera is turned off. If the batteries continue to be left in the camera, they will discharge excessively and may become unusable even if charged.
- When storing the batteries for a long period of time, we recommend charging them once a year. Remove the batteries from the camera and store them again after they have completely discharged.

### **Card**

**Do not leave the card where the temperature is high, where electromagnetic waves or static electricity are easily generated or exposed to direct sunlight.**

**Do not bend or drop the card.**

- The card may be damaged or the recorded content may be damaged or erased.
- Store the card in the card case or the storage bag after use and when you store or carry the card.
- Do not allow dirt, dust or water to enter the terminals on the back of the card and do not touch the terminals with your fingers.

#### **When disposing of/transferring memory cards**

**If using the 'format' or 'delete' functions on your camera or computer, this only changes the file management information, and does not completely delete the data from within the memory card.**

**When disposing of or transferring your memory cards, we recommend physically destroying the memory card itself, or using commercially available computer data erasing software to completely delete the data from the card.**

**Data within memory cards should be managed responsibly.**

### **About private information**

When the name and birthday are set in [BABY1]/[BABY2] mode, the private information is included in the picture taken.

#### **Disclaimer**

- Information containing private information may be changed or lost due to operation mistake, static electricity, accident, malfunction, or repair.  
Panasonic assumes no liability for direct/indirect damage resulted from change or loss of information including private information.

#### **For service or transfer/disposal**

- Reset the settings to protect private information. (P23)
- When images exist in the built-in memory, copy them onto the memory card (P74) and then format the built-in memory (P24).
- Remove the memory card from this camera.
- The built-in memory settings may be restored to the factory settings after repaired.
- If the above operations are not possible due to malfunction condition, consult the place of purchase.

**For transfer/disposal of memory cards, refer to "When disposing of/transferring memory cards" (above).**

### When not using the camera for a long period of time

- Store the batteries in a cool and dry place with a relatively stable temperature. [Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F), Recommended humidity: 40% to 60%]
- Always remove the batteries and the card from the camera.
- If the batteries are left inserted in the camera they will discharge as a weak electric current passes through them even if the camera is turned off. [Read P86 for information about Ni-MH (nickel metal hydride) batteries.]
- We recommend storing the camera with a desiccant (silica gel) when you keep it in a closet or a cabinet.

### About the picture data

- Recorded data may be damaged or lost if the camera breaks down due to inappropriate handling. Panasonic will not be liable for any damage suffered due to loss of recorded data.

### About tripods

- When you use a tripod, make sure the tripod is stable when this unit is attached to it.
- You may not be able to remove the battery when using a tripod.
- Make sure that the screw on the tripod is not at an angle when attaching or detaching the camera. You may damage the screw on the camera if you use excessive force when turning it. Also, the camera body and the rating label may be damaged or scratched if the camera is attached too tightly to the tripod.
- Read the operating instructions for the tripod carefully.
- Some tripods cannot be attached when the DC coupler (optional: P103) is connected.



## Message Display

Confirmation messages or error messages will be displayed on the screen in some cases. The major messages are described below as examples.

### [THIS MEMORY CARD IS LOCKED]

- The Write-Protect switch on the SD Memory Card and the SDHC Memory Card are moved to [LOCK]. Move the switch back to unlock it. (P15)

### [NO VALID PICTURE TO PLAY]

- Record a picture or insert a card with a recorded picture and then play it.

### [THIS PICTURE IS PROTECTED]

- Delete the picture after canceling the protect setting. (P73)

### [THIS PICTURE CANNOT BE DELETED]/[SOME PICTURES CANNOT BE DELETED]

- Pictures not based on the DCF standard cannot be deleted.
  - If you want to delete some pictures, format the card after saving necessary data on a PC etc. (P24)

### [NO ADDITIONAL SELECTIONS CAN BE MADE]

- The number of pictures, which can be set at one time when [MULTI] has been selected for [DELETE MULTI] (P34), [FAVORITE] (P70), [TITLE EDIT] (P66), [TEXT STAMP] (P67) or [RESIZE] (P68) has been exceeded.
  - Reduce the number of pictures set, and then repeat the operation.
- More than 999 favorites have been set.

### [CANNOT BE SET ON THIS PICTURE]

- [TITLE EDIT], [TEXT STAMP] or [PRINT SET] cannot be set for pictures not based on the DCF standard.

### [NOT ENOUGH SPACE ON BUILT-IN MEMORY]/[NOT ENOUGH MEMORY ON THE CARD]

- There is no space left on the built-in memory or the card.
  - When you copy pictures from the built-in memory to the card (batch copy), the pictures are copied until the capacity of the card becomes full.

### [SOME PICTURES CANNOT BE COPIED]/[COPY COULD NOT BE COMPLETED]

- The following pictures cannot be copied.
  - When a picture with the same name as the picture to be copied exists in the copy destination. (When copying pictures from the card to the built-in memory)
  - Files not based on the DCF standard.
- Moreover, pictures recorded or edited by other equipment may not be copied.

### [BUILT-IN MEMORY ERROR FORMAT BUILT-IN MEMORY?]

- This message will be displayed when you format the built-in memory on a PC.
  - Format the built-in memory on the camera again. (P24) The data on the built-in memory will be deleted.

**[MEMORY CARD ERROR FORMAT THIS CARD?]**

- This card has a format which is not recognized by the camera.  
→ Format the card again with the camera after saving necessary data on a PC etc. (P24)

**[PLEASE TURN CAMERA OFF AND THEN ON AGAIN]/[SYSTEM ERROR]**

- This message appears when the camera is not operating properly.  
→ Turn the camera off and on. If the message persists, contact the dealer or your nearest Service Center.

**[MEMORY CARD PARAMETER ERROR]**

- Use a card compatible with this camera. (P15)
- You can only use an SDHC Memory Card if using cards with 4GB or more capacity.

**[MEMORY CARD ERROR PLEASE CHECK THE CARD]**

- Failed access to the card.  
→ Insert the card again.  
→ Insert a different card.

**[READ ERROR PLEASE CHECK THE CARD]/  
[WRITE ERROR PLEASE CHECK THE CARD]**

- It has failed to read or write data.  
→ Turn the camera off and remove the card. Insert the card again, turn the power on, and try to read or write the data again.
- The card may be broken.  
→ Insert a different card.

**[MOTION RECORDING WAS CANCELLED DUE TO THE LIMITATION OF THE WRITING SPEED OF THE CARD]**

- When you set the picture quality to [WVGA] or [VGA], we recommend using a high-speed card with "10MB/s" or greater displayed on the package.
- If the operation stops even if you use the card with memory size of 10MB/s or greater, this means the data-writing speed become lowered. We recommend backing up the data and formatting the card. (P24)
- Depending on the type of SD Memory Card or SDHC Memory Card, motion picture recording may stop in the middle.

**[A FOLDER CANNOT BE CREATED]**

- A folder cannot be created because there are no remaining folder numbers that can be used. (P76)  
→ Format the card after saving necessary data on a PC etc. (P24)

**[PICTURE IS DISPLAYED FOR 4:3 TV]/[PICTURE IS DISPLAYED FOR 16:9 TV]**

- The AV cable is connected to the camera.  
→ Press [MENU/SET] if you want to delete this message at once.  
→ Select [TV ASPECT] in the [SETUP] menu to change the TV aspect. (P23)
- This message also appears when the USB connection cable is connected to the camera only. In this case, connect the other end of the USB connection cable to a PC or a printer. (P75, 77)

**[PRINTER BUSY]/[PLEASE CHECK THE PRINTER]**

- The printer cannot print.  
→ Check the printer.

## Troubleshooting

First, try out the following procedures (P91–96).

If the problem is not resolved, it may be improved by selecting **[RESET] (P23)** on the **[SETUP]** menu when taking pictures.

### Batteries and power source

**The camera turns off immediately even when battery power is full.  
The remaining battery power is low even if new batteries are inserted.**

- Depending on the battery brand and the operating temperature, or if exhausted batteries are used, the remaining battery power may not be displayed accurately.

**The camera cannot be operated even when it is turned on.**

- Are the batteries inserted correctly? (P14)
- Use sufficiently charged batteries when using Ni-MH batteries.

**The LCD monitor turns off while the camera is turned on.**

- Is **[AUTO LCD OFF] (P22)** of the **[ECONOMY]** mode active?  
→ Press the shutter button halfway to cancel these modes.
- Are the batteries exhausted?

**The camera turns off soon after turning it on.**

- Are the batteries exhausted?
- If you leave the camera on, the batteries will be exhausted.  
→ Turn the camera off frequently by using Economy Mode (P22) etc.

### Shooting

**The picture cannot be recorded.**

- Is the mode correctly set? (P17)
- Is there any memory capacity left on the built-in memory or the card?  
→ Before recording, delete some pictures. (P33)

**The recorded pictures are pale.**

- The picture can become whitish if there is dirt e.g. fingerprints on the lens.  
→ If the lens is dirty, turn on the camera, eject the lens barrel (P10) and gently wipe the lens surface with a soft dry cloth.

**The area around where the pictures were taken becomes dark.**

- Was this picture taken with the flash at the close range when the zoom is near **[W] (1×)**?  
→ Zoom in a little, and then take the pictures. (P30)

**The recorded picture is too bright or dark.**

- Check that the exposure is correctly compensated. (P41)

**2 or 3 pictures are taken at one time.**

- Set other than **[HI-SPEED BURST] (P46)** in Scene Mode or set **[BURST] (P58)** to **[OFF]**.

**The subject is not focused properly.**

- The focus range varies depending on the Recording Mode.
  - Set the proper Recording Mode for the distance to the subject.
- Is the subject out of the focus range? (P25, 28 and 39)
- Have you taken a picture with jitter? (P30)

**The recorded picture is blurred. The optical image stabilizer is not effective.**

- The shutter speed becomes slower when pictures are taken in dark places so hold the camera firmly with both hands to take the pictures. (P25)
- When taking pictures at a slow shutter speed, use the self-timer. (P40)

**The recorded picture looks rough.****Noise appears on the picture.**


- Is the ISO sensitivity high or the shutter speed slow? (When set to [i.AUTO], ISO sensitivity increases for indoor and other shooting occasions.)
  - Reduce ISO sensitivity. (P55)
  - Set [COLOR MODE] to [NATURAL]. (P59)
  - Improve the ambient light.
- In [HIGH SENS.] and [HI-SPEED BURST] mode, the resolution of the recorded picture decreases slightly because of high sensitivity processing. This is not a malfunction.

**The brightness or the hue of the recorded picture is different from the actual scene.**

- If recording under fluorescent light, the brightness or the hue may change slightly when the shutter speed becomes fast. This occurs due to the characteristics of fluorescent light. It is not a malfunction.

**A reddish vertical line (smear) appears on the LCD monitor during picture-taking.**

- This is a characteristic of CCD, and it appears when the subject has a bright part. Some unevenness may occur in the surrounding areas, but this is not a malfunction. It is recorded in motion pictures but is not recorded on still pictures.
- It is recommended that you take pictures while taking care not to expose the screen to sunlight or any other source of strong light.

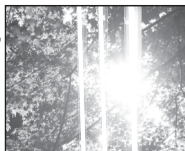**Motion picture recording stops in the middle.**

- Depending on the type of the card, recording may stop in the middle.
  - When you set the picture quality to [WVGA] or [VGA], we recommend using a high-speed card with "10MB/s" or greater displayed on the package.
  - If the recording stops even if you use the card of 10 MB/s or faster, this means the data-writing speed became lowered. We recommend backing up the data and formatting (P24) the card.
- Are you using a MultiMediaCard? This unit does not support MultiMediaCards.

**Recorded image may be warped, or nonexistent color is surrounding the subject.**

- It is possible that the subject may be warped slightly, or the borders get colored, depending on the zoom magnification, due to the characteristics of the lens. Also, the peripherals of the image might look warped because the perspective is enhanced when the wide angle is used. This is not a malfunction.

## LCD monitor

### The LCD monitor turns off although the camera is turned on.

- When the camera is not operated for a while, [POWER SAVE] or [AUTO LCD OFF] is activated for [ECONOMY]. (P22)
- If the LCD monitor turns off when you press the shutter button halfway, the batteries may run out.

### The LCD monitor darkens during use.

- This camera automatically charges for flash recording and may darken the LCD monitor for efficient charge. The monitor may darken in the following cases;
  - After flash recording
  - Just after turning the camera ON
  - Just after setting to Recording Mode
  - When adjusting the zoom or pointing the camera toward dark side
 The LCD monitor lights up again to return to recording-ready condition after charging for flash.

### The LCD monitor becomes darker or brighter for a moment.

- This phenomenon appears when pressing the shutter button halfway to set the aperture value and does not affect the recorded pictures.
- This phenomenon also appears when the brightness changes when the camera is zoomed or moved. This is because of operation of the automatic aperture of the camera, and it is not a malfunction.

### The LCD monitor flickers indoors.

- The LCD monitor may flicker for a few seconds after turning the camera on indoors under fluorescent light. This is not a malfunction.

### The LCD monitor is too bright or dark.

- Is the [POWER LCD] or the [HIGH ANGLE] mode activated? (P22)

### Black, red, blue and green dots appear on the LCD monitor.

- This is not a malfunction. These pixels do not affect the recorded pictures.

### Noise appears on the LCD monitor.

- In dark places, noise may appear to maintain the brightness of the LCD monitor. This does not affect the pictures you are recording.

### Uneven colors come on the LCD monitor.

- If you press the LCD monitor with excessive force, uneven colors may appear on it.

## Flash

### Flash is not activated.

- Is the flash setting set to Forced OFF [☹]?  
→ Change the flash setting. (P36)
- Flash Mode is not available when [BURST] (P58) in [REC] menu has been set.
- Flash is not available depending on Scene Mode. (P37)

### The flash is activated 2 times.

- The flash is activated twice when Red-eye Reduction (P36) has been set.

## Playback

### The picture being played back is rotated and displayed in an unexpected direction.

- [ROTATE DISP.] (P70) is set to [ON].

### The picture is not played back.

- Is the recording/playback switch set to playback [▶]? (P17)
- Is there a picture on the built-in memory or the card?
  - The pictures on the built-in memory appear when a card is not inserted. The picture data on the card appears when a card is inserted.
- Is this a picture whose file name has been changed in the PC? If it is, it cannot be played back by this unit.

### The recorded pictures are not displayed.

- Has [FAVORITE PLAY] been set for playback?
  - Change to [NORMAL PLAY]. (P18)

### The folder number and the file number are displayed as [—] and the screen turns black.

- Is this a non-standard picture, a picture which has been edited using a PC or a picture which was taken by another make of digital camera?
- Did you remove the batteries immediately after picture-taking or did you take the picture using the batteries with a low remaining charge?
  - Format the card to delete the pictures mentioned above. (P24)  
(Other pictures will be deleted as well and it will not be possible to restore them. Therefore, check well before formatting.)

### With a calendar search, pictures are displayed on dates differing from the actual dates on which the pictures were taken.

- Is the clock in the camera set properly? (P16)
- When pictures edited using a PC or pictures taken by other equipment are searched, they may be displayed on dates differing from the actual dates on which the pictures were taken.

### White round spots like soap bubbles appear on the recorded picture.

- If you take a picture with the flash in a dark place or indoors, white round spots may appear on the picture caused by the flash reflecting of particles of dust in the air. This is not a malfunction. A characteristic of this is that the number of round spots and their position differ in every picture.



### [THUMBNAIL IS DISPLAYED] appears on the screen.

- Is it a picture that has been recorded with other equipment? In such cases, these pictures may be displayed with a deteriorated picture quality.

### A clicking sound is recorded in the motion pictures.

- This unit automatically adjusts the aperture during motion picture recording. At such times, a clicking sound is heard, and this sound may be recorded on the motion pictures. This is not a malfunction.

## TV, PC and printer

### The picture does not appear on the television.

- Is the camera connected to the TV correctly?  
→ Set the TV to video input mode. (P81)

### The display areas on the TV screen and the camera's LCD monitor are different.

- Depending on the TV model, the pictures may be extended horizontally or vertically or they may be displayed with their edges cut off.

### The motion pictures cannot be played back on a TV.

- Are you trying to play back the motion pictures by directly inserting the card in the card slot of the TV?  
→ Connect the camera to the TV with the AV cable (optional), and then play back the motion pictures on the camera. (P64, 81)

### The picture size does not fit the TV screen.

- Check the [TV ASPECT] setting on this unit. (P23)

### The picture cannot be transferred when the camera is connected to a PC.

- Is the camera connected to the PC correctly?
- Is the camera recognized by the PC correctly?  
→ Select [PC] when connecting. (P75)

### The card is not recognized by the PC. (The built-in memory is recognized.)

- Disconnect the USB connection cable. Connect it again while the card is inserted in the camera.

### The picture cannot be printed when the camera is connected to a printer.



- Is the camera connected to the printer correctly?
- Pictures cannot be printed using a printer which does not support PictBridge.  
→ Select [PictBridge(PTP)] when connecting. (P77)

### The ends of the pictures are cut at printing.

- When using a printer with a trimming or borderless printing function, cancel this function before printing. (For details, refer to the operating instructions for the printer.)
- When you order photo studios to print pictures, ask the photo studio if the 16:9 pictures can be printed.

## Others

### An unreadable language was selected by mistake.

- Press [MENU/SET], select the [SETUP] menu icon [  ] and then select the [  ] icon to set the desired language. (P24)

### When the shutter button is pressed halfway, a red lamp turns on sometimes.

- In dark places, the AF assist lamp (P60) lights red to make it easier to focus on a subject.

**The AF assist lamp does not turn on.**

- Is [AF ASSIST LAMP] on the [REC] menu set to [ON]? (P60)
- The AF assist lamp does not turn on in bright places.

**The camera and batteries become warm.**

- The surface of the camera during use and the batteries immediately after a long time use become warm. This does not cause a problem with the performance or quality of the camera.

**The lens clicks.**

- When brightness has changed due to the zoom or the movement of the camera or other, the lens may click and the picture on the screen may be drastically changed, however, the pictures are not affected. The sound is caused by automatic adjustment of the aperture. It is not a malfunction.

**The clock is reset.**

- If you do not use the camera for a long time, the clock setting may be reset.  
→ When the message [PLEASE SET THE CLOCK] appears, set the clock again. (P16)  
When you take a picture before setting the clock, [0:00 0. 0. 0] is recorded.

**When pictures are taken using the zoom, they are slightly distorted and the areas around the subject contain colors which are not actually present.**

- It is possible that the subject may be warped slightly or the borders get colored, depending on the zoom magnification, but this is not malfunction.

**Zooming stops instantaneously.**

- When using the Extended Optical Zoom, the zooming action will stop temporarily near [W]. This is not a malfunction.

**File numbers are not created in order.**

- Certain operations cause pictures to be saved in folders with different numbers. (P76)

**The file numbers are recorded in ascending order.**

- If the batteries are inserted or removed without first turning the camera's power off, the folder and file numbers for the pictures taken will not be stored in the memory. When the power is then turned back on and pictures are taken, they may be stored under file numbers which should have been assigned to previous pictures.

**[AGE] is not displayed correctly.**

- Check the clock (P16) and birthday settings (P45, 46).

**The lens barrel is retracted.**

- The lens barrel retracts about 15 seconds after switching from Recording Mode to Playback Mode.

**If the camera is left for a while, [DEMO MODE] is suddenly started.**









- This is an auto demo to introduce this unit. Press any button to return to the previous screen.













## Number of Recordable Pictures and Available Recording Time

- The number of recordable pictures and the available recording time are an approximation. (These vary depending on the recording conditions and the type of card.)
- The number of recordable pictures and the available recording time vary depending on the subjects.

### ■ Number of recordable pictures

Picture size		4:3 [8M] (3264 × 2448 pixels)		4:3 [5M  (2560 × 1920 pixels)		4:3 [3M  (2048 × 1536 pixels)	
Quality							
Built-in Memory (Approx. 50 MB)		12	25	20	40	32	62
Card	32 MB	6	14	11	23	18	36
	64 MB	14	30	24	48	38	75
	128 MB	30	61	50	99	78	150
	256 MB	61	120	98	190	150	290
	512 MB	120	240	195	380	300	590
	1 GB	240	480	390	770	600	1180
	2 GB	490	970	790	1530	1220	2360
	4 GB	970	1910	1560	3010	2410	4640
	6 GB	1470	2910	2380	4580	3660	7050
	8 GB	1980	3890	3180	6130	4910	9440
	12 GB	2980	5880	4810	9260	7400	14240
16 GB	3980	7840	6410	12350	9880	19000	
32 GB	7990	15730	12870	24780	19820	38120	

Picture size		3:2 [7M] (3264 × 2176 pixels)		3:2 [2.5M  (2048 × 1360 pixels)	
Quality					
Built-in Memory (Approx. 50 MB)		13	28	36	69
Card	32 MB	7	16	20	40
	64 MB	16	33	43	83
	128 MB	34	69	88	165
	256 MB	68	135	170	330
	512 MB	135	260	340	650
	1 GB	270	530	680	1310
	2 GB	550	1070	1360	2560
	4 GB	1080	2110	2680	5020
	6 GB	1650	3210	4070	7640
	8 GB	2210	4300	5450	10230
	12 GB	3330	6490	8230	15430
	16 GB	4450	8660	10980	20590
32 GB	8930	17390	22020	41300	

Picture size		16:9 [6M] (3264 × 1840 pixels)		16:9 [2M  (1920 × 1080 pixels)	
Quality					
Built-in Memory (Approx. 50 MB)		16	33	47	91
Card	32 MB	9	19	27	53
	64 MB	19	40	57	105
	128 MB	41	81	115	220
	256 MB	80	155	220	430
	512 MB	160	310	450	860
	1 GB	320	630	900	1720
	2 GB	650	1270	1800	3410
	4 GB	1280	2510	3540	6700
	6 GB	1950	3820	5390	10190
	8 GB	2610	5110	7220	13640
	12 GB	3940	7710	10890	20580
	16 GB	5250	10290	14530	27450
32 GB	10540	20650	29150	55070	

### ■ Available recording time (In Motion Picture Mode)

Picture quality setting		WVGA	VGA	QVGA
Built-in Memory (Approx. 50 MB)		—	—	1 min 37 s
Card	32 MB	16 s	17 s	56 s
	64 MB	37 s	39 s	1 min 58 s
	128 MB	1 min 18 s	1 min 22 s	4 min
	256 MB	2 min 35 s	2 min 40 s	7 min 50 s
	512 MB	5 min 10 s	5 min 20 s	15 min 40 s
	1 GB	10 min 20 s	10 min 50 s	31 min 20 s
	2 GB	21 min 20 s	22 min 10 s	1 h 4 min
	4 GB	41 min 50 s	43 min 40 s	2 h 5 min
	6 GB	57 min	1 h 6 min	3 h 11 min
	8 GB	1 h 25 min	1 h 28 min	4 h 15 min
	12 GB	1 h 55 min	2 h 14 min	6 h 26 min
	16 GB	2 h 52 min	2 h 59 min	8 h 35 min
32 GB	5 h 45 min	5 h 59 min	17 h 13 min	

The volume of motion picture is limited to 2 GB per recording session. The maximum available recording time for up to 2 GB only is displayed on the screen.

#### Note

- The number of recordable pictures and the available recording time displayed on the LCD monitor may not decrease in order.
- This unit does not support recording motion pictures on MultiMediaCards.
- The Extended Optical Zoom does not work in [HIGH SENS.] and [HI-SPEED BURST] mode so the picture size for [EZ] is not displayed.

## Specifications

<b>Digital Camera:</b>	Information for your safety
<b>Power Source:</b>	DC 3.0 V
<b>Power Consumption:</b>	1.2 W (When recording) 0.6 W (When playing back)
<b>Camera Effective pixels:</b>	8,100,000 pixels
<b>Image sensor:</b>	1/2.5" CCD
<b>Total pixels:</b>	8,320,000 pixels Primary color filter
<b>Lens:</b>	Optical 4 × zoom, f=5.5 to 22 mm [35 mm film camera equivalent: 33 to 132 mm] / F2.8 to F5.9
<b>Digital zoom:</b>	Max. 4 ×
<b>Extended optical zoom:</b>	Max. 6.4 ×
<b>Focus:</b>	Normal / Macro Face detection / 9-area-focusing / 1-area-focusing
<b>Focus range:</b>	Normal : 50 cm (1.64 feet) to ∞ Macro / Intelligent auto: 5 cm (0.17 feet) (Wide) / 50 cm (1.64 feet) (Tele) to ∞ Scene mode: settings may be different to those shown above
<b>Shutter system:</b>	Electronic shutter+Mechanical shutter
<b>Motion picture recording:</b>	[WVGA] 848 × 480 pixels (30 frames/second) (When a card is used.) [VGA] 640 × 480 pixels (30 frames/second) (When a card is used.) [QVGA] 320 × 240 pixels (30 frames/second) With audio
<b>Burst recording</b>	
<b>Burst speed:</b>	Approx. 3 pictures/second (NORMAL), Approx. 2 pictures/second (Unlimited)
<b>Number of recordable pictures:</b>	Max. 7 pictures (Standard), max. 4 pictures (Fine), Depends on the remaining capacity of the built-in memory or the card (Unlimited).
<b>Hi-speed burst</b>	
<b>Burst speed:</b>	Approx. 4.5 pictures/second
<b>Picture size:</b>	[ 4:3 3M], [ 3:2 2.5M] or [ 16:9 2M] is selected as the picture size.

<b>Number of recordable pictures:</b>	When using the built-in memory: Approx. 10 pictures (immediately after formatting) When using a Card: Max. 100 pictures (differs depending on the type of Card and the recording conditions)
<b>ISO sensitivity:</b>	i.AUTO/ 80 / 100 / 200 / 400 / 800 / 1600 [HIGH SENS.] mode: 1600 to 6400
<b>Shutter speed:</b>	8 seconds to 1/2,000th of a second [STARRY SKY] mode: 15 seconds, 30 seconds, 60 seconds
<b>White balance:</b>	Auto white balance / Daylight / Cloudy / Shade / Halogen / White set
<b>Exposure (AE):</b>	Program AE Exposure compensation (1/3 EV Step, -2 EV to +2 EV)
<b>Metering mode:</b>	Multiple
<b>LCD monitor:</b>	TFT LCD 2.5" (Approx. 230,000 dots) (field of view ratio about 100%)
<b>Flash:</b>	Flash range: Approx. 30 cm (0.99 feet) to 5.9 m (19.36 feet) (Wide [i.AUTO]) AUTO, AUTO / Red-eye reduction, Forced ON (Forced ON / Red-eye reduction), (Slow sync. / Red-eye reduction), Forced OFF
<b>Microphone:</b>	Monaural
<b>Speaker:</b>	Monaural
<b>Recording media:</b>	Built-in Memory (Approx. 50 MB) / SD Memory Card / SDHC Memory Card / MultiMediaCard (Still pictures only)
<b>Picture size</b>	
<b>Still picture:</b>	[ 4:3 8M] 3264 x 2448 pixels, [ 4:3 5M] 2560 x 1920 pixels, [ 4:3 3M] 2048 x 1536 pixels [ 3:2 7M] 3264 x 2176 pixels, [ 3:2 2.5M] 2048 x 1360 pixels [ 16:9 6M] 3264 x 1840 pixels, [ 16:9 2M] 1920 x 1080 pixels
<b>Motion pictures:</b>	[WVGA] 848 x 480 pixels (When a card is used.), [VGA] 640 x 480 pixels (When a card is used.), [QVGA] 320 x 240 pixels
<b>Quality:</b>	Fine/Standard
<b>Recording file format</b>	
<b>Still Picture:</b>	JPEG (based on "Design rule for Camera File system", based on "Exif 2.21" standard)/DPOF corresponding
<b>Motion pictures:</b>	"QuickTime Motion JPEG" (motion pictures with audio)
<b>Interface</b>	
<b>Digital:</b>	USB 2.0 (Full Speed)
<b>Analog video / audio:</b>	NTSC / Audio line output (monaural)

**Terminal**

**AV OUT/DIGITAL:** Dedicated jack (8 pin)

**DC IN:** Type1 jack (Only when using DC coupler)

**Dimensions:** 3.89" (W) × 2.48" (H) × 1.19" (D)  
(96.7 mm (W) × 62.0 mm (H) × 29.8 mm (D))  
(excluding the projection part)


**Mass (Weight):** Approx. 0.28 lb/128 g  
(excluding Memory Card and battery)  
Approx. 0.38 lb/176 g  
(with Memory Card and battery)

**Operating Temperature:** 0 °C to 40 °C (32 °F to 104 °F)


**Operating Humidity:** 10% to 80%

## Digital Camera Accessory System

DC coupler:  
DMW-DCC2

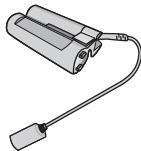

AC Adaptor:  
DMW-AC6PP

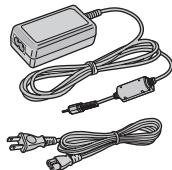


- Purchase DC coupler and AC adaptor together. You cannot use either of them individually.

AV Cable:  
DMW-AVC1




Soft Case:  
DMW-CLZ10

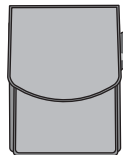

Semi Hard Case:  
DMW-CHT33



 SDHC Memory Card  
SD Memory Card




32 GB SDHC Memory Card ....	RP-SDV32GU1K
16 GB SDHC Memory Card ....	RP-SDV16GU1K
12 GB SDHC Memory Card ....	RP-SDM12GU1K
8 GB SDHC Memory Card .....	RP-SDV08GU1K
6 GB SDHC Memory Card .....	RP-SDM06GU1K
4 GB SDHC Memory Card .....	RP-SDM04GU1K
4 GB SDHC Memory Card .....	RP-SDV04GU1K
2 GB SD Memory Card .....	RP-SDM02GU1A
2 GB SD Memory Card .....	RP-SDV02GU1A
1 GB SD Memory Card .....	RP-SDR01GU1A

- NOTE: Accessories and/or model numbers may vary by country. Please consult your local dealer.

### ■ Connecting DC coupler and AC adaptor to the camera

Read operating instructions on how to connect the DC coupler to the camera.

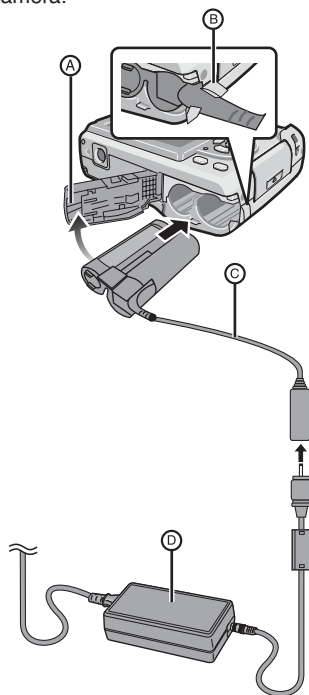

- Ⓐ Battery door
- Ⓑ DC coupler door
  - Open the DC coupler door in advance.
- Ⓒ DC coupler
- Ⓓ AC adaptor
- Make sure the battery door is closed.
- Use specified DC coupler and AC adaptor (left). Using other products may cause malfunction.

# Digital Camera Accessory Order Form

(For USA and Puerto Rico Customers)

Please photocopy this form when placing an order.

1. Digital Camera Model # \_\_\_\_\_

2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price
Subtotal				
Your State & Local Sales Tax				
Shipping & Handling				6.95
Total Enclosed				

3. Method of payment (check one)

- Check of Money Order enclosed (NO C.O.D.SHIPMENTS)
- VISA                      Credit Card # \_\_\_\_\_
- MasterCard              Expiration Date \_\_\_\_\_
- Discover                    Customer Signature \_\_\_\_\_

Make Check or Money Order to: PANASONIC ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms.

First \_\_\_\_\_ Last \_\_\_\_\_

Phone#:

Day ( ) \_\_\_\_\_

Street Address \_\_\_\_\_

Night ( ) \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

TO OBTAIN ANY OF OUR DIGITAL CAMERA ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER

OR

CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368

[6 AM-6 PM M-F, PACIFIC TIME]

OR

MAIL THIS ORDER TO: PANASONIC SERVICE AND TECHNOLOGY COMPANY

ACCESSORY ORDER OFFICE

20421 84th Avenue South Kent, WA. 98032

In CANADA, please contact your local Dealer for more information about accessories.



## Request for Service Notice (For USA and Puerto Rico Only)

Please photocopy this form when making a request for service notice.

In the unlikely event this product needs service.

### **Request for Service Notice: (USA and Puerto Rico Only)**

- Please include your **proof of purchase**.  
(Failure to do so will delay your repair.)
- To further speed your repair, please provide an explanation of what wrong with the unit and any symptom it is exhibiting.

---

---

---

Mail this completed form and your Proof of Purchase along with your unit to:  
Panasonic Camera and Digital Service Center  
1590 Touhy Ave.  
Elk Grove Village, IL 60007

## Limited Warranty (For USA and Puerto Rico Only)

PANASONIC CONSUMER ELECTRONICS COMPANY, DIVISION OF PANASONIC CORPORATION OF NORTH AMERICA  
One Panasonic Way, Secaucus, New Jersey 07094

### Panasonic Digital Still Camera Limited Warranty

#### Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or refurbished product. The decision to repair or replace will be made by the warrantor.

<b>PRODUCT OR PART NAME</b>	<b>PARTS</b>	<b>LABOR</b>
<b>DIGITAL STILL CAMERA</b> (EXCEPT ITEMS LISTED BELOW)	<b>1 (ONE) YEAR</b>	<b>1 (ONE) YEAR</b>
<b>CCD</b>	<b>6 (SIX) MONTHS</b>	<b>90 (NINETY) DAYS</b>
<b>RECHARGEABLE BATTERY PACK</b> (IN EXCHANGE FOR DEFECTIVE BATTERY PACK)	<b>90 (NINETY) DAYS</b>	<b>NOT APPLICABLE</b>
<b>SD MEMORY CARD</b> (IN EXCHANGE FOR DEFECTIVE SD CARD)	<b>90 (NINETY) DAYS</b>	<b>NOT APPLICABLE</b>

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must carry-in or mail-in your product during the warranty period. If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

## **Carry-In or Mail-In Service**

For Carry-In or Mail-In Service in the United States and Puerto Rico call 1-800-211-PANA (7262).

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Service center or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.** (As examples, this excludes damages for lost time, travel to and from the servicer, loss of media or images, data or other memory content. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

**PARTS AND SERVICE WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.**

## Customer Services Directory (For USA and Puerto Rico Only)

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/help>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-800-211-PANA (7262),

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST

For hearing or speech impaired TTY users, TTY :1-877-833-8855

### *Accessory Purchases (United States and Puerto Rico)*

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pstc.panasonic.com>

or, send your request by E-mail to:

[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)

(Monday - Friday 9 am to 9 pm, EST.)

PANASONIC SERVICE AND TECHNOLOGY COMPANY

20421 84th Avenue South, Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

For hearing or speech impaired TTY users, TTY :1-866-605-1277

### *Product Repairs (United States and Puerto Rico)*

#### Centralized Factory Service Center

Panasonic Camera and Digital Service Center

1590 Touhy Ave.

Elk Grove Village, IL 60007

MAIL TO :

Please carefully pack and ship, prepaid and insured, to the Elk Grove Village Centralized Factory Service Center.

As of October 2008

## Précautions à prendre (pour le Canada)

### AVERTISSEMENT:

POUR RÉDUIRE TOUT RISQUE D'INCENDIE, DE CHOC ÉLECTRIQUE OU DE DOMMAGE,

- N'EXPOSEZ PAS CET APPAREIL À LA PLUIE, À L'HUMIDITÉ, AUX GOUTTES OU ÉCLABOUSSURES ET ASSUREZ-VOUS QU'AUCUN OBJET OU VASE REMPLI DE LIQUIDE NE SOIT PLACÉ SUR L'APPAREIL.
- N'UTILISEZ QUE LES ACCESSOIRES RECOMMANDÉS.
- NE RETIREZ PAS LE COUVERCLE (OU LE PANNEAU ARRIÈRE) ; AUCUNE PIÈCE INTERNE NE PEUT ÊTRE RÉPARÉE PAR L'UTILISATEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

LA PRISE DE COURANT DOIT SE TROUVER À PROXIMITÉ DE L'APPAREIL ET ÊTRE FACILEMENT ACCESSIBLE.

### MISE EN GARDE

Une pile de remplacement inappropriée peut exploser. Ne remplacez qu'avec une pile identique ou d'un type recommandé par le fabricant. L'élimination des piles usées doit être faite conformément aux instructions du fabricant.

Une plaque signalétique se trouve en-dessous de l'appareil.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

- Utilisez toujours un adaptateur secteur (modèle DMW-AC6PP, vendu séparément) et un coupleur c.c. Panasonic (modèle DMW-DCC2, vendu séparément).
- N'utilisez pas d'autres câbles de connexion USB à l'exception de celui fourni.
- N'utilisez pas un câble autre qu'un câble original de Panasonic AV (DMW-AVC1: vendu séparément).
- Conservez la carte mémoire hors de portée des enfants afin qu'ils ne puissent pas l'avaler.

### À propos des piles

- N'exposez pas les piles à la flamme ou à la chaleur.
- Ne laissez pas la ou les batteries dans un véhicule exposé au soleil avec vitres et portes fermées pendant une longue période de temps.

**Évitez d'approcher l'appareil photo de tout équipement magnétisé (four à micro-ondes, téléviseur, équipement de jeux vidéo, etc.).**

- Si vous utilisez l'appareil photo à proximité d'un téléviseur, les radiations électromagnétiques pourraient nuire au son et à l'image.
- N'utilisez pas l'appareil photo à proximité d'un téléphone cellulaire; cela pourrait entraîner un bruit nuisible à l'image et au son.
- Le puissant champ magnétique de haut-parleurs ou de moteurs peut endommager les données enregistrées sur support magnétique et distordre les images.
- Les ondes électromagnétiques émises par un microprocesseur peuvent nuire à l'appareil photo numérique et perturber l'image et le son.
- Advenant le cas où le fonctionnement de l'appareil serait dérangé par un champ magnétique, coupez le contact, retirez les piles ou débranchez l'adaptateur secteur (modèle DMW-AC6PP; en option) pour ensuite soit remettre la batterie en place, soit rebrancher l'adaptateur. Remettez l'appareil en marche.

**N'utilisez pas l'appareil photo à proximité d'un émetteur radio ou de lignes à haute tension.**

- L'utilisation de l'appareil photo à proximité d'un émetteur radio ou de lignes à haute tension pourrait perturber les images enregistrées.

# Index

## A

AC adaptor .....	75, 77, 103
Access indication .....	15
Aerial photo mode .....	48
AF area .....	25, 29
AF assist lamp .....	60
AF mode .....	57
Auto demo .....	24
Auto LCD off .....	22
Auto power LCD .....	22
Auto review .....	23
Auto white balance .....	56
Available recording time .....	49, 99
AV cable .....	81

## B

Baby mode .....	45
Backlight compensation .....	26
Batteries .....	12, 13, 85, 86
Beach mode .....	48
Beep .....	21
Built-in memory .....	15
Burst .....	58

## C

Calendar .....	65
Candle light mode .....	45
Card .....	15
Clock set .....	16
Color mode .....	59
Compensating the exposure .....	41
Condensation .....	5
Copy .....	74

## D

Date printing .....	72
DC coupler .....	75, 77, 103
DCF standard .....	33
Deleting pictures .....	33
Demonstration of jitter/ movement detection screen .....	24
Demo mode .....	24
Digital zoom .....	30, 58
Display size .....	22, 35
Direction detection .....	30
DPOF .....	71

## E

Economy mode .....	22
Extended optical zoom .....	30
EZ .....	30

## F

Face detection .....	26
Favorite .....	70
Favorite play .....	63
File number .....	32, 76
Fine .....	54
Fireworks mode .....	47
Flash .....	36
Focus .....	25, 28, 29, 39
Folder .....	76
Food mode .....	44
Format .....	24

## G

Guide line display .....	35
--------------------------	----

## H

High-speed burst mode .....	46
High angle .....	22
High sensitivity mode .....	46

## I

Intelligent auto mode .....	25
ISO sensitivity .....	55

## J

Jitter .....	24, 30, 59
--------------	------------

## L

Language setting .....	24
LCD mode .....	22
LCD monitor .....	35, 82

## M

Macro shooting .....	39
Maintenance .....	84
Motion picture mode .....	49
Multi playback .....	32

<b>N</b>		<b>S</b>	
Night portrait mode .....	44	Scene detection .....	26
Night scenery mode .....	44	Scene mode .....	42
Normal picture mode .....	28	Scenery mode .....	44
Number of prints .....	71, 79	Self portrait mode .....	43
Number of recordable pictures .....	97	Self-timer .....	40
		[SETUP] menu .....	21
<b>O</b>		Slide show .....	61
Optical zoom .....	30	Snow mode .....	48
		Soft skin mode .....	43
<b>P</b>		Speaker volume .....	21
Page layout .....	80	Sports mode .....	44
Paper size .....	79	Stabilizer .....	59
Party mode .....	45	Standard .....	54
Pet mode .....	46	Starry sky mode .....	47
PictBridge .....	77	Status indicator .....	11, 25
Picture quality setting .....	49	Sunset mode .....	46
Picture size .....	54		
[PLAYBACK] menu .....	65	<b>T</b>	
Playback motion pictures .....	64	Text stamp .....	67
Playback zoom .....	33	Thumbnail .....	94
Portrait mode .....	43	Title edit .....	66
Power LCD .....	22	Travel date .....	51
Power save .....	22	Tripod .....	88
Print .....	77	TV .....	81
Print set .....	71, 79	TV aspect .....	23
Protect .....	73		
PTP .....	76	<b>U</b>	
		USB connection cable .....	75, 77
<b>Q</b>			
Quality .....	54	<b>V</b>	
Quick menu .....	20	Version display .....	23
<b>R</b>		<b>W</b>	
[REC] menu .....	54	White balance .....	55
Reset .....	23	World time .....	52
Resize .....	68		
Rotate display .....	70	<b>Z</b>	
		Zoom .....	30



---

# MEMO

# MEMO

---

# MEMO



QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.

**Panasonic Consumer Electronics Company,**  
Division of Panasonic Corporation of North America  
One Panasonic Way, Secaucus, NJ 07094

**Panasonic Canada Inc.**  
5770 Ambler Drive, Mississauga, Ontario, L4W 2T3

© Panasonic Corporation 2008



Printed in China  
VQT1X05  
H1208YR0