 


Step 1 Connection

- Other connections (when you also want to connect an amplifier, etc.).
- ➔ Operating Instructions (P16–22).

 
With a TV

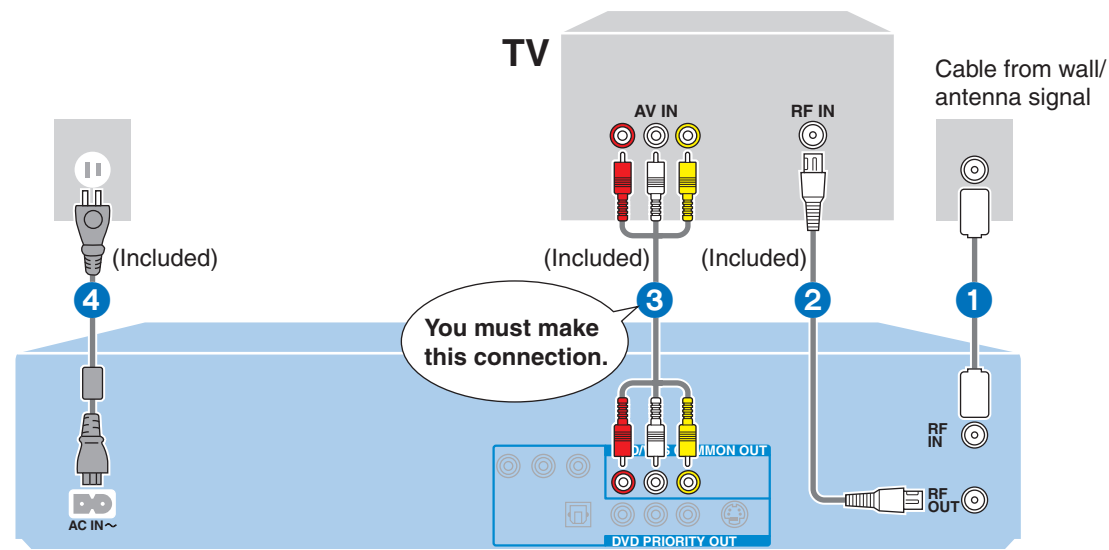

This unit

■ If your TV does not have AV terminals

(Instead of 2 and 3)

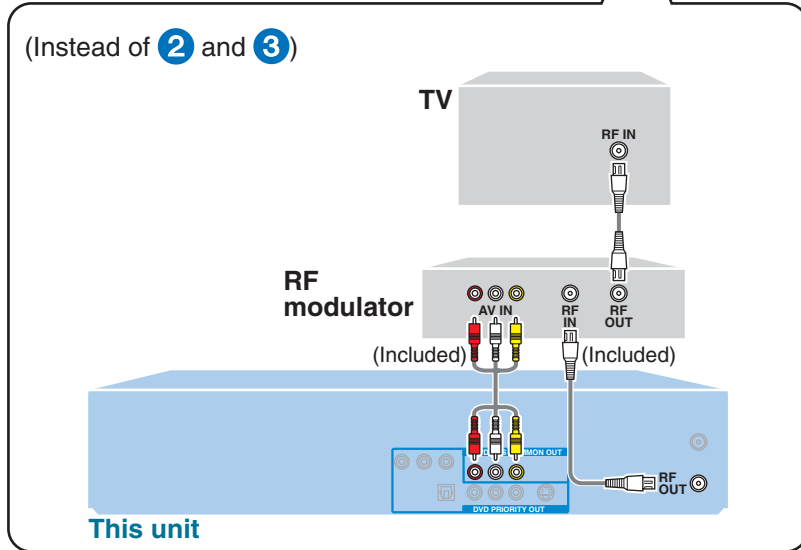


This unit

➔ Go to Step 2

DVD output and DVD/VHS output

 The unit has DVD/VHS COMMON output terminals and DVD PRIORITY output terminals.

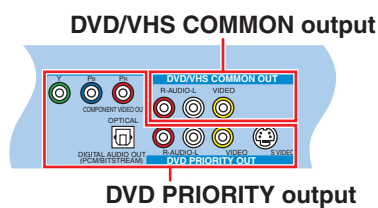


DVD/VHS COMMON OUT

For DVD/VHS COMMON output terminals, both DVD and VHS signals can be output.

DVD PRIORITY OUT

You can also playback a tape with the DVD PRIORITY output terminal except while recording, or making a scheduled recording, on the DVD.

 
With a TV and cable box or DirecTV receiver

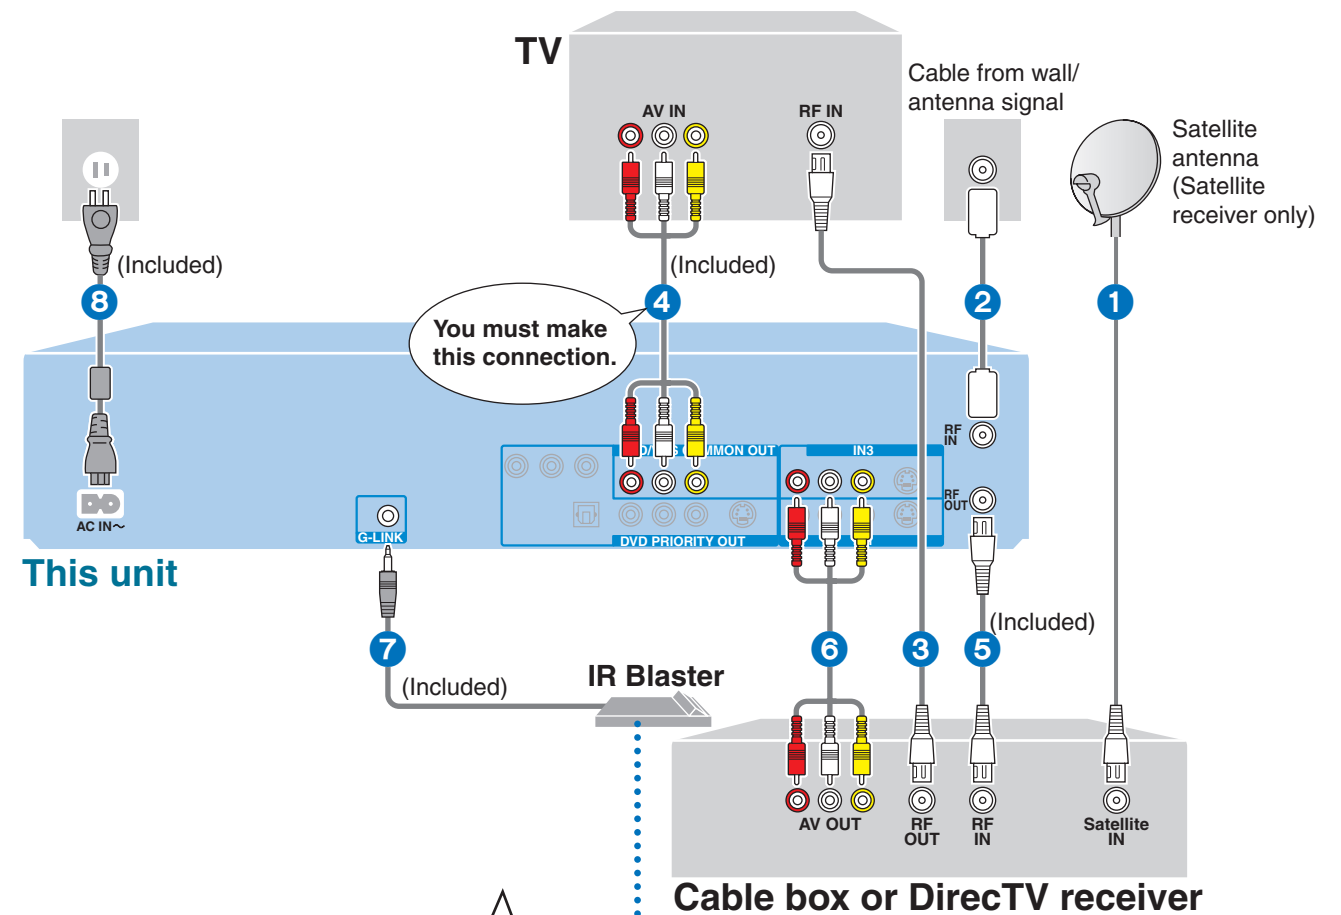

This unit

■ If your TV does not have AV terminals

 (Instead of 3 and 4)

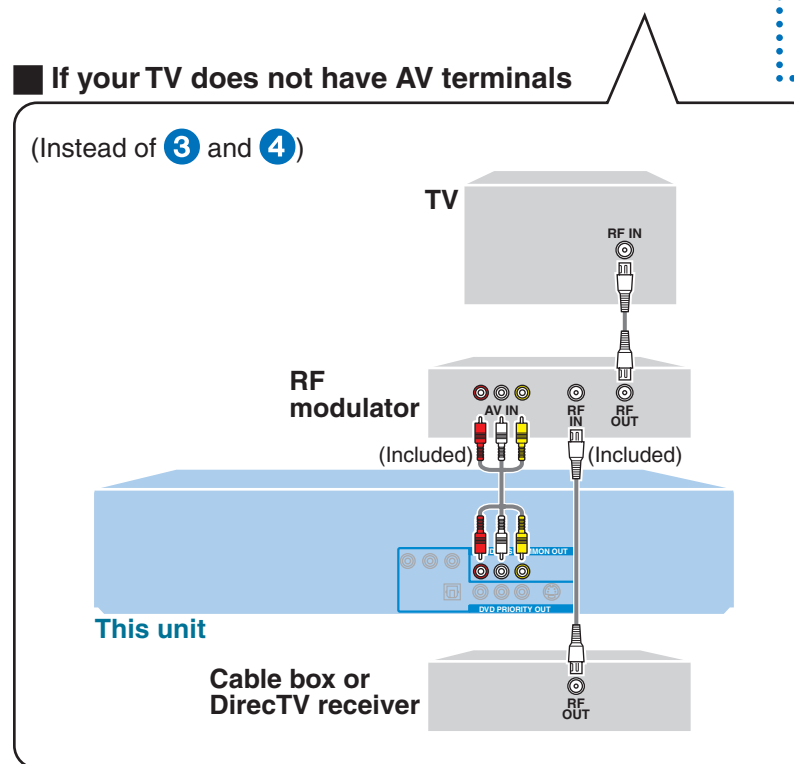


This unit

Cable box or DirecTV receiver

Connecting and positioning the IR Blaster

 The IR Blaster is a device that allows this unit to communicate with the cable box or DirecTV receiver. If you connect a cable box or a DirecTV receiver to this unit, you also need to attach the IR Blaster.

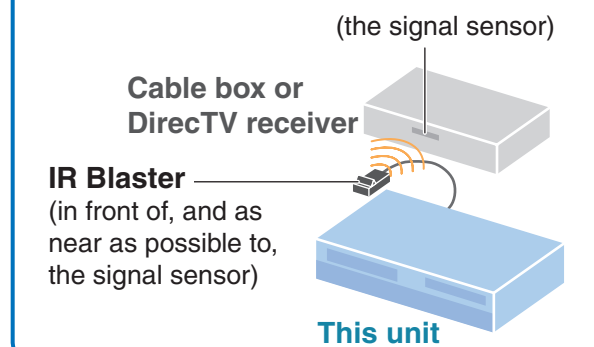

➔ Go to Step 2



Preparing TV On your TV's remote control

 
 
- 1 Turn the TV on.**
- 2 Switch input to "Video1" etc.**
e.g. the TV/VIDEO or INPUT button
 - Turn on the cable box or DirecTV receiver if one is used.



3 Turn this unit on.





4 Select the language.

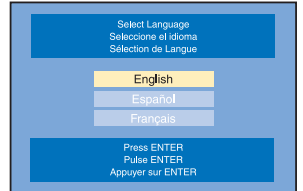


• If you make a mistake, press [RETURN].

  5 Select the type of TV you are using.


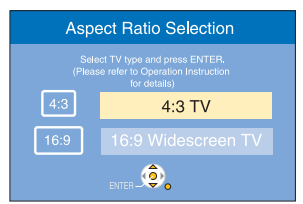


6 Start the TV Guide settings.



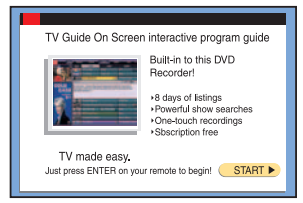 


• Follow the on screen instructions
➔ Select "Next" and press [ENTER] to go to the next screen.

  7 Confirm the settings.

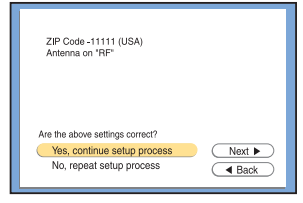

   (Depending on the equipment that you connected, one of the following screens appears.)

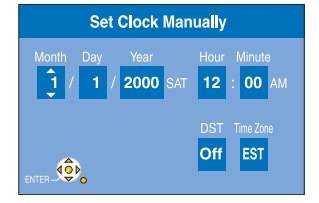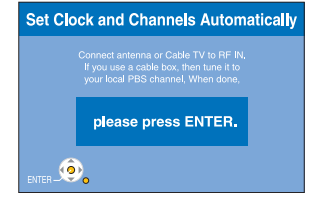


8 Finish the settings.

A television reception screen or a blue background screen is displayed.


Step 2 Setting

Step 3 Downloading

 • This unit features the TV Guide On Screen® system that provides an 8-day grid of TV programs available in your area. (Program listings for satellite services other than DirecTV cannot be received.)

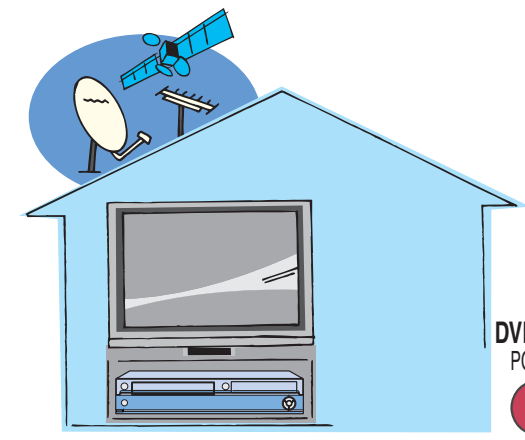


 1 Turn this unit off and wait for 24 continuous hours!

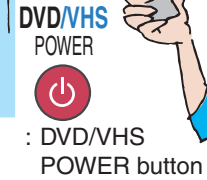


Check the following again

 - The time is shown on the unit's display.
- Everything is connected correctly as shown in Step 1.
- Only when you are using a cable box or DirecTV receiver.
 - The cable box or DirecTV receiver is on.
 - The IR Blaster is located near the cable box or DirecTV receiver.

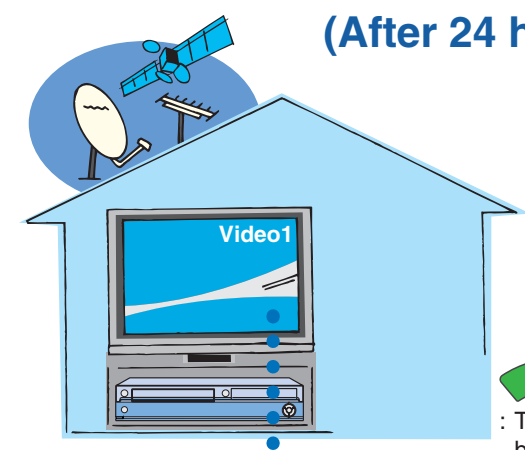

(After 24 hours)

 2 Press [TV GUIDE] and check the program listings.

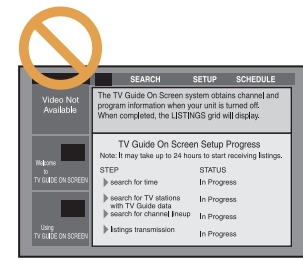

➔ If you have any questions contact www.panasonic.com/dvdhelp/ 1-800-211-PANA (7262)

Note

- Leave the unit in standby mode when you are not using it. The unit will download the necessary data to maintain the program listings while it is in standby mode. After turning the power off, "BYE" appears briefly on the unit's display. This shows the unit is in standby mode.
- The first few days of listings usually appear within 24 hours after a successful Setup. It may take up to six days for the full eight days of program listings to appear.

Q : What is the TV Guide On Screen® system?

A : The TV Guide On Screen® system provides a free, interactive electronic program guide (EPG) for checking what's on. Setting up to record a program is easy too. Simply select the desired program from the displayed listings. You can also search for desired programs by category, by keyword, or alphabetically.

In the United States, TV Guide, G-LINK, VCR Plus+ and PlusCode are registered marks of Gemstar-TV Guide International, Inc. and/or one of its affiliates.

FAQ

- If you still have questions, visit our website!
➔ www.panasonic.com/dvdhelp/

Frequently Asked Questions

	Problem	Causes/Remedies
Connection	I've reviewed the diagrams Panasonic provides but I don't see one that illustrates my system. Should I assume that this DVD Recorder wouldn't be compatible?	Absolutely not! We've included connection diagrams for the most common ways the unit will be installed. Panasonic's Customer Call Center will be happy to assist you. If you have any questions contact: www.panasonic.com/dvdhelp/ 1-800-211-PANA (7262)
Program listings	No program listings available.	<p>Program listings will be downloaded when this unit is turned off. When not in use, turn this unit off.</p> <p>If connecting with a cable box or satellite receiver, these units must remain turned on to download program listings.</p> <p>In step 2(➔ 4), did you correctly set up the TV Guide On Screen®? (Check the connected cables, or antenna, the cable box or satellite setup, your ZIP Code, etc.)</p> <p>If the ZIP Code where you live has recently changed, it is possible that it hasn't been registered with TV Guide yet. If you have any questions contact: www.panasonic.com/dvdhelp/ 1-800-211-PANA (7262)</p> <p>During the first 24 hours, did you experience a power outage?</p> <p>The TV Guide On Screen® system is only available if using DirecTV, cable TV, or off-air reception using a rooftop antenna. The TV Guide On Screen® system is not available if you are using satellite services other than DirecTV.</p> <p>If you use a cable box or DirecTV, check that it is correctly positioned to receive signals from the IR Blaster (➔ Step 1).</p>
	I turned on the DVD Recorder, but the program listings were incomplete.	The first few days of listings usually appear within 24 hours after a successful Setup. It may take up to six days for the full eight days of program listings to appear.
	I've noticed that some channels carried by my cable company are not listed. Can they be added?	The TV Guide On Screen® system selects the channels they include based on market popularity and local viewing area statistics. Such statistics are constantly reviewed so it's possible that the number of channels carried in your area will increase. At this time you cannot manually add channels so that program listings will be included.
Operation	I'm trying to watch TV and the channels keep changing.	This unit may tune your cable box or DirecTV receiver to a specific channel to receive the TV Guide On Screen® program listings. The recorder will only do this when it is turned off. To ensure the DVD Recorder does not tune to receive program listings while you are watching TV, turn the DVD Recorder on and use the DVD Recorder to watch TV. Remember to turn the DVD Recorder off when not in use so it will receive program listings.

 
After finishing Step 3 how to use

- You must set up the TV Guide On Screen system® and download the program listings to make scheduled recordings.
- Refer to the control reference on the right.


Scheduled recording

Making scheduled recordings to the HDD.


1 Display the program listings.

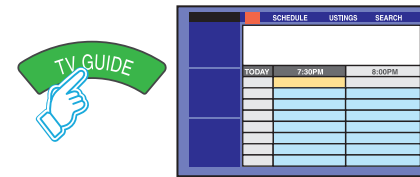

2 Select the program.

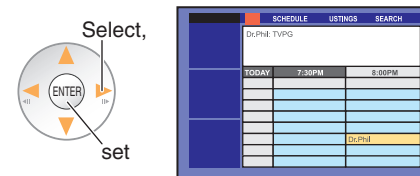 

3 Make the scheduled recording.

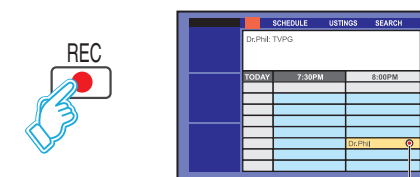 

●: The settings are finished. (Scheduled recording begins when the set time is reached.)

 
■ To use manually programming scheduled recordings or the VCR Plus+ system to make scheduled recordings

➔ Operating Instructions (P33).

Copy

Copying from the HDD to a disc.


Preparation: Insert a disc.

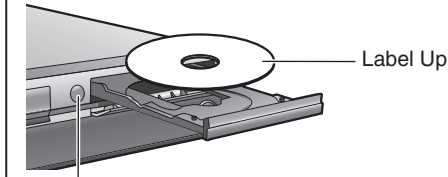


▲, OPEN/CLOSE

- DVD-R, DVD-R DL, DVD-RW (DVD-Video format), +R and +R DL are automatically finalized after copy.

 
1 Display the Functions screen.

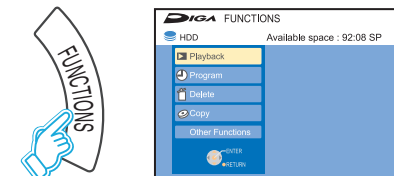

2 Select "Copy".

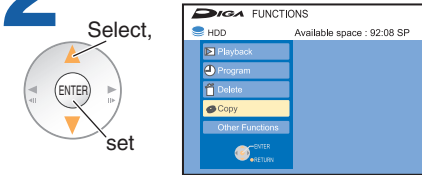 


3 Select the program to copy.

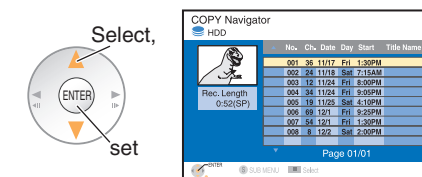 

- To set multiple programs
➔ Press [II, PAUSE] to choose and then press [ENTER] to set.

 4 Select "Start copying".

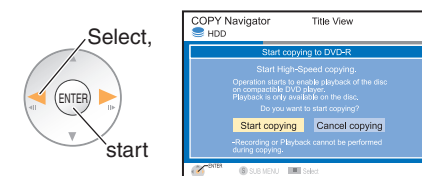

■ To copy without finalizing

- ➔ Operating Instructions (P62, Advanced copy).

 
Delete

Delete unnecessary programs.


1 Select the drive (HDD, DVD or SD). (with the programs to be deleted)




2 Display the Functions screen.

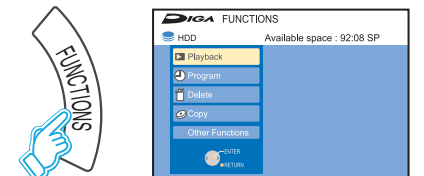

3 Select "Delete".

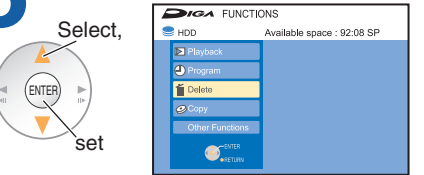 


4 Select the program to delete.

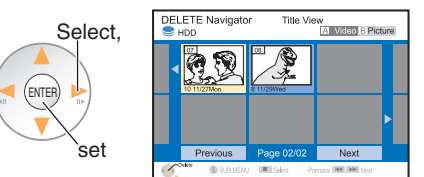 

- To set multiple programs
➔ Press [II, PAUSE] to choose and then press [ENTER] to set.

 5 Select "Delete".

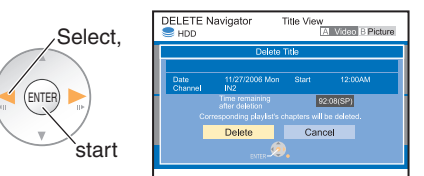

SET UP GUIDE

DMR-EH75V



If you have any questions contact
PANA
1-800-211-7262



Discs you can record on								
	HDD	DVD-RAM RAM RAM 4.7	DVD-R R R 4.7	DVD-R DL R R DL	DVD-RW R R W	+R	+R DL	+RW
Recording (content you can record)	Yes (video, still pictures)	Yes (video, still pictures)	Yes (video)	Yes* (video)	Yes (video)	Yes (video)	Yes* (video)	Yes (video)
Repeated recording	Yes	Yes	No	No	Yes	No	No	Yes
Copy-once recording (digital broadcasts)	Yes	Yes (CPRM compatible discs only)	No	No	No	No	No	No
Playing on other players	—	Yes (RAM compatible equipment only)	Yes	Yes	Yes	Yes	Yes	Yes

* You cannot record directly to DVD-R DL and +R DL discs with this unit.

To play **DVD-R DVD-R DL DVD-RW +R +R DL** on other equipment,
Use the Finalize feature!

DVD-R, etc. recorded on this unit cannot be played on other players immediately after recording. Using the Finalize feature allows you to play these discs on other players. (However, once the disc is finalized you will no longer be able to record to the disc.)

Preparation: Insert the disc you want to finalize.
 Press [DRIVE SELECT] to select the DVD drive.

- 1 Display the Functions screen.**
- 2 Display the Finalize screen.**
- 3 Follow the on-screen instructions to start finalizing.**
 - Finalizing takes up to 15 minutes.
 - (Do not disconnect the AC power supply cord while finalizing!)

After finishing Step 1–3
Let's begin!

Once you've finished the connections and settings shown inside.



Record

Recording to the HDD.

- 1 Select the channel.**
- 2 Select the recording mode.**

Remaining time on the disc

Recording time

Picture quality: XP, SP, LP, EP
- 3 Start recording.**

Elapsed recording time

Play

Playing programs recorded to the HDD.

- 1 Display the title view.**
- 2 Start playing.**

• To stop →