

AUDIO IN VIDEO

 $\bigcirc \bigcirc \bigcirc$

3

ÓÓÓ

DMR-EZ485V


Connection


Cable from the wall/ antenna signal

 \odot

Connecting to a TV

(Included)

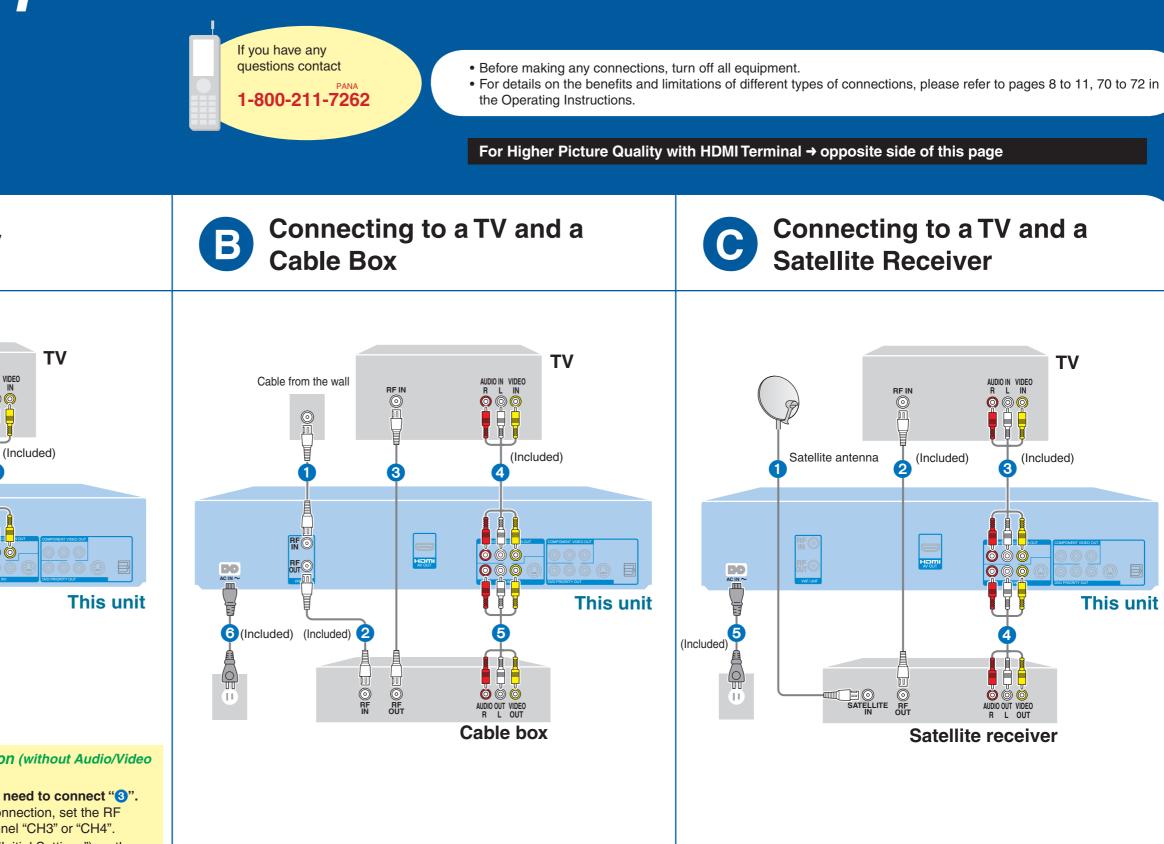

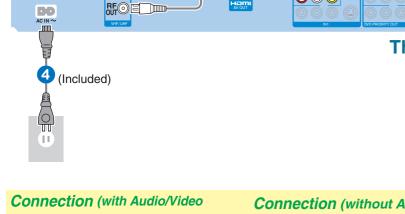

cable)

Connect in numbered order 1 to 4. After this connection, set the RF output channel "OFF".

Step 4 ("Initial Settings") on the opposite side of this page.

Connection (without Audio/Video cable)

- You do not need to connect "3". After this connection, set the RF output channel "CH3" or "CH4".
- Step 4 ("Initial Settings") on the opposite side of this page.




RQCA1736 F0108SN0

Connecting with an HDMI (High Definition Multimedia Interface) Cable

When connected to an HDMI compatible unit, an uncompressed digital audio and video signal is transmitted, enabling you to enjoy high quality, digital video and audio with just one cable. When connecting to an HDMIcompatible HDTV (High Definition Television), the output can be switched to 1080p, 1080i or 720p HD video.

- Please use High Speed HDMI Cables that have the HDMI logo (as shown on the cover of the operating instructions). It is recommended that you use Panasonic's HDMI cable.
- We recommend connecting to the TV with the DVD/VHS COMMON OUT terminals as well.

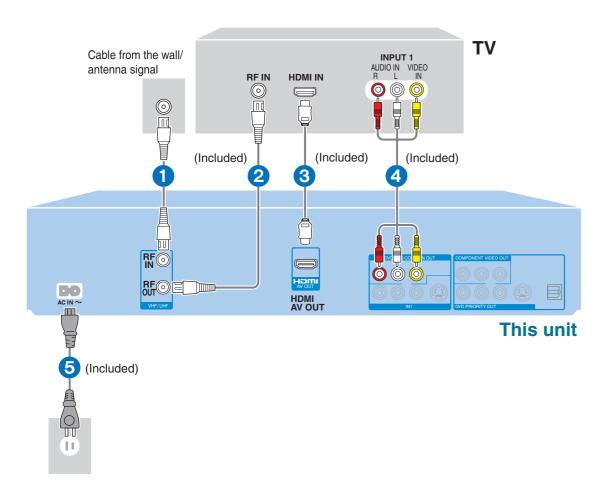

Set "HDMI Priority" and "HDMI Audio Output" to "On" (The default setting is "On".) $(\Rightarrow$ page 65, 66 in the operating instructions).

For details on the benefits and limitations of different types of connections, please refer to pages 8 to 11, 70 to 72 in the Operating Instructions.

■ VIERA Link[™] "HDAVI Control[™]"

What is VIERA Link "HDAVI Control"?

VIERA Link[™] is a new name for EZ Sync[™].

VIERA Link "HDAVI Control" is a convenient function that offers linked operations of this unit, and a Panasonic TV (VIERA) or receiver under "HDAVI Control". You can use this function by connecting the equipment with the HDMI cable.

For details on the benefits of "HDAVI Control", please refer to pages 40 to 41 in the Operating Instructions.

	Preparing the TV Using y remote 0 1 Turn the TV on. 2 Switch input to "AV input
PUPL NISS PUPL NISS	 3 Turn this unit on DVD/VHS POWER When this unit is connected to a TV (VIERA) supporting HDAVI (and initially set up, it automaticates the TV setting information. For or please refer to page 14 in the O Instructions. 4 Select an RF out channel number Connection (with Audio Video cable) Select "OFF". Connection (without HE cable or Audio/Video cable) Select "CH3" or "CH4". If the selection is appropriate, the step 5 screen will appear.
 To return to the previous screen → ● 	55 Select the languation of the selection of the selectio
	6 Select the type of source using.

Initial Settings



