Quick Setup Guide

DMR-F748V

Cable from the wall

 \bigcirc

ň

(H)


cable)

(Included)

output channel "OFF"

opposite side of this page.

antenna signal

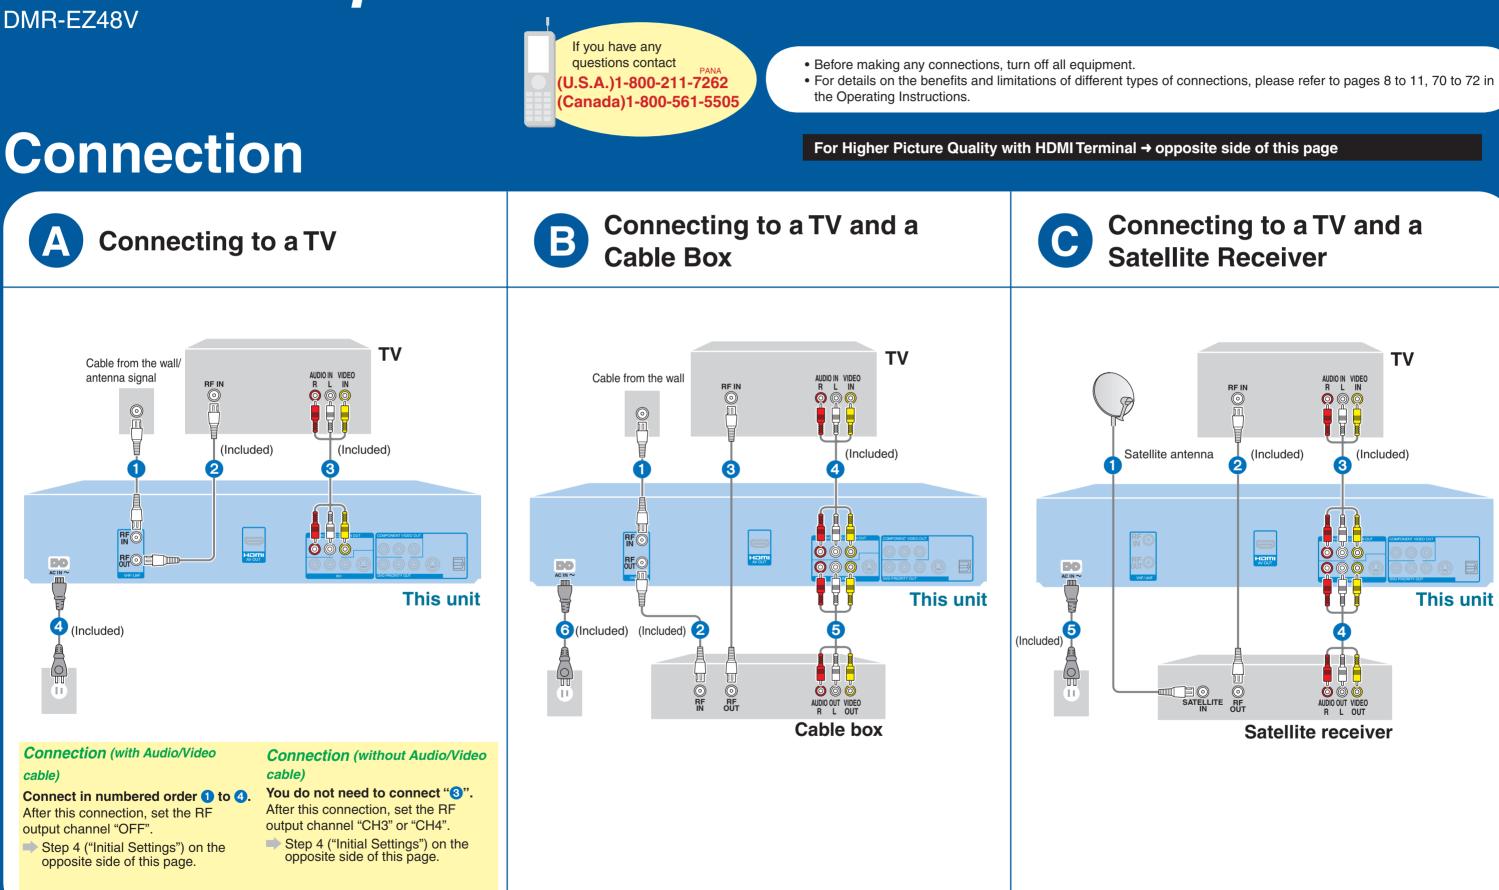

DVD Connection Guides (This is in English only) http://www.panasonic.com/consumer electronics/dvd recorder/dvd connection.asp




RQCA1687 F1207SN0

Connecting with an HDMI (High Definition Multimedia Interface) Cable

When connected to an HDMI compatible unit, an uncompressed digital audio and video signal is transmitted, enabling you to enjoy high quality, digital video and audio with just one cable. When connecting to an HDMI-compatible HDTV (High Definition Television), the output can be switched to 1080p, 1080i or 720p HD video.

- Please use HIGH SPEED HDMI cables that have the HDMI logo (as shown on the cover of the operating instructions). It is recommended that you use Panasonic's HDMI cable.
- We recommend connecting to the TV with the DVD/VHS COMMON OUT terminals as well.

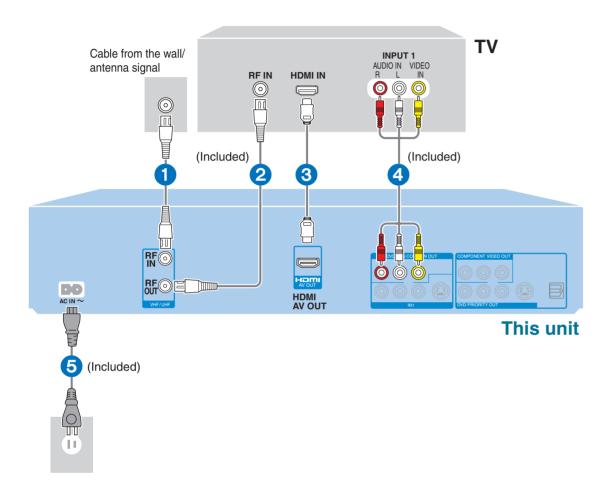

Set "HDMI Priority" and "HDMI Audio Output" to "On" (The default setting is "On".) (→ page 65, 66 in the operating instructions).

For details on the benefits and limitations of different types of connections, please refer to pages 8 to 11, 70 to 72 in the Operating Instructions.

■ VIERA Link[™] "HDAVI Control[™]"

What is VIERA Link "HDAVI Control"?

 $\mathsf{VIERA}\ \mathsf{Link}^{\mathsf{TM}}\ \mathsf{is}\ \mathsf{a}\ \mathsf{new}\ \mathsf{name}\ \mathsf{for}\ \mathsf{EZ}\ \mathsf{Sync}^{\mathsf{TM}}.$

VIERA Link "HDAVI Control" is a convenient function that offers linked operations of this unit, and a Panasonic TV (VIERA) or receiver under "HDAVI Control". You can use this function by connecting the equipment with the HDMI cable.

For details on the benefits of "HDAVI Control", please refer to pages 40 to 41 in the Operating Instructions.

	1	Furn the TV on. Switch input to "AV input
DVD.VHS DVD.VHS <td< th=""><th>3 4</th><th>Turn this unit on. DVD/VHS POWER When this unit is connected to a TV (VIERA) supporting HDAVI O and initially set up, it automatica the TV setting information. For d please refer to page 14 in the Op Instructions. Select an RF outp channel number. Connection (with Audion Video cable) Select "OFF". Connection (without HD cable or Audio/Video cable Select "CH3" or "CH4". If the selection is appropriate, ther step 5 screen will appear.</th></td<>	3 4	Turn this unit on. DVD/VHS POWER When this unit is connected to a TV (VIERA) supporting HDAVI O and initially set up, it automatica the TV setting information. For d please refer to page 14 in the Op Instructions. Select an RF outp channel number. Connection (with Audion Video cable) Select "OFF". Connection (without HD cable or Audio/Video cable Select "CH3" or "CH4". If the selection is appropriate, ther step 5 screen will appear.
• To return to the previous screen	5	Select the langue
	6	Select the type of you are using.

Initial Settings

