 


- Note:
- Make sure that your cellular phone is set to connect to this product automatically. Refer to your cellular phone's operating instructions.

Trademarks

• The Bluetooth[®] word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. All other trademarks identified herein are the property of their respective owners.




_	-	—

Base unit: CELL 1/CELL 2 indicators Status Meaning Green (On) A cellular phone is connected. Ready to make/receive cellular calls. Green (Flashing) The cellular line is in use. Phonebook entries are being copied from a cellular phone. Green (Flashing) A cellular call is being received. (Flashing rapidly) A cellular phone is not connected to the base unit. Amber (On) A cellular call is put on hold. Light off A cellular call is put on hold. Light off A cellular call is put on hold. Light off A cellular call is put on hold. When flashing: The cellular call is being received. * When flashing: The cellular call is being received. ¥ : A cellular phone is connected. ¹¹ Ready to make/receive cellular calls. • When flashing: The cellular call is being received. *: X : A cellular phone is connected to the base unit. 1 Corresponding cellular line(s) is indicated next to the item. Sing: A cellular phone at regular intervals if the connection is lost. To change the interval (default: "1_min"), see the operating instructions. • When true onnects to the cellular phone anaully The unit connects to the cellular phone anaully reconment disconnection or on automatically resume the connection to cellular phone, le	Link te	o cell		
Green (On) A cellular phone is connected. Ready to make/receive cellular calls. Green (Flashing) The cellular line is in use. Phonebook entries are being copied from a cellular phone. Green (Flashing rapidly) A cellular call is being received. (Flashing rapidly) A cellular call is being received. Amber (On) A cellular call is put on hold. Amber (Flashing) A cellular call is put on hold. Light off A cellular call is put on hold. Light off A cellular call is put on hold. Uight off A cellular phone is not registered to the base unit. Handset: Link to cell display items Image: A cellular phone is connected. ¹¹ Ready to make/receive cellular calls. • When flashing: The cellular call is put on hold. • When flashing rapidly: A cellular call is being received. % : A cellular phone is connected. ¹¹ Ready to make/receive cellular calls. • When flashing: The cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. Image: A cellular call is being received on that line. Connecting/disconnecting the cellular phone A cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. <t< th=""><th>Base un</th><th>it: CELL 1/CI</th><th>ELL 2 indicators</th><th></th></t<>	Base un	it: CELL 1/CI	ELL 2 indicators	
cellular calls. Green (Flashing) The cellular line is in use. Phonebook entries are being copied from a cellular phone. Green (Flashing rapidly) A cellular call is being received. Amber (On) A cellular phone is not connected to the base unit. Amber (On) A cellular call is put on hold. Light off A cellular call is put on hold. Light off A cellular call is put on hold. Light off A cellular call is put on hold. When flashing: The cellular call is put on hold. When flashing: The cellular call is being received. When flashing: The cellular call is being received. When flashing: The cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. When flashing: The cellular phone is not connected to the base unit. *1 Cornecting/disconnecting the cellular phone Macellular calls. • When flashing: The cellular phone Macellular calls. • When flashing: The cellular phone is not connected to the base unit. *1 Cornecting/disconnecting the cellular phone Macellular call is being received on that line. Connecting/disconnecting the cellular phone an allutervals if the connection is lost. To change the interval (default: "1 min"). see the operating instructions. <t< td=""><td>Status</td><td></td><td>Meaning</td><td></td></t<>	Status		Meaning	
Phonebook entries are being copied from a cellular phone. Green (Flashing rapidly) A cellular call is being received. Amber (On) A cellular phone is not connected to the base unit. Amber (Flashing rapidly) The base unit is searching for the registered cellular phone. Red (Flashing) A cellular call is put on hold. Light off A cellular call is put on hold. Light off A cellular call is put on hold. When flashing: The cellular call is put on hold. When flashing: The cellular call is being received. Image: A cellular phone is connected.*1 Ready to make/receive cellular calls. When flashing rapidly: A cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. Image: Corresponding cellular phone Image: A cellular call is being received on that line. Connection to the cellular phone Auto connection to the cellular phone Auto connection to the cellular phone or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone s, leave the auto connection on. • When you are using a cellular ine or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone s, leave the auto connection on. • When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellula		•	cellular calls.	-
(Flashing rapidly) A cellular phone is not connected to the base unit. Amber The base unit is searching for the registered cellular phone. Red (Flashing) A cellular call is put on hold. Light off A cellular phone is not registered to the base unit. Handset: Link to cell display items Image: A cellular line is in use. • When flashing: The cellular call is put on hold. • When flashing: The cellular call is being received. • When flashing: The cellular call is being received. * 2 A cellular phone is connected. ^{*1} Ready to make/receive cellular calls. • When flashing: The cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. Image: A cellular call is being received on that line. Connecting/disconnecting the cellular phone Mute connection to the cellular phone The unit connects to the cellular phone The unit connects to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. • When you are using a cellular interval cellular phone manually When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connectit	Green (F	lashing)		-
Amber (Flashing rapidly) The base unit is searching for the registered cellular phone. Red (Flashing) A cellular call is put on hold. Light off A cellular phone is not registered to the base unit. Handset: Link to cell display items A cellular line is in use. When flashing: The cellular call is being received. When flashing rapidly: A cellular call is being received. Image: A cellular phone is connected. ^{*1} Ready to make/receive cellular calls. When turned off: A cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. Image: A cellular call is being received on that line. Connecting/disconnecting the cellular phone Auto connection to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. 1 To connect/disconnect:: You can also manually reconnect the ce		g rapidly)	A cellular call is being received.	-
(Flashing rapidly) phone. Red (Flashing) A cellular call is put on hold. Light off A cellular phone is not registered to the base unit. Handset: Link to cell display items A cellular line is in use. When flashing: The cellular call is but on hold. When flashing rapidly: A cellular call is being received. I A cellular phone is connected.^{*1} Ready to make/receive cellular calls. When turned off: A cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. I Connecting/disconnecting the cellular phone A cellular call is being received on that line. Connecting/disconnecting the cellular phone Auto connection to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phone, leave the auto connection on. Connecting/disconnecting the cellular phone manually When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. To connect/disconnect: For CELL 1: [MENU] #[6]2]5[1 (A long beep sounds.) For CELL 2: [MENU] #[6]2]5[2 (A long beep sounds.) 	Amber (0	On)	A cellular phone is not connected to the base unit.	-
Light off A cellular phone is not registered to the base unit. Handset: Link to cell display items A cellular line is in use. • When flashing: The cellular call is put on hold. • When flashing rapidly: A cellular call is being received. *1 • Corresponding cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. • When turned off: A cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. • Connecting/disconnecting the cellular phone Auto connects to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. • When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phone, leave the auto connection on. Connecting/disconnecting the cellular phone manually When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connectin feature to resume the connection. 1 To connect/disconnect: For CELL 1: [MENU] #[6][2][5][(A long beep sounds.)		g rapidly)	с с	-
Handset: Link to cell display items A cellular line is in use. When flashing: The cellular call is put on hold. When flashing rapidly: A cellular call is being received. A cellular phone is connected.*1 Ready to make/receive cellular calls. When truned off: A cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. GIGE A cellular call is being received on that line. Connecting/disconnecting the cellular phone Auto connection to the cellular phone The unit connects to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. 1 To connect/disconnect: For CELL 1: [MENU] #62512 (A long beep sounds.) For CELL 2: [MENU] #6252 (A long beep sounds.)	Red (Fla	shing)	A cellular call is put on hold.	
A cellular line is in use. • When flashing: The cellular call is put on hold. • When flashing rapidly: A cellular call is being received. * When flashing rapidly: A cellular call is being received. * A cellular phone is connected. ^{*1} Ready to make/receive cellular calls. • When turned off: A cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. GIG2 A cellular call is being received on that line. Connecting/disconnecting the cellular phone Auto connection to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. • When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phone, we recommend disconnecting the cellular phone manually When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. 1 To connect/disconnect: For CELL 1: [MENU] # 6251 (A long beep sounds.) For CELL 2: [MENU] # 6252 (A long beep sounds.)				
 When flashing: The cellular call is put on hold. When flashing rapidly: A cellular call is being received. A cellular phone is connected.^{*1} Ready to make/receive cellular calls. When turned off: A cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. A cellular call is being received on that line. Connecting/disconnecting the cellular phone Auto connects to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phone, leave the auto connection on. Connecting/disconnecting the cellular phone manually When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. To connect/disconnect: For CELL 1: [MENU] # 62511 (A long beep sounds.) For CELL 2: [MENU] # 6252 (A long beep sounds.) 		1		
 When turned off: A cellular phone is not connected to the base unit. ^{*1} Corresponding cellular line(s) is indicated next to the item. A cellular call is being received on that line. Connecting/disconnecting the cellular phone A cellular connects to the cellular phone The unit connects to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phone, leave the auto connection on. Connecting/disconnecting the cellular phone manually When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. 1 To connect/disconnect: For CELL 1: [MENU] # 6[2[5] (A long beep sounds.) For CELL 2: [MENU] # 6[2[5] (A long beep sounds.) 		When flas	shing: The cellular call is put on hold.	
 When turned off: A cellular phone is not connected to the base unit. *1 Corresponding cellular line(s) is indicated next to the item. A cellular call is being received on that line. Connecting/disconnecting the cellular phone Auto connection to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phone, leave the auto connection on. Connecting/disconnecting the cellular phone manually When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. To connect/disconnect: For CELL 1: [MENU] # 6[2[5] (A long beep sounds.) For CELL 2: [MENU] # 6[2[5] (A long beep sounds.) 	\$ ¹ ₂		•	
Connecting/disconnecting the cellular phone Auto connection to the cellular phone The unit connects to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. • When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phones, leave the auto connection on. Connecting/disconnecting the cellular phone manually When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. 1 To connect/disconnect:: For CELL 1: [MENU] #[6]25]2 (A long beep sounds.) For CELL 2: [MENU] #[6]25]2 (A long beep sounds.)			•	
Auto connection to the cellular phone The unit connects to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. • When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phones, leave the auto connection on. Connecting/disconnecting the cellular phone manually When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. 1 To connect/disconnect: For CELL 1: [MENU] #[6]2[5]1 (A long beep sounds.) For CELL 2: [MENU] #[6]2[5]2 (A long beep sounds.)	C1 C2	A cellular ca	all is being received on that line.	
 The unit connects to the cellular phone at regular intervals if the connection is lost. To change the interval (default: "1 min"), see the operating instructions. When you are using a cellular line or a Bluetooth headset, the base unit loses its connection from other Bluetooth devices (cellular phone or headset). To automatically resume the connection to cellular phones, leave the auto connection on. Connecting/disconnecting the cellular phone manually When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. 1 To connect/disconnect: For CELL 1: [MENU] #6251 (A long beep sounds.) For CELL 2: [MENU] #6252 (A long beep sounds.) 				
 When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting for the auto connection feature to resume the connection. 1 To connect/disconnect: For CELL 1: [MENU] #6251 (A long beep sounds.) For CELL 2: [MENU] #6252 (A long beep sounds.) 	The unit of change the when you connect automation on.	connects to th he interval (de you are using ction from othe atically resume	e cellular phone at regular intervals if the connection is lost. To efault: "1 min"), see the operating instructions. a cellular line or a Bluetooth headset, the base unit loses its er Bluetooth devices (cellular phone or headset). To e the connection to cellular phones, leave the auto connection	
1 To connect/disconnect: For CELL 1: [MENU] #6251 (A long beep sounds.) For CELL 2: [MENU] #6252 (A long beep sounds.)	When yo disconne your cell You can	When you make or answer calls with your cellular phone, we recommend disconnecting it from the base unit, otherwise received audio may not be heard on your cellular phone. You can also manually reconnect the cellular phone to the base unit without waiting		
	1 To co For C	nnect/discor	nnect: J] <u>#</u> 6251 (A long beep sounds.)	

 (\mathbf{r})

 TG76xx_(e)_QG.fm Page 5 Tuesday, December 20, 2011 9:22 PM




Link to cell


Cellular line only mode (If you do not use the landline)

If you do not use the landline, set the cellular line only mode to use this unit more conveniently.

- 1 (MENU) #157
- [¢]: "off" → [SELECT] Basic operations

Basic operations	
Making/Answering calls	(Handset)
Making cellular calls	 Dial the phone number. → [CELL] When the cellular line only mode is set, you can also press []/[Instead of [CELL]. When only 1 cellular phone is registered, the unit starts dialing. When 2 cellular phones are registered: [Select the desired cellular phone. → [SELECT]
Making landline calls	Dial the phone number. $ ightarrow$ [$ ightarrow$]/[$ ightarrow$]
Answering calls	[~] /[☞]
To hang up	[OFF]
To adjust the receiver or speaker volume	Press 【▲】 or 【▼】 repeatedly while talking.
Making a call using the redial list	 [►] REDIAL → [\$]: Select the desired phone number. To make a cellular call: When only 1 cellular phone is registered: [CELL] or When 2 cellular phones are registered: [CELL] → [\$]: Select the desired cellular phone. → [SELECT] To make a landline call: [\$]

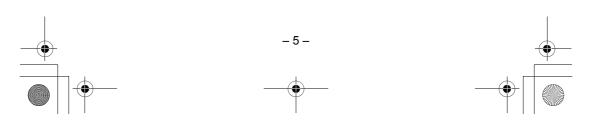


 

 \bigcirc




Basic operations		
Making/Answering calls	(Base unit): KX-TG7641 series	
Making cellular calls	 Dial the phone number. → [CELL 1]/[CELL 2] When the cellular line only mode is set, you can also press [SP-PHONE] instead of [CELL 1]/[CELL 2]. 	
Making landline calls	Dial the phone number. → [SP-PHONE]	
Answering calls	[SP-PHONE]	
To hang up	[SP-PHONE]	
To adjust the speaker volume	Press [▲] or [▼] repeatedly while talking.	
Making a call using the redial list	 [►►I] REDIAL [\$]: Select the desired phone number. To make a cellular call: [CELL 1]/[CELL 2] To make a landline call: [SP-PHONE] 	
Adjusting the ringer volu	ume (Handset)	
To adjust the handset ringer volume (cellular line)	 For CELL 1: [MENU] #6281 For CELL 2: [MENU] #6282 [\$]: Select the desired volume. → [SAVE] → [OFF] 	
To adjust the handset ringer volume (landline)	<pre>1 [MENU] #160 2 [\$]: Select the desired volume. → [SAVE] → [OFF]</pre>	
To adjust the base unit ringer volume (cellular line)	 1 For CELL 1: [MENU] # ※ 6281 For CELL 2: [MENU] # ※ 6282 2 [\$]: Select the desired volume. → [SAVE] → [OFF] 	
To adjust the base unit ringer volume (landline)	 1 [MENU] # ∃160 2 [\$]: Select the desired volume. → [SAVE] → [OFF] 	

 

TG76xx_(e)_QG.fm Page 7 Tuesday, December 20, 2011 9:22 PM

	•

Shared phonebook		
Adding entries	 Handset: 1 [□] → [ADD] 2 Enter the party's name (16 characters max.). → [OK] 3 Enter the party's phone number (24 digits max.). → [OK] 4 [↓]: Select the desired group. → [SELECT] 2 times → [OFF] 	
Making calls	 Handset: 1 [□] → [\$]: Select the desired entry. 2 To make a cellular call: When only 1 cellular phone is registered: [CELL] or When 2 cellular phones are registered: [CELL] → [\$]: Select the desired cellular phone. → [SELECT] To make a landline call: [\$] Base unit (KX-TG7641 series): 1 [□] → [\$]: Select the desired entry. 2 To make a cellular call: [CELL 1]/[CELL 2] To make a landline call: [SP-PHONE] 	
Answering system for t	he landline (Base unit)	
Answering on/off	Press [ANSWER ON/OFF] to turn on/off the answering system.	
Listening to messages	[►]	
Answering system for t	he landline (Handset)	
Listening to messages	To listen to new messages: [MENU] → [PLAY] or [MENU] #]323 To listen to all messages: [MENU] #]324	

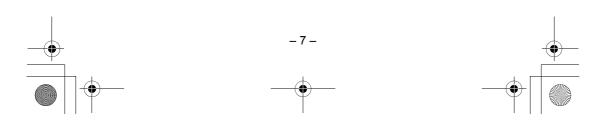





Using Bluetooth devices

Copying phonebook entries from a Bluetooth cellular phone (phonebook transfer)

You can copy phonebook entries from the registered cellular phones or other cellular phones (not registered) to the unit's shared phonebook.

Copying phonebook entries from a Bluetooth cellular phone

- 1 Handset: [MENU] #618
- 2 Handset:
 - To copy from registered cellular phones:
 - $[\]$: Select the desired cellular phone. \rightarrow [SELECT]
 - Copied items are stored to the group ("Cell 1" or "Cell 2") which the cellular phone is registered to.
 - To copy from other cellular phones (not registered):

[\uparrow]: "Other cell" \rightarrow [SELECT] \rightarrow [\uparrow]: Select the group you want to copy to. \rightarrow [SELECT]

- **3** When "Transfer phonebook from cell." is displayed: Go to step 4. When "Select mode" menu is displayed:
 - [↓]: Select "Auto" Or "Manual". → [SELECT]

"Auto": Download all entries from the cellular phone automatically. Go to step 5. "Manual": Copy entries you selected.

• "Select mode" menu is displayed only when the cellular phone supports PBAP (Phone Book Access Profile) for Bluetooth connection.

 
4 Cellular phone:

Follow the instructions of your cellular phone to copy phonebook entries.
For other cellular phones (not registered), you need to search for and select the

- base unit. The base unit PIN (default: "0000") may be required.
- The entries being copied are displayed on the handset.

5 Handset:

Wait until "Completed" is displayed. \rightarrow [OFF]

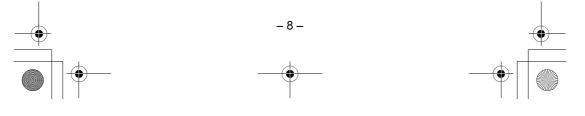



+ [**•**

Using Bluetooth devices

Using a Bluetooth wireless headset (optional) for landline calls

By registering a Bluetooth headset to the base unit, you can have a hands-free conversation wirelessly for landline calls.

• While someone is using a cellular line, the Bluetooth headset connection is not available.

Registering a headset to the base unit

1 Your headset:

2 Handset:

- Set your headset to registration mode. • Refer to your headset operating instructions.
- Register

Register using the handset.

- (MENU) #621 3 Enter your headset PIN.
- Typically, default PIN is "0000". Refer to the headset operating instructions.
 Press [OK], then wait until a long beep sounds. → [OFF]
 - When the HEADSET indicator on the base unit lights green, you are ready to use the headset.

Operating a Bluetooth wireless headset using a landline

Refer to your headset operating instructions for headset operations.

Answering landline calls with your headset To answer a landline call, turn on your headset referring to your headset operating instructions.

When you finish talking, turn off your headset referring to your headset operating instructions.

- If you cannot hang up the call using your headset;
- press **[■]** (STOP) on the base unit. (KX-TG7621 series)
- press [SP-PHONE] on the base unit 2 times. (KX-TG7641 series)

Switching between the base unit and your headset

You can switch between the base unit and your headset:


- during a landline call with the base unit speakerphone. (KX-TG7641 series)
- during an intercom call between the base unit and handset. (KX-TG7641 series)
- while listening to messages recorded on the base unit answering system.*1

KX-TG7641 series

- To switch to your headset:
- Press [HEADSET] on the base unit.
- To switch to the base unit:
- Press [SP-PHONE] on the base unit.

*1 KX-TG7621 series

• You can only switch from the base unit to your headset. Turn on the headset referring to your headset operating instructions.

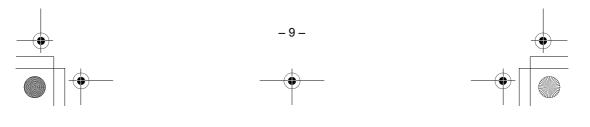

TG76xx_(e)_QG.fm Page 10 Tuesday, December 20, 2011 9:22 PM

_

Frequently asked questions		
Question	Cause/solution	
Why is 	 The handset is too far from the base unit. Move closer. The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit. The handset is not registered to the base unit. Register it. 1 Handset: [MENU] #130 2 Base unit: Press and hold [LOCATOR] for about 5 seconds until the registration tone sounds. 3 Handset: Press [OK], then wait until a long beep sounds. 	
Why can I not register a cellular phone to the base unit?	 Depending on the compatibility of the cellular phone, you may not be able to register it to the base unit. For more information, please visit http://www.panasonic.com/link2cell Confirm that the Bluetooth feature of your cellular phone is turned on. You may need to turn this feature on depending on your cellular phone. 	
Why can I not hear a dial tone? (cellular line)	 Make sure that the CELL 1 or CELL 2 indicator lights green and the cellular phone is connected to the base unit. The cellular phone has not been registered to the base unit. Register the cellular phone. 	
How can I increase the handset volume level?	 Press the navigator key [] repeatedly while talking. 	
Why is the conversation noisy or cutting off?	 Try to relocate the base unit so that distance to the handset is minimized. If the same problem occurs even if the handset is next to the base unit, call Panasonic customer support at 1-800-211-PANA (1-800-211-7262). 	
Can I add another accessory handset to my base unit?	 Yes, you can add up to 6 handsets (including the handset(s) sold with your base unit) to a single base unit. To purchase additional accessory handset(s) (KX-TGA410/KX-TGA660), please visit http://www.panasonic.com or call 1-800-332-5368. TTY users (hearing or speech impaired users) can call 1-866-605-1277. 	
Can I keep the batteries charging all the time?	• You can leave the handset on the base unit or charger anytime. This will not harm the batteries.	
How can I answer a call waiting call (2nd call)?	• Press [CALL WAIT] when you hear the call waiting tone.	

For further registration information, visit http://www.panasonic.com/RegisterYourHandset

– 10 –