

Panasonic®

 
Model No. **KX-TG6423/KX-TG6473**

Quick Guide

Setting up

Base unit

- Use only the supplied Panasonic AC adaptor PQLV219.

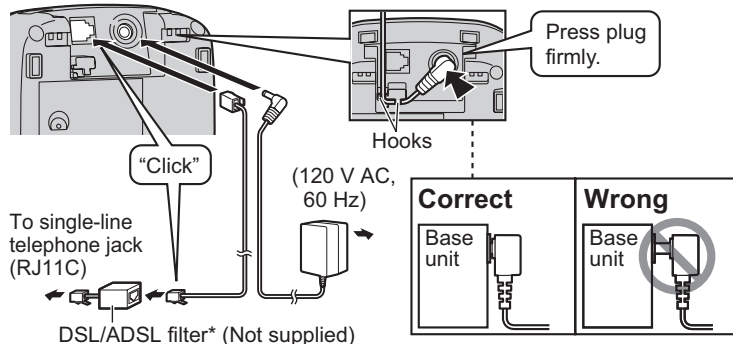


DSL/ADSL filter* (Not supplied)

*For DSL/ADSL service users


Handset

 - USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- Confirm correct polarities (+, -).

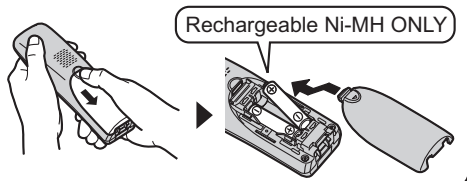


Charger

 - Use only the supplied Panasonic AC adaptor PQLV219.

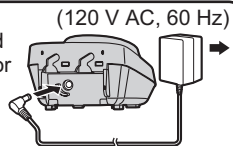

CHARGE FOR ABOUT 7 HOURS

 
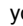 
Confirm "Charging" is displayed.

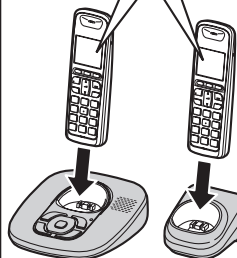


PNQW1483YA DC1108DM1128

Operating tips

Navigator key/ (Volume) key


By pressing this key ( or ) repeatedly, you can:

 
- scroll through (up or down) various lists or items
- adjust the receiver or speaker volume (up or down) while talking
- move the cursor (left or right) to edit number or name

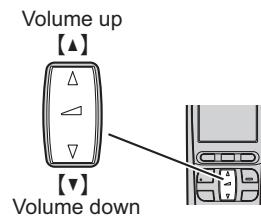

Soft keys

The handset features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display.

 , **[MENU]**, **[REDIAL]**, and other additional functions are assigned to the soft keys. Pay attention to the display to see what functions the soft keys are assigned during handset operation.

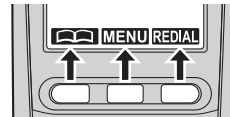


Date and time (Handset)

- 1** **[MENU]** → **[#][1][0][1]**
- 2** Enter the current month, date, and year. → **[OK]**
- 3** Enter the current hour and minute (12-hour clock format).
- 4** **[AM/PM]**: Select “**AM**” or “**PM**”. → **[SAVE]** → **[OFF]**


For further information, visit <http://www.panasonic.com/help> or refer to operating instructions.


Basic operations	
Making/Answering calls (Handset)	
Making calls	Dial the phone number. → [📞]/[📞]
Answering calls	[📞]/[📞]
To hang up	[OFF]
To adjust the receiver or speaker volume	Press [▲] or [▼] repeatedly while talking.
Making a call using the redial list	[REDIAL] → [▼]/[▲] : Select the desired phone number. → [📞]
To adjust the handset ringer volume	1 [MENU] → [#][1][6][0] 2 [▼]/[▲] : Select the desired volume. → [SAVE]
Shared phonebook (Handset)	
Adding entries	1 [📁] → [ADD] 2 Enter the party's name (16 characters max.). → [OK] 3 Enter the party's phone number (32 digits max.). → [OK] 4 [▼]/[▲] : "Set Ringer ID" → [SELECT] 5 [▼]/[▲] : Select the desired setting. → [OK] → [SAVE] → [OFF] • To enter a name, see the character table in the operating instructions.
Making calls	[📁] → [▼]/[▲] : Select the desired entry. → [📞]
Answering system (Base unit)	
Answering on/off	Press [ANSWER ON] to turn on/off the answering system.
Listening to messages	[▶]

For further information, visit <http://www.panasonic.com/help> or refer to operating instructions.

Frequently asked questions	
Question	Cause/solution
Why is  displayed?	<ul style="list-style-type: none"> • The handset is too far from the base unit. Move closer. • The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit. • You are using the handset or base unit in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference. • The handset is not registered to the base unit. Register it.
How can I increase the handset volume level?	<ul style="list-style-type: none"> • Press the navigator key [▲] repeatedly while talking.
Why is the conversation noisy or cutting off?	<ul style="list-style-type: none"> • Try to relocate the base unit so that the distance to the handset is minimized. • If the same problem occurs even if the handset is next to the base unit, call Panasonic customer support at 1-800-211-PANA (1-800-211-7262).
Can I add another accessory handset to my base unit?	<ul style="list-style-type: none"> • Yes, you can add up to 6 handsets (including the handset(s) sold with your base unit) to a single base unit. • To purchase additional accessory handset(s) (KX-TGA641/KX-TGA740), please visit http://www.panasonic.com or call 1-800-332-5368. TTY users (hearing or speech impaired users) can call 1-866-605-1277.
Can I keep the batteries charging all the time?	<ul style="list-style-type: none"> • You can leave the handset on the base unit or charger anytime. This will not harm the batteries.
How can I answer a call waiting call (2nd call)?	<ul style="list-style-type: none"> • Press [CALL WAIT] when you hear the call waiting tone.

 For further information, visit <http://www.panasonic.com/help> or refer to operating instructions.

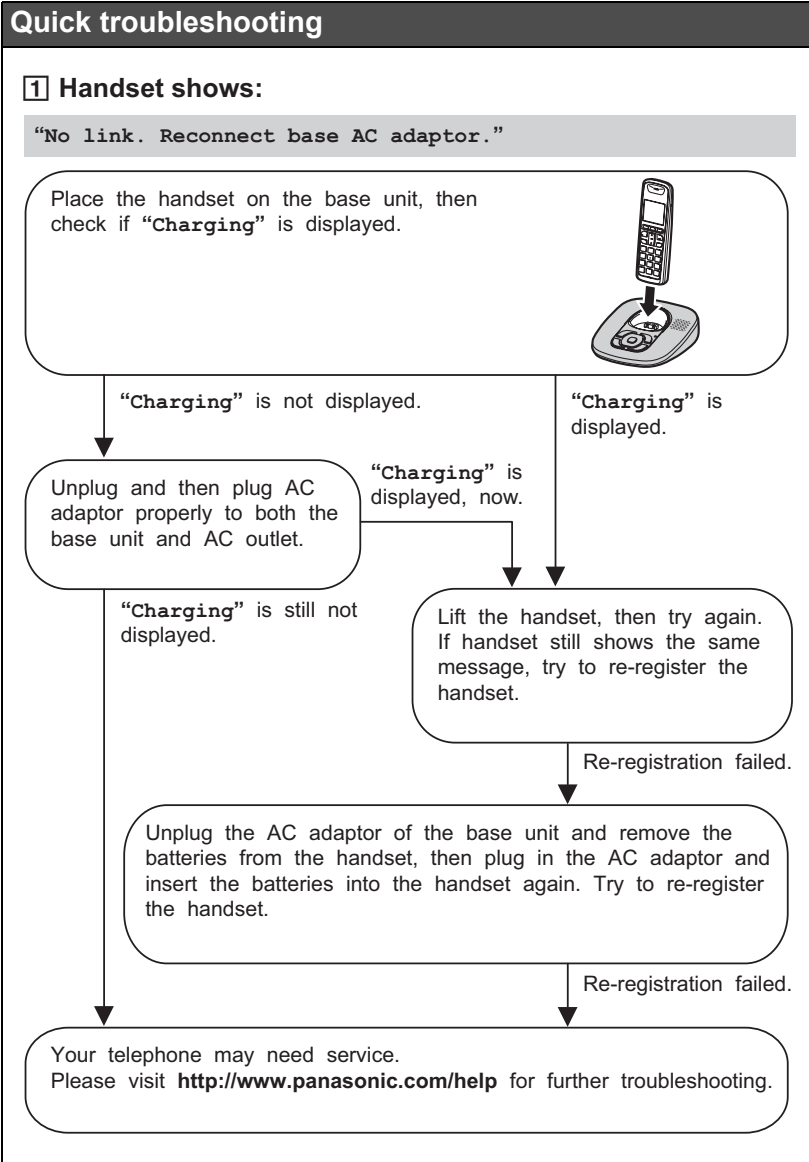

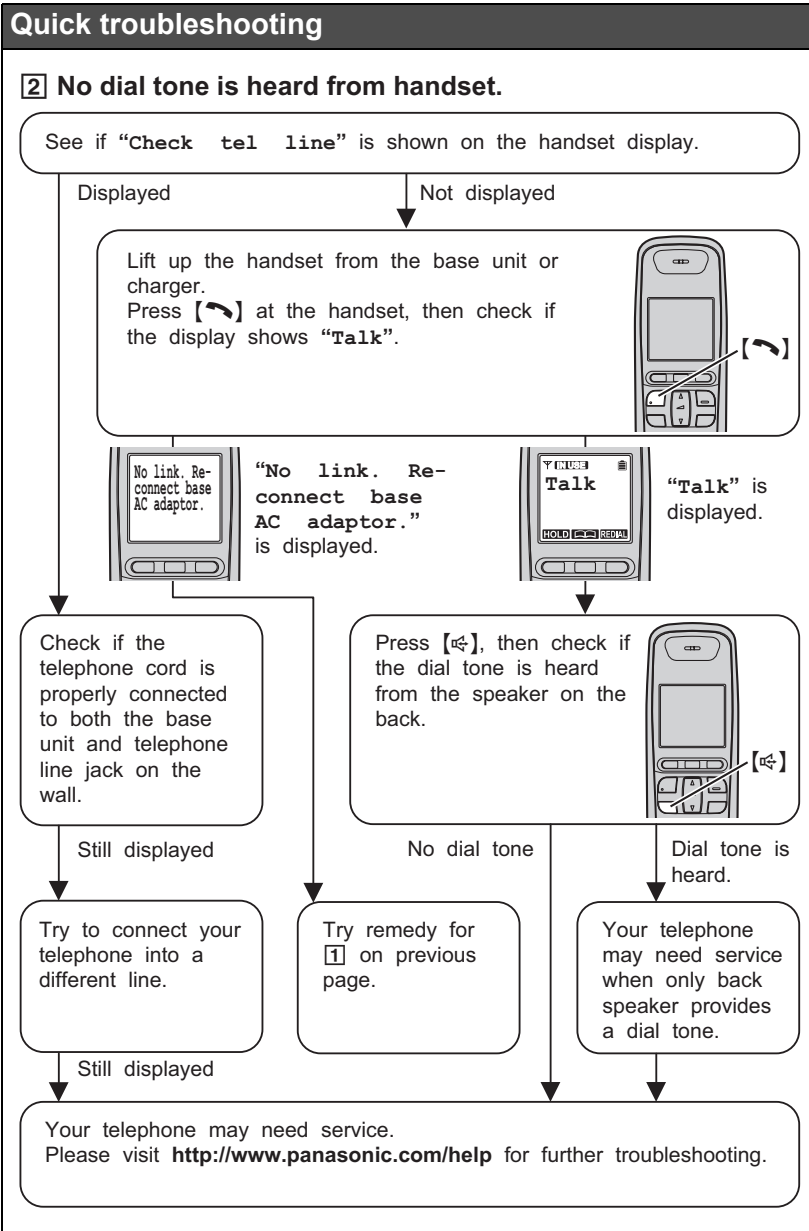


Registering a handset to a base unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit, re-register the handset.

Handset

 [MENU] → **[#][1][3][0]**

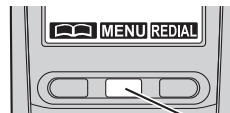


[MENU]



Base unit

Press and hold **[LOCATOR]** for about 4 seconds until the registration tone sounds.

 - The next step must be completed within 90 seconds.

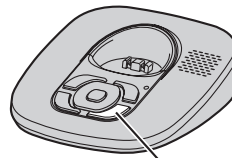

[LOCATOR]



Handset

Press **[OK]**, then press **[OFF]** after a long beep sounds.



[OK]

For further registration information, visit
<http://www.panasonic.com/RegisterYourHandset>

IMPORTANT!

If your product is not working properly ...

① Reconnect AC adaptor to the base unit.



② Check if telephone line cord is connected.



③ Use rechargeable Ni-MH batteries.
(Alkaline/Manganese/Ni-Cd batteries CANNOT be used.)



**④ Read FAQ in this Quick Guide and
troubleshooting page in the Operating Instructions.**



Visit our web site: <http://www.panasonic.com/help>
• Operating Instructions downloading, FAQ,
and troubleshooting hints are available.



Contact us via the web at:
<http://www.panasonic.com/contactinfo>



Call us at: **1-800-211-PANA (1-800-211-7262)**
• Monday- Friday 9:00am - 9:00pm (EST)
Saturday/Sunday 10:00am - 7:00pm (EST)

To order replacement batteries,
please call: 1-800-332-5368
Or visit: <http://www.panasonic.com/batterystore>