

Panasonic®

Installation Manual

Additional Digital Cordless Handset
Model No. **KX-TGA641C**



DECT
6.0

Thank you for purchasing a Panasonic product.

This unit is an additional handset compatible with the following series of Panasonic Digital Cordless Phones:
KX-TG6411/KX-TG6421/KX-TG6431/KX-TG7411/
KX-TG7431/KX-TG8411

You must register this handset with your base unit before it can be used. This installation manual describes only the steps needed to register and begin using the handset. Please read the base unit's operating instructions for further details.

Charge the batteries for about 7 hours before initial use.

Please read this installation manual before using the unit and save it for future reference.

For assistance, please call **1-800-561-5505** or visit us at www.panasonic.ca



TGA641C

PNQX1635ZA DM1208DC0

Accessory information

Supplied accessories

Accessory item/Part number	Quantity
Charger	1
AC adaptor/PQLV219	1
Rechargeable batteries ^{*1} / HHR-65AAABU or N4DHYYY00002	2
Handset cover ^{*2}	1
Belt clip	1

*1 Please read the base unit's operating instructions for replacement battery information.

 
*2 The handset cover comes attached to the handset.

Note:

- Please read the base unit's operating instructions for additional/ replacement accessories.
- The suffix (C) in the following model numbers will be omitted in these instructions: KX-TG6411C/KX-TG6421C/KX-TG6431C/KX-TG7411C/ KX-TG7431C/KX-TG8411C series.

Setting up

Connections

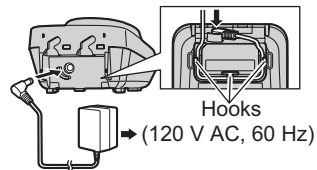

Note:

- Use only the supplied Panasonic AC adaptor PQLV219.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)

 
Battery installation/Battery charge

Important:

- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted in the base unit's operating instructions.
- Wipe the battery ends (⊕, ⊖) with a dry cloth.
- Avoid touching the battery ends (⊕, ⊖) or the unit contacts.
- Confirm correct polarities (⊕, ⊖).
- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.

Charge for about 7 hours.


- When the batteries are fully charged, the charge indicator goes off.

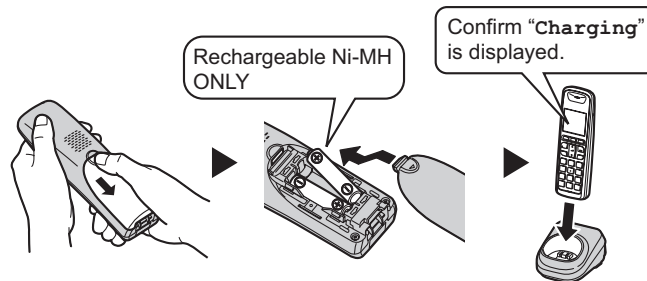

Note:

- If the batteries are fully charged, but the operating time seems to be shorter, clean the battery ends (⊕, ⊖) and the charge contacts with a dry cloth and charge again.

 Controls

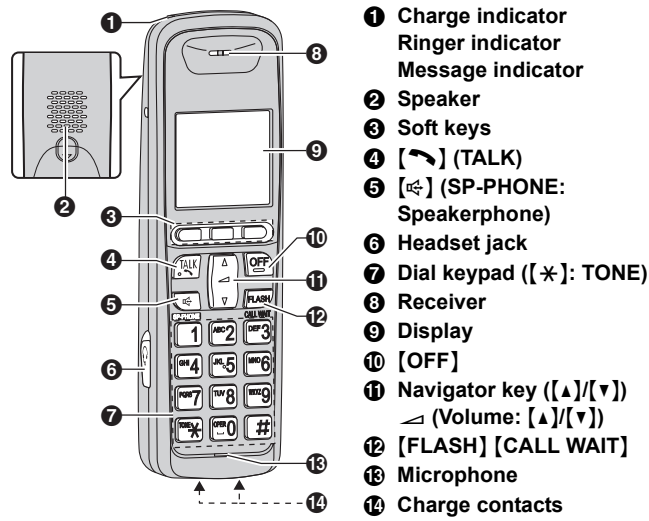

- ❶ Charge indicator
Ringer indicator
Message indicator
- ❷ Speaker
- ❸ Soft keys
- ❹ [TALK]
- ❺ [SP-PHONE:
Speakerphone]
- ❻ Headset jack
- ❼ Dial keypad ([*]: TONE)
- ❽ Receiver
- ❾ Display
- ❿ [OFF]
- ⓫ Navigator key ([▲]/[▼])
▲ (Volume: [▲]/[▼])
- ⓬ [FLASH] [CALL WAIT]
- ⓭ Microphone
- ⓮ Charge contacts

Registering a handset to a base unit

1 Base unit:

■ KX-TG6411/KX-TG7411/KX-TG8411 series

Press and hold [LOCATOR] for about 4 seconds. (No registration tone)

■ KX-TG6421/KX-TG6431/KX-TG7431 series

Press and hold [LOCATOR] for about 4 seconds until the registration tone sounds.

- If all registered handsets start ringing, press the same button to stop. Then repeat this step.
- The next step must be completed within 90 seconds.

2 Handset:

Press [OK], then wait until a long beep sounds.

Note:

- If an error tone sounds, or if Ψ is still displayed, register the handset according to the base unit's operating instructions.

 
Display language

- 1 [MENU] → [≡][1][1][0]
- 2 [▼]/[▲]: Select the desired setting.
- 3 Press the middle soft key to save. → [OFF]

Belt clip


■ To attach

■ To remove

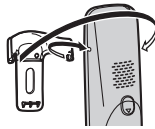

Wall mounting

 - 1 Drive the screws (not supplied) into the wall.
- 2 Mount the charger (1), then slide it down (2) and to the right (3) until it is secure.


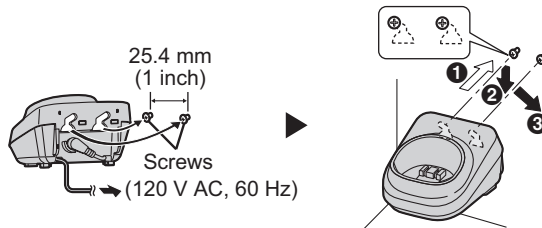


For KX-TG7411/KX-TG7431/KX-TG8411 series users: Available handset feature overview

Main feature differences

Feature	KX-TGA641C	KX-TGA740C	KX-TGA840C
Description	Same type of handset supplied with KX-TG6411/ KX-TG6421/ KX-TG6431 series	Same type of handset supplied with KX-TG7411/ KX-TG7431 series	Same type of handset supplied with KX-TG8411 series
Display colour/size	Monochrome/ 1.8 inches	Monochrome/ 2.1 inches	Colour/2.0 inches
Control type (page 8)	3 soft keys	3 soft keys (Middle soft key: Centre of joystick)	3 soft keys (Middle soft key: Centre of joystick)
	Navigator key/ ▲ (Volume) key (Up/down)	Joystick (Up/down/left/right)	Joystick (Up/down/left/right)
Display mode * ¹	—	●	●
Message list * ²	—	●	●
Wallpaper	—	—	●
Colour ID * ³	—	—	●
LCD backlight * ⁴	—	—	●



 
 
*1 This feature allows you to select how the display shows:

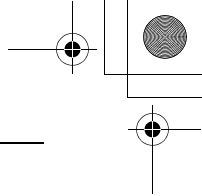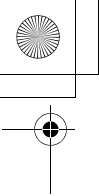

-
- multiple items at a time
 - 1 item at a time in large characters
 - *2 The unit displays a list of all recorded messages and allows you to select the item to play back.
 - *3 You can assign a different background colour to each phonebook entry. When a call is received from a caller stored in the phonebook, the assigned background colour is displayed.
 - *4 You can select whether the handset display backlight is dimmed or turned off completely after being placed on the base unit or charger.


Note:

    - For some features, the operations are slightly different from the descriptions in the KX-TG7411/KX-TG7431/KX-TG8411 series base unit's operating instructions (page 9).

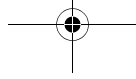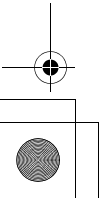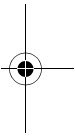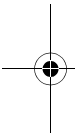


Control type

 ■ **KX-TGA641C**

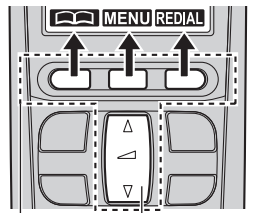

Soft keys
Navigator key

 ■ **KX-TGA740C/KX-TGA840C**

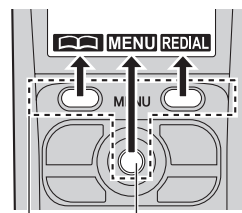

Soft keys
Joystick

Function	KX-TGA641C	KX-TGA740C/ KX-TGA840C
Using soft keys	Left, middle, right	Left, centre of joystick ^{*1} , right
Scrolling through various lists or items	[▼]/[▲]	[▼]/[▲] ^{*2}
Adjusting the receiver or speaker volume: – while talking – while listening to messages	[▼]/[▲]	[▼]/[▲] ^{*2}
Moving the cursor (right or left) to edit number or name	[▼]/[▲]	[▶]/[◀] ^{*3}
Skipping or repeating during message playback	—	[▶]/[◀] ^{*4}

*1 Pressing down the centre of the joystick.

*2 Pushing the joystick down or up.

*3 Pushing the joystick right or left.


*4 To skip messages, push the joystick right.

To repeat messages, push the joystick left.

Operational differences for some features

The following features include different operations from the descriptions in the KX-TG7411/KX-TG7431/KX-TG8411 series base unit's operating instructions. The differences are described in the boxed text.

Shared phonebook: Searching by first character (alphabetically)

1  → **[SEARCH]**

2 Press the dial key (**[0]** – **[9]**, **[*]**, or **[#]**) which contains the character you are searching for.

3 **[v]/[^]**: Scroll through the phonebook if necessary.

4 **[↶]**

Call block (Call Display subscribers only): Storing unwanted callers

■ From the caller list:

1 **[MENU]** → **[#][2][1][3]**

2 **[v]/[^]**: Select the entry to be blocked.

• To edit the number, press **[EDIT]** repeatedly until the phone number is shown in the 10-digit format.

3 **[SAVE]**

4 **[v]/[^]**: "Call block" → **[SELECT]**

5 **[v]/[^]**: "Yes" → **[SELECT]** → **[OFF]**

Caller list: Editing a caller's phone number before calling back

1 **[MENU]** → **[#][2][1][3]**

2 **[v]/[^]**: Select the desired entry.

3 Press **[EDIT]** repeatedly until the phone number is shown in the desired format.

4 **[↶]**

Caller list: Storing caller information to the phonebook

1 [MENU] → **[#][2][1][3]**

2 [▼]/[▲]: Select the desired entry.

- To edit the number, press **[EDIT]** repeatedly until the phone number is shown in the desired format.

3 [SAVE]

4 [▼]/[▲]: “Phonebook” → **[SELECT]**

5 Continue from step 2, “Editing entries”, in the operating instructions.

For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

WARNING

Power connection

- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorized service centre.

Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.

