


Panasonic®

Owner's Manual Compact Stereo System

Model No. SC-RS50

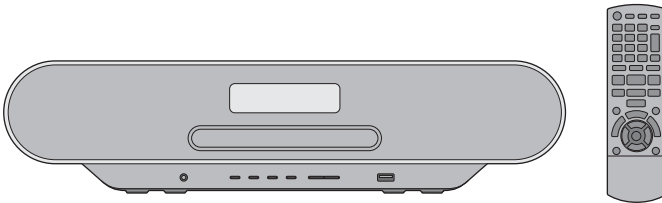

Thank you for purchasing this product.
Please read these instructions carefully before using this product,
and save this manual for future use.

If you have any questions, visit:
www.panasonic.ca/english/support

Panasonic Canada Inc.
5770 Ambler Drive,
Mississauga, Ontario,
L4W 2T3
www.panasonic.com

© Panasonic Corporation 2016
Printed in Malaysia

PC En

RQT0A75-C
F0116TM1026

Legal notice

Recording and playback of content on this (or any other) device may require permission from the copyright owner. Panasonic has no authority to and does not grant you that permission and explicitly disclaims any right, ability or intention to obtain such permission on your behalf. It is your responsibility to ensure that your use of this or any other device complies with applicable copyright law in your country.

IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



WARNING

Unit

- To reduce the risk of fire, electric shock or product damage,
 - Do not expose this unit to rain, moisture, dripping or splashing.
 - Do not place objects filled with liquids, such as vases, on this unit.
 - Use only the recommended accessories.
 - Do not remove covers.
 - Do not repair this unit by yourself. Refer servicing to qualified service personnel.

AC power supply cord

- The power plug is the disconnecting device. Install this unit so that the power plug can be unplugged from the socket outlet immediately.

CAUTION

Unit

- This unit utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Do not place sources of naked flames, such as lighted candles, on this unit.

Placement

- To reduce the risk of fire, electric shock or product damage,
 - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
 - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.

Battery

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- Mishandling of batteries can cause electrolyte leakage and may cause a fire.
 - Remove the battery if you do not intend to use the remote control for a long period of time. Store in a cool, dark place.
 - Do not heat or expose to flame.
 - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
 - Do not take apart or short circuit.
 - Do not recharge alkaline or manganese batteries.
 - Do not use batteries if the covering has been peeled off.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

Product Identification Marking is located on the bottom of the unit.

CAN ICES-3(B)/NMB-3(B)


Contains IC: 216A-B21R1401

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.
This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets the RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm (7 7/8") or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

The following mark and symbols are located on bottom of the unit.

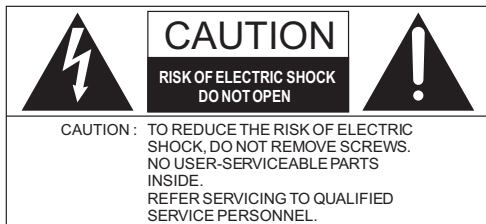

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

About descriptions in this Owner's Manual

- Pages to be referred to are indicated as "→ ○○".
- Unless otherwise indicated, operations are described using the remote control. You can also use the controls on this unit if they are the same.

Table of contents

Legal notice	2
IMPORTANT SAFETY INSTRUCTIONS	2
Accessories	3
Control reference guide	4
Using the remote control	5
Licenses	5
Connections	5
Inserting media	6
Bluetooth® operations	7
About Bluetooth®	8
Media playback controls	8
Listening to FM radio	11
Recording a CD to the internal memory	12
Sound adjustment	13
Clock and Timer	14
Others	15
Playable media	16
Unit and media care	16
Troubleshooting	17
Specifications	19
Limited Warranty	20

Accessories

Check the supplied accessories before using this unit.

- 1 Remote control**
(N2QAYB001073)
- 1 Battery for remote control**
- 1 AC power supply cord**
(K2CB2CB00022)
- 1 FM indoor antenna**
(RSAX0002)





The enclosed Canadian French label sheet corresponds to the English display on the top, front and rear of the main unit.



- Do not use AC power supply cord with other equipment.
- Product numbers provided in this Owner's Manual are correct as of January 2016. These may be subject to change.

Control reference guide

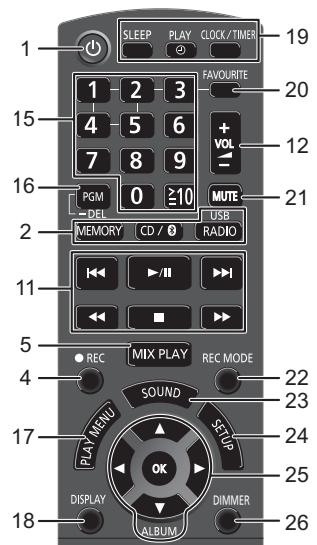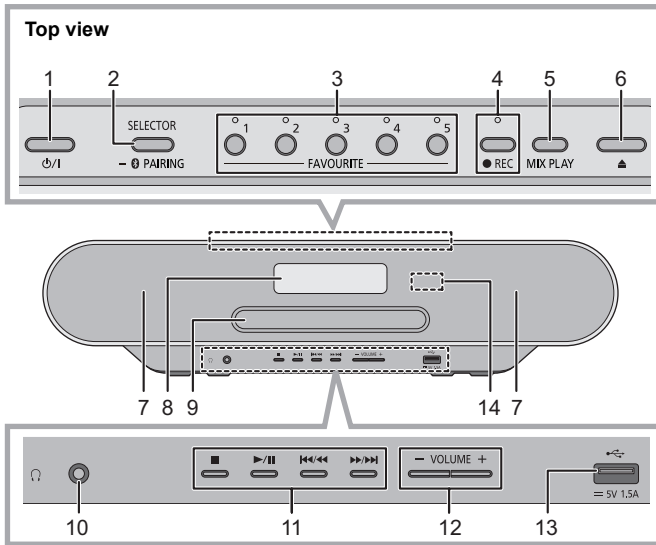

1 Standby/on switch (⏻), (⏻)

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

2 Select the audio source

On this unit:

"CD" → "MEMORY" → "FM"
 ↑ "BLUETOOTH" ← "USB" ←

- Press and hold to enter pairing mode (→ 7) or disconnect a Bluetooth® device (→ 7).

On the remote control:

[MEMORY]: "MEMORY"

[CD/Ⓜ]: "CD" ↔ "BLUETOOTH"

[RADIO, USB]: "FM" ↔ "USB"

3 FAVOURITE buttons and indicators for favorite play / storing or selecting radio station ([1] to [5]) (→ 9, 11)

4 This unit: Record button and indicator (→ 12)

Remote control: Record button (→ 12)

5 Start one-touch mix play (→ 9)

6 Open or close the disc tray

7 Speakers

- These speakers do not have magnetic shielding. Do not place them near a TV, personal computer or other magnetic devices.

8 Display

9 Disc tray

- Do not put any object in front of the disc tray.

10 Headphones jack (🎧)

- Plug type: 3.5 mm (1/8") stereo (not supplied)
- Avoid listening for prolonged periods of time to prevent hearing damage.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Listening at full volume for long periods may damage the user's ears.

11 Basic playback control

12 Adjust the volume (0 (min) to 50 (max))

13 USB port (→ 6)

14 Remote control signal sensor

Distance: Within approx. 7 m (23 ft) directly in front
 Angle: Approx. 30° left and right

15 Select number

- To select a 2-digit number
 Example: 16: [≥10] → [1] → [6]
- To select a 3-digit number
 Example: 124: [≥10] → [≥10] → [1] → [2] → [4]

16 Set the program function / Delete a programmed track

17 Set the play menu item

18 Change the displayed information

19 Clock and timer operation

20 Set favorite play (→ 9)

21 Mute the sound

Press again to cancel. "MUTE" is also canceled when the volume is adjusted or the unit is turned off.

22 Select recording mode (→ 12)

23 Enter sound menu

24 Enter setup menu


25 Selection/OK

26 Dim the display panel and indicators

Press again to cancel.

Using the remote control

Insert the battery so the terminals (+ and -) match those in the remote control.

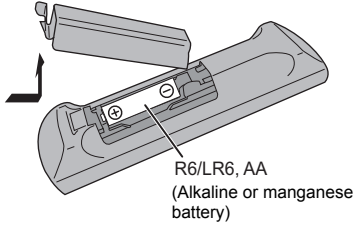

Point it at the remote control signal sensor on this unit.

- To avoid interference, please do not put any objects in front of signal sensor.

Licenses

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.


MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

■ About recorded content

Please note that even if content is not recorded correctly due to any defects, Panasonic will not be responsible for compensation for such content, losses arising out of the recorded content, or any direct or indirect damage caused by such recording. The same also applies to repairing this unit.


Connections

Connect the AC power supply cord after all other connections are completed.

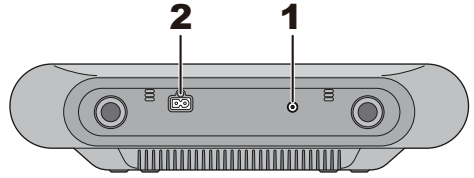


1 Connect the antenna.

 - Tape the antenna to a wall or column in a position with the least amount of interference.
- If radio reception is poor, use an outdoor antenna (not supplied).



2 Connect the AC power supply cord.

 

This unit consumes a small amount of AC power (→ 19) even when turned off.

- In the interest of energy conservation, if you will not be using this unit for an extended period of time, unplug it from the power socket.
- Some settings will be lost after you disconnect the system. You have to set them again.


Inserting media

Inserting a disc

- 1 Press [▲] on this unit to open the disc tray.
- 2 Put in a disc with the label facing up.
- 3 Press [▲] again to close the disc tray.

Connecting a USB device

Insert the USB device directly. Do not use any USB extension cable.

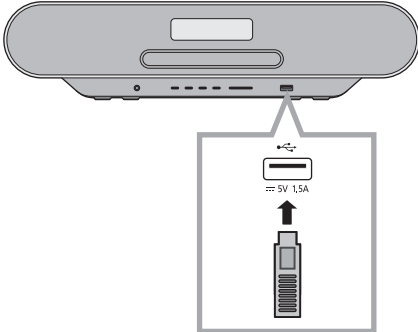


- Please disconnect the USB device if you finish using.
- Before removing the USB device, select a source other than "USB".

Charging a device

Charging starts when a device (rated value: DC 5 V/ 1.5 A) is connected to the USB port of this unit.

- 1 Turn the unit on.
- 2 Select a source other than "USB".
- 3 Connect a device.
 - Confirm from the screen of the connected device, etc. to make sure charging has started.
 - After the device has started charging, you can turn the unit to standby mode.
 - When charging a depleted device, do not turn the unit to standby mode until the device becomes operational.

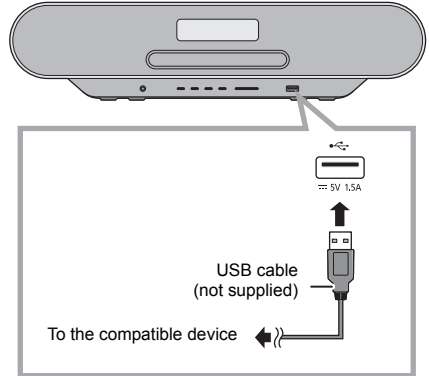

- A cable compatible with your device is required. Use the cable that comes with your device.
- Even if you connect a cable compatible with the USB port of this unit, your device may not be charged. In that case, use the charger that comes with the device.
- Depending on your device, using other chargers may not work. Check the operating instructions of your device before use.
- Do not connect a device with a rated value higher than 5 V/ 1.5 A to this unit.
- To check if charging is complete, look at the screen of the connected device, etc.
- Once fully charged, remove the USB cable from the USB port.



- When moving this unit, be sure to remove all media and turn this unit to standby mode.

Bluetooth® operations

You can listen to the sound from the Bluetooth® audio device from this unit wirelessly.

- Refer to the operating instructions of the Bluetooth® device for details.

Connecting via Bluetooth® menu

Preparation

- Turn on the Bluetooth® feature of the device and place the device near this unit.

■ Pairing with Bluetooth® devices

- 1 Press [CD/⊗] repeatedly to select "BLUETOOTH".
 - If "PAIRING" is indicated on the display, go to step 3.
- 2 Press [PLAY MENU] to select "PAIRING" and then press [OK].
 - Alternatively, press and hold [SELECTOR, − ⊗ PAIRING] on the unit.
- 3 Select "SC-RS50" from the Bluetooth® device's Bluetooth® menu.
 - The MAC address (e.g., 6C:5A:B5:B3:1D:0F) may be displayed before "SC-RS50" is displayed.
 - The name of the connected device is indicated on the display for a few seconds.
- 4 Start playback on the Bluetooth® device.

■ Connecting a paired Bluetooth® device

- 1 Press [CD/⊗] repeatedly to select "BLUETOOTH".
 - "READY" is indicated on the display.
- 2 Select "SC-RS50" from the Bluetooth® device's Bluetooth® menu.
 - The name of the connected device is indicated on the display for a few seconds.
- 3 Start playback on the Bluetooth® device.



- If prompted for the passkey, input "0000".
- You can register up to 8 devices with this unit. If a 9th device is paired, the device that has not been used the longest will be replaced.
- This unit can only be connected to one device at a time.
- When "BLUETOOTH" is selected as the source, this unit will automatically try and connect to the last connected Bluetooth® device. ("LINKING" is indicated on the display during this process.) If the connection attempt fails, try to establish a connection again.

Bluetooth® transmission mode

You can change the transmission mode to prioritize transmission quality or sound quality.

Preparation

- Press [CD/⊗] repeatedly to select "BLUETOOTH".
- If a Bluetooth® device is already connected, disconnect it.

- 1 Press [PLAY MENU] repeatedly to select "LINK MODE".
- 2 Press [◀, ▶] to select the mode and then press [OK].

MODE 1: Emphasis on connectivity

MODE 2: Emphasis on sound quality



- Select "MODE 1" if the sound is interrupted.
- When enjoying video contents with this function, the video and audio output may not be synchronized. In this case, select "MODE 1".
- The factory default is "MODE 2".

Bluetooth® input level

If the sound input level from the Bluetooth® device is too low, change the input level setting.

Preparation

- Connect a Bluetooth® device.

- 1 Press [PLAY MENU] repeatedly to select "INPUT LEVEL".
- 2 Press [◀, ▶] to select the level and then press [OK].

"LEVEL 0" ↔ "LEVEL +1" ↔ "LEVEL +2"



- Select "LEVEL 0" if the sound is distorted.
- The factory default is "LEVEL 0".

Disconnecting a Bluetooth® device

- 1 While a Bluetooth® device is connected:
Press [PLAY MENU] repeatedly to select "DISCONNECT?".
- 2 Press [◀, ▶] to select "OK? YES" and then press [OK].



- You can also disconnect the Bluetooth® device by pressing and holding [SELECTOR, − ⊗ PAIRING] on the unit.
- The Bluetooth® device will be disconnected if a different audio source (e.g., "CD") is selected.

About Bluetooth®

Paranasonic bears no responsibility for data and/or information that is compromised during a wireless transmission.

■ Frequency band used

- This system uses the 2.4 GHz frequency band.

■ Certification of this device

- This system conforms to frequency restrictions and has received certification based on frequency laws. Thus, a wireless permit is not necessary.
- The actions below are punishable by law in some countries:
 - Taking apart or modifying the system.
 - Removing specification indications.

■ Restrictions of use

- Wireless transmission and/or usage with all Bluetooth® equipped devices is not guaranteed.
- All devices must conform to standards set by Bluetooth SIG, Inc.
- Depending on the specifications and settings of a device, it can fail to connect or some operations can be different.
- This system supports Bluetooth® security features. But depending on the operating environment and/or settings, this security is possibly not sufficient. Transmit data wirelessly to this system with caution.
- This system cannot transmit data to a Bluetooth® device.

■ Range of use

- Use this device at a maximum range of 10 m (33 ft). The range can decrease depending on the environment, obstacles or interference.

■ Interference from other devices

- This system may not function properly and troubles such as noise and sound jumps may arise due to radio wave interference if this system is located too close to other Bluetooth® devices or the devices that use the 2.4 GHz band.
- This system may not function properly if radio waves from a nearby broadcasting station, etc. is too strong.

■ Intended usage

- This system is for normal, general use only.
- Do not use this system near an equipment or in an environment that is sensitive to radio frequency interference (example: airports, hospitals, laboratories, etc).

Media playback controls

The following marks indicate the availability of the feature.

- CD**: CD audio in CD-DA format or a CD that contains MP3 files (→ 16)
- MEMORY**: Internal memory (About recording to the internal memory, refer to page 12.)
- USB**: USB devices containing MP3 files (→ 16)
- BLUETOOTH**: Connected Bluetooth® device (→ 7)

Basic play

(**CD**, **MEMORY**, **USB**, **BLUETOOTH**)

Preparation

- Turn the unit on.
- Insert the media or connect the Bluetooth® device. (→ 6, 7)

1 Select the audio source.

For disc:

Press **[CD]** repeatedly to select “CD”.

For internal memory:

Press **[MEMORY]** to select “MEMORY”.

For USB device:

Press **[RADIO, USB]** repeatedly to select “USB”.

For Bluetooth® device:

Press **[CD]** repeatedly to select “BLUETOOTH”.

(When selecting using this unit, press **[SELECTOR, -]** **PAIRING** repeatedly.)

2 Press **[▶/||]** to start playback.

- **MEMORY**: When you start play with **[▶/||]**, playback starts from the first track to the last track in the internal memory.

Basic controls

Stop	Press [■] . <ul style="list-style-type: none">• MEMORY, USB: The position is memorized and “RESUME” is displayed.• MEMORY, USB: Press [■] twice to stop the playback fully.<ul style="list-style-type: none">– MEMORY: Favorite play and one-touch mix play will be canceled. (→ 9)
Pause	Press [▶/] . Press again to continue playback.
Skip	Press [◀◀] or [▶▶] to skip track. (This unit: [◀◀/◀◀] or [▶▶/▶▶]) [CD] (MP3), [MEMORY] , [USB] Press [▲] or [▼] to skip the album. <ul style="list-style-type: none">• MEMORY: When using the favorite play function, you can only skip track or album within the selected number for (FAVOURITE) [1] to [5].
Search	During play or pause, press and hold [◀◀] or [▶▶] . (This unit: [◀◀/◀◀] or [▶▶/▶▶])

■ To display information

(**CD**, **MEMORY**, **USB**, **BLUETOOTH**)

You can display the track, artist, album name, file type, bit rate, and other information. (The information varies depending on the audio source.)

Press [DISPLAY] repeatedly.

e.g. **MEMORY**

"M□-A□T□□□": The number for (FAVOURITE) [1] to [5], the number of albums, the number of tracks

(e.g. "M1-A2T030" indicates that (FAVOURITE) [1] consists of 2 albums and 30 tracks.)

e.g. **USB** (MP3)

"A□□□": Album number

"T□□□": Track number

("□" stands for a number.)

"■": Album "♪": Track



- To use this unit's remote control with a Bluetooth® device, the Bluetooth® device must support AVRCP (Audio Video Remote Control Profile). Depending on the status of the device, some controls may not work.
- **CD**, **MEMORY**, **USB**: Tracks can be selected by pressing the numeric buttons.
- Maximum number of displayable characters: Approx. 32
- This system supports ver. 1 and 2 ID3 tags.
- Text data that is not supported will not be displayed or will be shown differently.

Favorite play (**MEMORY**)

You can play your favorite internal memory contents stored under one of (FAVOURITE) [1] to [5].

Preparation

Turn the unit on.

- 1 Press [MEMORY] to select "MEMORY".
- 2 Press [FAVOURITE] and then press one of [1] to [5] on the remote control.
 - Alternatively, press one of (FAVOURITE) [1] to [5] on this unit.

One-touch mix play (**MEMORY**)

You can turn the unit on, and start playing all the contents in the internal memory randomly and repeatedly, with a single press of a button.

Press [MIX PLAY].

- Playback will start and "MIX PLAY" will be shown for a few seconds.
- The audio source will change to "MEMORY" automatically.
- "RND" and "↻" are displayed.

Playback modes (CD, MEMORY, USB)

Select the playback mode.

- 1 Press [PLAY MENU] repeatedly to select "PLAYMODE" or "REPEAT".
- 2 Press [◀, ▶] to select the setting and then press [OK].

PLAYMODE

OFF PLAYMODE	Cancels the play mode setting.
1-TRACK	Only plays the selected track. <ul style="list-style-type: none">• "1", "▶" is displayed. (Skip to the desired track.)
1-ALBUM	Only plays the selected album. <ul style="list-style-type: none">• Press [▲] or [▼] to select the album.• "1", "■" is displayed.
RANDOM	Plays the contents randomly. <ul style="list-style-type: none">• "RND" is displayed.
1-ALBUM RANDOM	Plays the tracks in the selected album randomly. <ul style="list-style-type: none">• Press [▲] or [▼] to select the album.• "1", "■", "RND" is displayed.

REPEAT

ON REPEAT	Turns on repeat mode. <ul style="list-style-type: none">• "↺" is displayed.
OFF REPEAT	Turns off repeat mode.



- During random playback, you cannot skip to tracks which have been played or press the numeric buttons.
- Playmode function does not work with "Program play".
- The mode is canceled when you open the disc tray, remove the USB device, or start recording.
- **MEMORY**: When using the one-touch mix play function, [PLAY MENU] does not work.

Program play

(CD, MEMORY, USB)

This function allows you to program up to 24 tracks.

CD (CD-DA)

- 1 Press [PGM, -DEL] in the stop mode.
 - "PROGRAM" is shown for a few seconds.
- 2 Press the numeric buttons to select the desired track.
 - Do this step again to program other tracks.
- 3 Press [▶/||] to start playback.

CD (MP3), **USB**, **MEMORY**

- 1 Press [PGM, -DEL] in the stop mode.
 - "PROGRAM" is shown for a few seconds.
- 2 Press [▲, ▼] to select the desired album.
- 3 Press [▶▶] and then press the numeric buttons to select the desired track.
- 4 Press [OK].
 - Do steps 2 through 4 again to program other tracks.
- 5 Press [▶/||] to start playback.

Check program contents	Press [◀◀] or [▶▶] in the stop mode.
Clear the last track	Press and hold [PGM, -DEL] in the stop mode.
Cancel program mode	Press [PGM, -DEL] in the stop mode. <ul style="list-style-type: none">• "PGM OFF" is shown for a few seconds.
Clear all programmed tracks	Press [■] in the stop mode. "CLR ALL" is shown. Within 5 seconds, press [■] again.



- The program memory is cleared when you open the disc tray, remove the USB device, or start recording.

Listening to FM radio

You can preset up to 30 channels.
Channel 1 to 5 will be set as the favorite stations under (FAVOURITE) [1] to [5]. (→ right, "Changing the stations stored under (FAVOURITE) [1] to [5]")

Preparation

- Make sure that the antenna is connected. (→ 5)
- Turn the unit on.
- Press [RADIO, USB] repeatedly to select "FM".

Presetting stations automatically

- 1 Press [PLAY MENU] to select "A.PRESET".
- 2 Press [◀, ▶] to select "LOWEST" or "CURRENT" and then press [OK].

LOWEST:

To begin auto preset with the lowest frequency ("FM 87.9" or "FM 87.5").

CURRENT:

To begin auto preset with the current frequency.*1

- The tuner starts to preset all the stations it can receive into the channels in ascending order.

*1: To change the frequency, refer to "Manual tuning".

Listening to a preset channel

Press the numeric buttons, [◀◀] or [▶▶] to select the preset station.

- Alternatively, press [◀◀/◀◀] or [▶▶/▶▶] on this unit when "PRESET" is selected as the tune mode*2.
- You can select channel 1 to 5 by pressing one of (FAVOURITE) [1] to [5] on this unit.

Manual tuning

Press [◀◀] or [▶▶] to tune in to the station.

- Alternatively, press [◀◀/◀◀] or [▶▶/▶▶] on this unit when "MANUAL" is selected as the tune mode*2.

To tune automatically, press and hold the button until the frequency starts changing quickly.

- *2: To change the tune mode
- 1 Press [PLAY MENU] repeatedly to select "TUNE MODE".
 - 2 Press [◀, ▶] to select "MANUAL" or "PRESET", and then press [OK].

Presetting stations manually

- 1 While listening to the radio broadcast
Press [PGM, -DEL].
- 2 Press the numeric buttons to select a preset number.
 - Do steps 1 through 2 again to preset more stations.



- A station previously stored is overwritten when another station is stored in the same channel preset.

Changing the stations stored under (FAVOURITE) [1] to [5]

You can change the stations stored under (FAVOURITE) [1] to [5] easily.

While listening to the radio broadcast
Press and hold one of [1] to [5] until "P □" appears on the display.

("□" stands for a number.)



- When you change the stations stored under (FAVOURITE) [1] to [5], channel 1 to 5 are also changed to the same corresponding stations.

To display the current FM signal status

Press [DISPLAY].

"FM ST": The FM signal is tuned and in stereo.

"FM - - -": There is no tuned signal or the FM signal is in monaural.

"FM MONO": "MONO" is selected as the "FM MODE".
(→ 17, "If noise is excessive during FM reception.")



- "STEREO" is displayed when this unit tunes to a stereo broadcast.

Recording a CD to the internal memory

You can record a CD to this unit's internal memory. The recordings will be stored under your selected number for (FAVOURITE) [1] to [5]. The CD recording duration is the same as its playback duration in order to record in high quality. Enjoy the playback while recording.

- Supported recording source:
A disc with CD audio in CD-DA format

Preparation

- Turn the unit on.
- Load a disc.
- Press [CD/⊗] repeatedly to select "CD".
- Select the recording mode. (→ below)

Do not disconnect the AC power supply cord while recording.



- You cannot check the remaining capacity in the internal memory.
- When recording starts, the playback mode and program settings will be cleared.
- During recording, only limited operation controls are available, such as volume adjustment, stop recording, turning the unit off.

Selecting the recording mode

You can choose from 2 recording modes. Press [REC MODE] repeatedly to select the desired recording mode.

"HQ 1-CD" mode	For normal CD recording in high quality sound. You can record 1 CD under each (FAVOURITE) [1] to [5].
"MULTI-CD" mode	For recording a disc album consisting of several CDs. You can record up to 5 CDs under each (FAVOURITE) [1] to [5] (depending on the CD playback duration).



- The factory default is "HQ 1-CD".
- You cannot record by two types of recording mode within each (FAVOURITE) [1] to [5].

Normal CD recording in high quality sound ("HQ 1-CD" mode)

- 1 Press [● REC] in the stop mode.
 - "SELECT NUMBER" is displayed.
 - 2 Press one of [1] to [5] for storing your recording.
 - **If there is no CD recorded under the selected number**
 - Recording will start.
 - **If there is a CD recorded under the selected number**
 - "TO OVERWRITE, PRESS REC" is indicated on the display.
 - To overwrite the recorded contents, press [● REC] to proceed recording.
 - To cancel, press [■].
- When recording starts, the [● REC] indicator on this unit will light up in red.

To check recording has finished

When recording ends, "WRITING" blinks on the display for a few seconds. Then, the [● REC] indicator on this unit goes off.

To stop recording

- Press [■].
- The recording will stop at the position [■] is pressed.

Recording a disc album consisting of several CDs ("MULTI-CD" mode)

- 1 Press [● REC] in the stop mode.
 - "SELECT NUMBER" is displayed.
 - 2 Press one of [1] to [5] for storing your recording.
 - When recording the subsequent CD of the disc album, select same number as your first recorded CD.
 - **When recording the first CD**

If there is no CD recorded under the selected number:

 - Recording will start.

If there is a CD recorded under the selected number:

 - To overwrite the recorded contents, press [▲, ▼] to select "TO OVERWRITE, PRESS REC" and then press [● REC] to proceed recording.
 - To cancel, press [■].
 - **When recording the subsequent CD**
 - "TO ADD SONGS, PRESS REC" is indicated on the display.
 - To add the current recording under the selected numeric button, press [● REC].
 - To cancel, press [■].
- When recording starts, the [● REC] indicator on this unit will light up in red.

- 3 Check that recording has finished.
 - When recording ends, "WRITING" blinks on the display for a few seconds. Then, the [●REC] indicator on this unit goes off.
- 4 To record the next CD, replace the CD and repeat from step 1.

To stop recording

Press [■].

- The recording will stop at the position [■] is pressed.

■ Deleting the internal memory contents (MEMORY)

- 1 Press [MEMORY] to select "MEMORY".
- 2 While in stop mode, press [SETUP] repeatedly to select "DEL MODE".
- 3 Press [◀, ▶] to select "1-MEM DEL" or "ALL DEL" and then press [OK].

1-MEM DEL	To delete the recorded contents under one of (FAVOURITE) [1] to [5].
ALL DEL	To delete all the recorded contents in the internal memory. (All contents under (FAVOURITE) [1] to [5] will be deleted.)

- 4 When "1-MEM DEL" is selected ((FAVOURITE) [1] to [5] indicators on this unit blink)

Press one of [1] to [5] containing the contents you want to delete.

When "ALL DEL" is selected
((FAVOURITE) [1] to [5] indicators on this unit light up)

Go to step 5.
- 5 Press [OK] to confirm the deletion.
 - To cancel, press [■].
 - "DELETING" blinks on the display when you have proceeded with the deletion.

Do not disconnect the AC power supply cord while "DELETING" is displayed. Failure to do so may cause the internal memory to be corrupted.

Sound adjustment

The following sound effects can be added to the audio output.

- 1 Press [SOUND] repeatedly to select the effect.
- 2 Press [◀, ▶] to select the setting and then press [OK].

"MY SOUND" (My sound)	"SOUND 1", "SOUND 2", or "SOUND 3". (→ below, "Saving the sound settings")
"PRESET EQ" (Preset Equalizer)	"HEAVY" (heavy), "SOFT" (soft), "CLEAR" (clear), "VOCAL" (vocal) or "FLAT" (flat/off).
"BASS" (Bass) or "TREBLE" (Treble)	Adjust the level (-4 to +4).
"D.BASS" (Dynamic Bass)	"ON D.BASS" or "OFF D.BASS".
"SURROUND" (Surround)	"ON SURROUND" or "OFF SURROUND".
"CLEAR-MODE DIALOG" (Clear-mode Dialog)	"ON" or "OFF".

- You may experience a reduction in sound quality when these effects are used with some sources. If this occurs, turn the sound effects off.

Saving the sound settings

You can save your desired sound settings to "SOUND 1", "SOUND 2" or "SOUND 3" as "MY SOUND".

- 1 Adjust your desired sound effects. (→ above)
- 2 Press [SETUP] to select "SAVE MY SOUND".
- 3 Press [◀, ▶] to select a setting number and then press [OK].
 - "SAVED" is displayed.
 - The sound settings previously saved will be replaced when you save new settings to the same setting number.

Recalling the sound settings you have saved

- 1 Press [SOUND] to select "MY SOUND".
- 2 Press [◀, ▶] to select the desired sound setting number and then press [OK].

Others

Auto off function

As a factory default, this unit will turn to standby mode automatically if there is no sound and it is not being used for approximately 20 minutes.

To cancel this function

- 1 Press [SETUP] repeatedly to select "AUTO OFF".
- 2 Press [◀, ▶] to select "OFF" and then press [OK].



- To turn the function on, select "ON" in step 2.
- This setting cannot be selected when radio is the source.
- When connected to a Bluetooth® device, the function does not work.

Bluetooth® standby

When "SC-RS50" is selected from a paired Bluetooth® device's Bluetooth® menu, this unit will turn on automatically from standby mode and establish a Bluetooth® connection.

- 1 Press [SETUP] repeatedly to select "BLUETOOTH STANDBY".
- 2 Press [◀, ▶] to select "ON" and then press [OK].



- To turn the function off, select "OFF" in step 2.
- The factory default is "OFF". If this function is set to "ON", the standby power consumption will increase.

Changing the unit and remote control code

When other Panasonic equipment responds to the supplied remote control, change the remote control code.

- 1 Press [CD/⊗] repeatedly to select "CD".
- 2 Press and hold [■] on the unit and [2] on the remote control until the unit's display shows "REMOTE 2".
- 3 Press and hold [OK] and [2] on the remote control for at least 4 seconds.



- To change the mode back to "REMOTE 1", repeat the steps above but replace [2] with [1].

Software update

Occasionally, Panasonic may release updated software for this system that may add or improve the way a feature operates. These updates are available free of charge.

For more details, refer to the following website.

<http://panasonic.jp/support/global/cs/>
(This site is in English only.)

Checking the software version

Press [SETUP] repeatedly to select "SW VER." and then press [OK].

The version of the installed software is displayed.

- Press [OK] to exit.

Playable media

Compatible CD

- A disc with the CD Logo.



- This unit can play back discs that conform to the CD-DA format.
- This system can play back CD-R/RW with CD-DA or MP3 format content.
- The unit may not be able to play some discs due to the condition of the recording.
- Before playback, finalize the disc on the device it was recorded on.
- If the disc includes both MP3 and normal audio data (CD-DA), the unit plays the type recorded in the inner part of the disc.
- This unit cannot play files recorded using packet write.
- Disc must conform to ISO9660 level 1 or 2 (except for extended formats).



- Some CD-R/RW cannot be played because of the condition of the recording.
- MP3 files are defined as tracks and folders are defined as albums.
- This system can access up to:
 - CD-DA: 99 tracks
 - MP3: 999 tracks, 255 albums (including root folder)
- Recordings will not necessarily be played in the order you recorded them.

Compatible USB devices

- This unit does not guarantee connection with all USB devices.
- FAT12, FAT16 and FAT32 file systems are supported.
- This unit supports USB 2.0 High Speed.
- USB devices with storage capacity of more than 32 GB cannot work in some conditions.
- Supported format: Files with the extension “.mp3” or “.MP3”.
- Depending on how you create the files, they may not play in the order you numbered them or may not play at all.



- Files are defined as tracks and folders are defined as albums.
- This system can access up to:
 - 800 albums (including root folder)
 - 8000 tracks
 - 999 tracks in one album

Unit and media care

Pull out the AC power supply cord from the outlet before maintenance.

■ Clean this unit with a soft, dry cloth

- When dirt is heavy, wring a wet cloth tightly to wipe the dirt, and then wipe it with a dry cloth.
- When cleaning the speaker covers, use a fine cloth. Do not use tissues or other materials that can fall apart. Small pieces may get stuck inside the speaker cover.
- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, carefully read the cloth's instructions.

■ Clean discs

DO



DO NOT



Wipe with a damp cloth and then wipe dry.

■ Disc handling precautions

- Handle discs by the edges to avoid inadvertent scratches or fingerprints on the disc.
- Do not attach labels or stickers to discs.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs etc.).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.

■ To dispose or transfer this unit

The unit may keep the user settings information in the unit. If you discard this unit either by disposal or transfer, then follow the procedure to delete the internal memory contents with “ALL DEL” mode, and then return all the settings to the factory defaults to delete the user settings.

(→ 13, “Deleting the internal memory contents (MEMORY)”)

(→ 17, “To return all settings to the factory defaults”)

Troubleshooting

Before requesting service, make the following checks. If you are uncertain about some of the check points, or if the solutions indicated in the following guide does not resolve the issue, then consult your dealer for instructions.

To return all settings to the factory defaults

Perform this procedure when the following situations occur:

- There is no response when buttons are pressed.
 - You want to clear and reset the settings.
- ① Disconnect the AC power supply cord. (Wait for at least 1 minute before proceeding to step ②.)
 - ② While pressing and holding down [⏻/|] on the unit, reconnect the AC power supply cord.
 - "INITIALIZING" appears on the display.
 - Keep holding down [⏻/|] until "-----" appears on the display.
 - ③ Release [⏻/|].



- All the settings are returned to the factory defaults. You will need to make the settings again.
- The recorded contents in the internal memory are maintained.

General

Cannot turn on the unit.

- After connecting the AC power supply cord, wait about 10 seconds before turning on the unit.

Humming heard during playback.

- If an AC power supply cord or fluorescent lights are near the cords, then keep other appliances and cords away from the cables.

The unit does not work.

- One of the unit's safety devices may have been activated.
 - ① Press [⏻/|] on the unit to switch the unit to standby.
 - If the unit does not switch to standby, press and hold [⏻/|] on the unit for approximately 10 seconds. The unit is forcibly switched to standby. Alternatively, disconnect the AC power supply cord, wait for at least 1 minute, then reconnect it.
 - ② Press [⏻/|] on the unit to switch it on. If the unit still cannot be operated, consult the dealer.

Charging does not start.

- Select a source other than "USB".
- If charging does not start during standby mode: Turn the unit on. Check the charging has started, and then turn the unit to standby mode. (→ 6)

Noise is heard or the sound is interrupted.

- Make sure not to place any device which uses radio frequency (e.g. mobile phone, etc.) on top of this unit.

Remote control

The remote control does not work properly.

- The battery is depleted or inserted incorrectly. (→ 5)

Disc

Incorrect display or play does not start.

- Make sure that the disc is compatible with this unit. (→ 16)
- There is moisture on the lens. Wait for about an hour and then try again.

USB

No response when [▶/||] is pressed.

- Disconnect the USB device and then reconnect it. Alternatively, turn the unit off and on again.

The USB drive or its contents cannot be read.

- The USB drive format or its contents is/are not compatible with the unit (→ 16).
- The USB host function of this product may not work with some USB devices.

Slow operation of the USB flash drive.

- Large file size or high memory USB flash drive takes longer time to read.

The elapsed time displayed is different from the actual play time.

- Copy the data to another USB device or backup the data and reformat the USB device.

Radio

If noise is excessive during FM reception.

- Change the audio to be output as monaural.
 - ① Press [PLAY MENU] repeatedly to select "FM MODE".
 - ② Press [◀, ▶] to select "MONO" and then press [OK]. The sound becomes monaural.
 - To cancel, select "STEREO" or change the frequency. In normal circumstances, select "STEREO".

Static or noisy reception is heard while listening to a radio broadcast.

- Confirm the antenna is properly connected. (→ 5)
- Adjust the position of the antenna.
- Try to keep a certain amount of distance between the antenna and AC power supply cord.
- Try using an outdoor antenna if there are buildings or mountains nearby.
- Turn the TV or other audio players off or separate it from this unit.
- Keep this unit away from mobile phones if there is interference.

Stations cannot be selected.

- Change the FM frequency step.
 - ① Press [SELECTOR, —] PAIRING repeatedly to select "FM".
 - ② Press and hold [■] on the unit.
 - After a few seconds the display changes to show the current lowest frequency. Continue to hold the button down. The lowest frequency changes and the step is changed.

Bluetooth®

Pairing cannot be completed.

- Check the Bluetooth® device condition.

The device cannot be connected.

- The pairing of the device was unsuccessful or the registration has been replaced. Try re-pairing the device. (→ 7)
- This unit might be connected to a different device. Disconnect the other device and try re-pairing the device. (→ 7)
- If the problem persists, turn the unit off and on, then try again.

The device is connected, but audio cannot be heard through this unit.

- For some built-in Bluetooth® devices, you have to set the audio output to "SC-RS50" manually. Read the operating instructions for the device for details.

The sound is interrupted.

- The device is out of the 10 m (33 ft) communication range. Place the Bluetooth® device closer to this unit.
- Remove any interference between this unit and the device.
- Other devices that use the 2.4 GHz frequency band, such as wireless routers, microwaves, cordless phones, etc. are interfering. Place the Bluetooth® device closer to this unit and distance it from the other devices.
- Select "MODE 1" for stable communication. (→ 7)

Messages

The following messages or service numbers may appear on the unit's display.

"--:--"

- You plugged the AC power supply cord in for the first time or there was a power failure recently. Set the time (→ 14).

"ADJUST CLOCK"

- Clock is not set. Adjust the clock accordingly.

"ADJUST TIMER"

- Play timer is not set. Adjust the play timer accordingly.

"AUTO OFF"

- The unit has been left unused for about 20 minutes and will shut down within a minute. Press any button to cancel it.

"CHANGE TO CD MODE"

- You can only perform recording when "CD" is selected as the source. Press [CD/Ⓜ] repeatedly to select "CD". (→ 12)

"DIMMER"

- Appears 10 seconds after the volume is turned to "0".

"ERROR"

- Incorrect operation is performed. Read the instructions and try again.

"F□□" / "F□□□" ("□" stands for a number.)

- There is a problem with this unit. Write down the displayed number, disconnect the AC power supply cord and consult your dealer.

"INITIALIZING"

- The system is carrying out an initializing process. When the process is complete, "COMPLETE" or "-----" will be shown for a few seconds. Wait until the message disappears.

"LINKING"

- This system is trying to connect to the last connected Bluetooth® device when "BLUETOOTH" is selected.

"M□ FULL" ("□" stands for a number.)

- The selected number for (FAVOURITE) [1] to [5] has stored contents from 5 CDs. You cannot record more than 5 CDs. Delete its contents before making new recordings. (→ 13)

"MEMORY ERROR"

- Turn the unit off and disconnect the AC power supply cord. Wait for at least 1 minute, then reconnect the AC power supply cord. Turn the unit on and try again. If the problem persists, the contents in the internal memory are corrupted. Delete the internal memory contents with "ALL DEL" mode (→ 13), and make your recordings again.

"MEMORY FULL"

- There is insufficient space in the internal memory. Delete the recorded contents before making new recordings. (→ 13)

"NO DEVICE"

- The USB device is not inserted correctly. Read the instructions and try again (→ 6).

"NO DISC"

- Insert the disc to be played (→ 6).

"NO PLAY"

- A CD that is not in CD-DA or MP3 format is inserted. It cannot be played.
- Examine the content. You can only play supported format. (→ 16)
- The files in the USB device can be corrupted. Format the USB device and try again.
- The unit may have a problem. Turn the unit off and then on again.

"NO TRACK"

- There is no track in the USB device, the internal memory, or under the selected number for the internal memory.

"NOT SUPPORTED"

- You have connected an unsupported USB device.
- If you have connected a device for charging, select a source other than "USB".

"PGM FULL"

- The number of programmed tracks is more than 24.

"PLAYERERROR"

- You played an unsupported file. The system will skip that track and play the next one.

"READING"

- The unit is checking the "CD"/"USB"/"MEMORY" information. After this display has disappeared, start operating.

"REMOTE □" ("□" stands for a number.)

- The remote control and this unit are using different codes. Change the code on the remote control.
 - When "REMOTE 1" is displayed, press and hold [OK] and [1] for at least 4 seconds.
 - When "REMOTE 2" is displayed, press and hold [OK] and [2] for at least 4 seconds.

"SCMS CD CAN'T REC"

- The disc is copy-protected and cannot be recorded.

"SOUND □ NOT SET" ("□" stands for a number.)

- There is no saved setting under the selected sound setting number. Save the sound settings. (→ 13)

"TRY ME"

- This unit is in demo mode. Please return all settings to the factory defaults. (→ 17)

"USB OVER CURRENT ERROR"

- The USB device is drawing too much power. Select a source other than "USB", remove the USB and turn the unit off.

"VBR"

- The system cannot show the remaining play time for variable bit rate (VBR) tracks.

Specifications

■ GENERAL

Power consumption	24 W
Power consumption in standby mode (When "BLUETOOTH STANDBY" is "OFF")*1	Approx. 0.2 W (When "BLUETOOTH STANDBY" is "ON")*1
Power supply	Approx. 0.3 W AC 120 V, 60 Hz

Dimensions (W×H×D)

450 mm×107 mm×245 mm
(17 23/32"×4 7/32"×9 21/32")

Mass Approx. 3.1 kg (6.8 lbs)

Operating temperature range
0 °C to +40 °C (+32 °F to +104 °F)

Operating humidity range
35 % to 80 % RH (no condensation)

■ AMPLIFIER SECTION

Output power

RMS Output Power

Front Ch (both ch driven)

20 W per channel (8 Ω), 1 kHz, 10 % THD

Total RMS power 40 W

■ TUNER SECTION

Preset Memory FM 30 stations

Frequency Modulation (FM)

Frequency range

87.9 MHz to 107.9 MHz (200 kHz step)

87.5 MHz to 108.0 MHz (100 kHz step)

Antenna terminals 75 Ω (unbalanced)

■ DISC SECTION

Disc played (8 cm (3") or 12 cm (5"))

CD, CD-R/RW (CD-DA, MP3*2)

Pick up

Wavelength 790 nm (CD)

■ INTERNAL MEMORY SECTION

Memory

Memory size 4 GB
(Equivalent for total storage of 5 CDs recorded in "HQ 1-CD" mode)*3

Memory record

Recording file format

WAV (*.wav) / "HQ 1-CD" mode,
MP3*2 (*.mp3) / "MULTI-CD" mode

Bit rate

1141 kbps (WAV),
320 kbps (MP3*2)

Memory recording speed

1×

■ SPEAKER SECTION

Speaker unit(s)

Full Range 6.5 cm (2 1/2") Cone type×2

Impedance

8 Ω

■ TERMINAL SECTION

USB Port

USB port power DC 5 V 1.5 A

USB Standard USB 2.0 High Speed

Media file format support MP3*2 (*.mp3)

Audio Support format

MP3*2

Sampling frequency 32/44.1/48 kHz

Audio word size 16 bits

Channel count 2 ch

USB device file system FAT12, FAT16, FAT32

Headphones Stereo, 3.5 mm (1/8") jack

■ Bluetooth® SECTION

Version

Bluetooth® Ver.2.1+EDR

Class

Class 2

Supported Profiles

A2DP, AVRCP

Frequency band

2.4 GHz band FH-SS

Operation Distance

10 m (33 ft) Line of sight

Supported Codec

SBC



- Specifications are subject to change without notice.
- Mass and dimensions are approximate.
- Total harmonic distortion is measured by a digital spectrum analyzer.

*1: No device is connected to the USB port before turning to standby mode.

*2: MPEG-1 Layer 3, MPEG-2 Layer 3

*3: Equivalent for total storage of 25 CDs of 70-min disc recorded in "MULTI-CD" mode.

Limited Warranty

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

PANASONIC PRODUCT - LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by Panasonic Canada Inc.

Panasonic BD/DVD Product - One (1) year, parts and labour

Panasonic Audio Receivers - One (1) year, parts and labour

Home Theater Systems Product - One (1) year, parts and labour

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada, which product was not sold "as is", and which product was delivered to you in new condition in the original packaging.

IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF PURCHASE IS REQUIRED

LIMITATIONS AND EXCLUSIONS

This warranty **ONLY COVERS** failures due to defects in materials or workmanship, and **DOES NOT COVER** normal wear and tear or cosmetic damage. The warranty **ALSO DOES NOT COVER** damages which occurred in shipment, or failures which are caused by products not supplied by Panasonic Canada Inc., or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than an Authorized Servicer, or damage that is attributable to acts of God.

Dry cell batteries are also excluded from coverage under this warranty.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY. (As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or other memory or recorded content. This list of items is not exhaustive, but for illustration only.)

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable. This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

WARRANTY SERVICE

For product operation, repairs and information assistance, please visit our Support page:
www.panasonic.ca/english/support

IF YOU SHIP THE PRODUCT TO A SERVICENTRE

Carefully pack and send prepaid, adequately insured and preferably in the original carton. Include details of the defect claimed, and proof of date of original purchase.

The model number and serial number of this product can be found on either the back or the bottom of the unit.

Please note them in the space provided below and keep for future reference.

MODEL NUMBER SC-RS50
SERIAL NUMBER _____
NUMBER _____

User memo:

DATE OF PURCHASE	_____
DEALER NAME	_____
DEALER ADDRESS	_____
TELEPHONE NUMBER	_____