


Quick Start Guide

Panasonic

1 Pedestals assembly

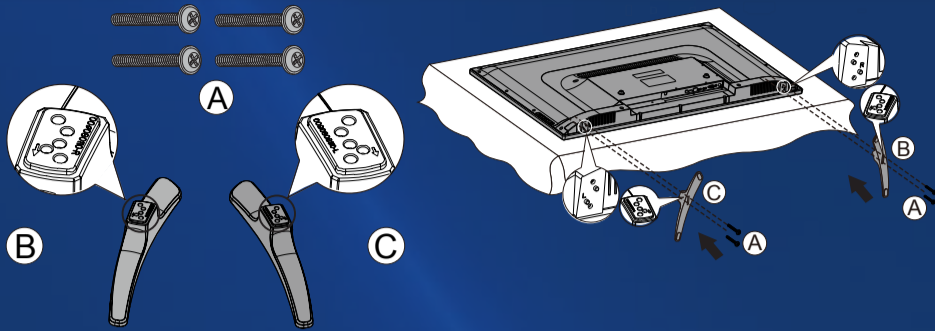

Be sure to attach the pedestals in the following way.

1. Lay the TV face down on a flat, cushioned surface to avoid damaging or scratching.
2. Attach the pedestals **B** **C** to the TV with four assembly screws **A** provided.

2 Connect TV to HD box

Best

HDMI Use an HDMI cable for best HD picture.
HDMI port #1 is recommended.

OR

Good

Component Note: 1st red is for audio; 2nd red is for video.

OR

Basic (Not HD)

Video Note: Connect yellow wire to green.

3 First time setup

Turn the TV on, then follow the on-screen steps.

 


4 Watch TV via HD box



Network connection

Establish a connection

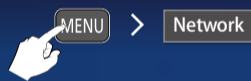

Select network connection type

Wired LAN (Ethernet)

For minimal network interference, wire the TV to your router using an Ethernet cable.



Built-in Wireless LAN

To connect the TV to your wireless router, you will need:

- Your wireless network name
- Your wireless network password (if required)

Wireless connection with a password

Select your wireless network name (SSID)

The network name and password may be printed on the Router's label. Encryption key (password) is CASE sensitive.

Streaming services



Additional Support

Built-in Manual



Visit Panasonic.com/Support

FAQ's

Why is the screen displaying a blue, black or snowy picture or no picture at all?



- Ensure power cord is plugged in and TV is on (front LED should be red).
- Press INPUT SOURCE button on TV remote to select correct input source.
- Check that all connections are correct and secure.
- When using external video source, such as Cable/Satellite box or DVD player, check that device is working.

Why does my picture quality not look like it is in High Definition?



- Press INFO button on remote to confirm type of signal being received. HD signal should be 720p, 1080i or 1080p.
- Select a High Definition channel from HD source (Cable, Satellite, Fiber optic or antenna).
- HD channels sometimes broadcast non-HD content.
- Ensure that HD source (HD box, Blu-ray player, etc.) is connected to TV via either HDMI or Component cable and set to output HD video signal.

Why did the network connection fail?



- If connection fails, contact your Internet service provider or router/modem manufacturer to check for firewall, content filter or proxy settings that may block TV from accessing the Internet.

How can I hear the TV's sound through my Home Theater?



- If your Home Theater has an HDMI-ARC Out, then connect it to the TV's HDMI 2 (ARC) input using an HDMI cable.
- If HDMI-ARC is not available, then connect the TV's DIGITAL AUDIO OUT to the Home Theater using an optical cable or connect to the headphone jack.

Register your new TV at Panasonic.com/Register

- Get exclusive access to Panasonic owner privileges

Check out Panasonic accessories and other great products at: Shop.Panasonic.com

