# Panasonic

TC-L32XM6X/TC-L32XM6P TC-L39EM6X

VIECN

For additional assistance, visit us at:

C.0+Digital Out

(LATIN) www.panasonic-la.cor

**dts** 

This product incorporates some kinds of open source software. The software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refe to the detailed terms and conditions thereof shown in the "License" menu on this product.

Panasonic does not guarantee operation and performance of peripheral devices made by other manufacturers; and we disclaim any liability or damage arising from operation and/or performance from usage of such other maker's peripheral devices.

HDMI, the HDMI logo and High- Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent Nos 5.956.674: 5.974.380: 6.487.535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0+Digital Out is a trademark of DTS. Inc. Product includes software. © DTS, Inc. All Rights Reserved.

# Contents

Safety Precautions	. 2
Note to CATV System Installer	. 2
Secure Ventilation	. 2
Important Safety Instructions	. 2
Attaching the pedestal to TV	. 3
Connection Panels	. 5
AV cable connection	. 5
Audio connection	. 6
Audio ARC connection	. 6
Using Controls on the TV	. 6
Indicators on the TV	. 6
Power cord connection	
Installing the remote's batteries	. 6
Remote control	. 7
First Time Setup	. 7
Watching TV	. 8
Listen with SAP (Secondary Audio Programming)	8
Closed Caption (CC)	
Displaying information	. 8
Display the "Options menu"	. 8
Call up a Favorite channel	. 8
Password setting/entering	
Set the "Sleep timer"	
How to Use Menu Functions	. 9
Using Media player	
Supported file format in Media Player	
Specifications	14
Notes	
Customer Service Directory	15



proper ventilation is provided.

- Keep these instructions. Heed all warnings. Follow all instructions. Clean only with dry cloth.
- registers, stoves or other apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- rom tip-over. long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- AV cable connection Usi A To use HDMI terminals Best AV Equipmen HDMI1 HDM AVIN AV OUT VESA standard e.g. Blu-ray Disc HDMI2 interface HDMI-DV player Conversion cable 32" 200 x 100 mm 3 DVI OUT AV Equipment -39" 200 x 200 mm  $\odot$ ---Mounting screws AUDIO OUT e.g. Blu-ray Disc measurements: M6 x 4 **B** To use COMPONENT input terminals Good 1 Changes the input mode ● Chooses menu and submenu entries, and returns (Press and hold down for MENU function) green gre 2 Channel up/down ð 3 Volume up/down VIDEO OUT blue blue Picture AV Equipmer 4 Power button '----Indicators on the TV green e.g. Blu-ray Disc Remote control signal AUDIO white white OUT receiver -----Remote control sensor white range is about 23 feet (7 meters) in front of the TV Basic © To use VIDEO input terminals 2 Power LED AV Equipment ÌΗD) ON: red OFF: no light 1 2 e.g. DVD Recorder ⊐▥+◉੶ white white AUDIO or • The TV consumes a small amount of electric energy even 1 USB port when turned off. 2 DIGITAL AUDIO OUT -----e.a. VCR • Do not place any objects between the TV remote control **3 ANTENNA / CABLE IN** sensor and remote control. 4 Video IN / COMPONENT IN 5 HDMI 1 - 2 Audio connection Power cord connection Listen to your TV through your stereo Insert the power cord plug (included) firmly into place. Stereo Syster When disconnecting the powe cord, be absolutely sure to DIGITAL AUDIO IN disconnect the power cord pli from the wall outlet first. Optical cable The included power cord is for use with this unit only. e.g. Amplifier Installing the remote's batteries Audio ARC connection Listen to your TV through your HDMI AMP Pull oper 1 2 with the TV. AV IN For additional assistance, visit us at: HDM Hook HDMIZ -Note the correct polarity www.panasonic.com.mx TV OUT (+ or -). HDMI cable Caution: Amplifier with Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control. Do not mix old and new batteries Do not mix different battery types (such as alkaline and manganese batteries).
  Do not use rechargeable (Ni-Cd) batteries.
  Do not burn or break batteries.

# **Optional accessories**

LCD TV

Standard accessories

items shown

Remote Control

N2QAYB000820

Batteries for the

• (AA)

Operating

English

Instructions

Check that you have the accessories and

Remote Control (2)

Thank you for purchasing this Panasonic product.

in this manual are for illustrative purposes only

Please read these instructions before operating your set and retain them for future reference. The images shown

Pedestal

Ø


(4 of each) A B B

Power cord

# Wall-hanging bracket (not supplied)

Use the screws that are threaded into the stand-mounting inserts on the back of your LCD TV to secure it to a Wall Mounting kit

It is safe to use long screws for this product. When using long screws, the two bottom screws may loosen, but the top two will remain tightly in place to secure the mounted TV.

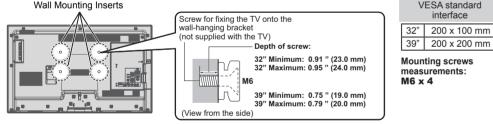


Please contact your nearest Panasonic dealer to purchase the recommended wall-hanging bracket. For additional details, please refer to the wall-hanging bracket installation manua

#### WARNING

- Customer assumes liability if mounting the unit themselves or if a Panasonic bracket is not used. Any damage resulting from not having a professional installer mount your unit will void your warranty. Always be sure to ask a qualified technician to perform any necessary set-up. Incorrect fitting may cause equipment to fall, resulting in injury and
- product damage Do not mount the unit directly below ceiling lights (such as spotlights, floodlights or halogen lights) which typically give off high heat. Doing so may
- warp or damage plastic cabinet parts. Take care when fixing wall brackets to the wall. Always ensure that there are no electrical cables or pipes in the wall before hanging bracket.
- When using an angled-type wall hanging bracket, please ensure that there is sufficient space for the connecting cables so that they do not press
- against the wall when the TV is tilted forward. • For safety reasons, remove units no longer being used from their wall-mounted locations.

### **Connection Panels**

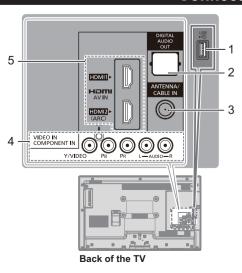

• When using a Cable box, external equipment and video cables shown in this manual are not supplied

#### Safety Precautions



The lightning flash with arrowhead within a triangle is d to tell the user that parts inside the product are a risk of electric shock to persons.

The exclamation point within a triangle is intended to tell the user that important operating

and servicing instructions are in the papers with the

# Note to CATV System Installer

This reminder is provided to direct the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.


#### Secure Ventilation

Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to ensure reliable operation of the LCD TV and to protect it from overheating. These openings must not be blocked or covered. There should be at least 10 cm of space around the TV. The openings should never be blocked by placing the LCD TV on a bed, sofa, rug or other similar surface. This LCD TV should not be placed in a built-in installation such as a bookcase unless

# Important Safety Instructions

- Read these instructions
- Do not use this apparatus near water
- 7) Do not block any ventilation openings. Install in accordance with
- e manufacturer's instructions. 8) Do not install near any heat sources such as radiators, heat
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point
- where they exit from the apparatus. 11) Only use attachments / accessories specified by the manufacturer
- 12) Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when oving the cart / apparatus combination to avoid injur
- 13) Unplug this apparatus during lightning storms or when unused for

ng Contro	Is on the TV
e input mode	

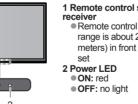







5

- 15) Operate only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home consult your television dealer or local power company.
- Follow all warnings and instructions marked on the LCD TV. Never push objects of any kind into this LCD TV through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid
- of any kind on the LCD TV. 18) If an outside antenna is connected to the television equipment, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. In the U.S. Section 810-21 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors. location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

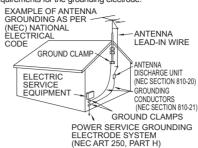

- An outside antenna system should not be located in the vicinity of coverhead power lines, other electric light, power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be
- 20) Unplug this LCD TV from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- When the power cord or plug is damaged or frayed.
- If liquid has been spilled into the LCD TV. If the LCD TV has been exposed to rain or water. If the LCD TV does not operate normally by following the
- operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the LCD TV to normal If the LCD TV has been dropped or the cabinet has been
- damaged. When the LCD TV exhibits a distinct change in performance
- this indicates a need for service. 21) When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 22) WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING, DO NOT PLACE LIQUID CONTAINERS (FLOWER VASES, CUPS, COSMETICS ETC.) ABOVE THE SET (INCLUDING ON SHELVES ABOVE, ETC.)
- WARNING: SMALL PARTS CAN PRESENT CHOKING 23) HAZARD IF ACCIDENTALLY SWALLOWED, KEEP SMALL PARTS AWAY FROM YOUNG CHILDREN. DISCARD UNNEEDED SMALL PARTS AND OTHER OBJECTS, INCLUDING PACKAGING MATERIALS AND PLASTIC BAGS SHEETS TO PREVENT THEM FROM BEING PLAYED WITH BY YOUNG CHILDREN, CREATING THE POTENTIAL RISK OF SUFFOCATION.

2

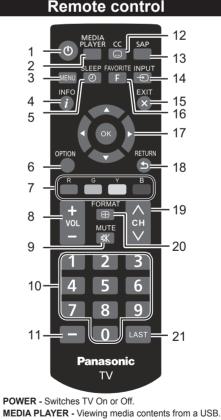


- MENU Press to display the menu screen
- INFO Displays TV status information as well as program details
- SLEEP Accesses the sleep timer. **OPTION -** Displays Options menu for special functions
- (when available COLOR KEY - Red/Green/Yellow/Blue key for various
- 8 Volume Up / Down (VOL+ / - ) - Press to decrease or increase the audio volume.
- MUTE Turns off/on the sound.
- 10 Channel Numbers Directly tune channels.
- 11 Use for digital channels 12 CC - Switches the Closed Caption mode On or Off.
- 13 SAP Select the Audio mode for watching TV. (SAP : Secondary Audio Programming). 14 INPUT - Select input sources "ANT/Cable in", "HDMI 1",
- "HDMI 2", "Component", "Video" by pressing INPUT button on Remote Control. 15 EXIT - Exit from the menu screen.
- 16 FAVORITE Accesses the favorite channels.
- 17 OK / ▲ ▼ ◀ ▶ Selects/OK/Change.
- 18 RETURN Press to return to previous menu.
- 19 Channel Up / Down (CH ^ / Y) Press to switch to the last or next channel. 20 FORMAT - To cycle through the aspect ratio modes. 21 LAST - Switches to previously viewed channel or input. 6

- 24) WARNING: To prevent the spread of fire, keep candles or other open flames away from this product at all times
- 25) WARNING: A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 26) CAUTION: The Power switch on this unit will not completely shut off all power from AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example when on vacation).
- 27) CAUTION: TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE CAUTION: USE WITH OTHER STAND MAY RESULT IN INSTABILITY POSSIBLY CAUSING INJURY.
- 29) **CAUTION:** DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

### Attaching the pedestal to TV

#### Set-up

- Fix securely with assembly screws (A). (Total 4 screws)
- Tighten screws firmly. Tighten assembly screws 
   B (total 4 screws) loosely at first, then tighten them firmly to fix securely.

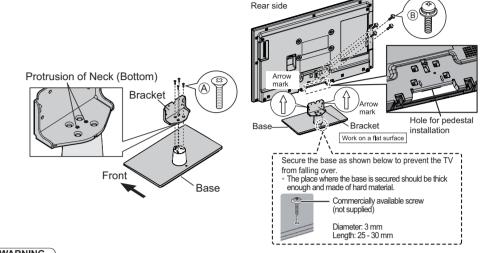

WARNING

- Do not disassemble or modify the pedestal Otherwise the TV may fall over and become damaged, and personal injury may result
- Caution

- Do not use any pedestal other than that provided with this TV. Otherwise the TV may fall over and become damaged, and personal injury may result. Do not use the pedestal if it becomes warped or physically damaged. If you use the pedestal when it is physically damaged, personal injury may result. Contact your nearest Panasonic Dealer immediately.
- During set-up, make sure that all screws are securely tightened.
   If sufficient care is not taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.

Watching TV

Also press CH A / CH V buttons on Side Controls or CH A /

Reselect "Cable" or "Antenna" in "ANT in" of "TV" settings menu

to switch the signal reception between cable TV and antenna.
 The channel number and volume level remain the same even

Listen with SAP (Secondary

Audio Programming

Select the Audio mode for watching TV

Press [SAP] to select next Audio track (if available) when

Each press of [SAP] will change the Audio mode.
 ("Stereo" / "SAP" / "Mono")

• The selected mode is only set for the program you are

sAP is not available when watching TV with a Cable or

Contact your Cable or Satellite operator for instructions on

**Closed Caption (CC)** 

CC4, receiving mode and CC setting in

Press [CC] to select the CC1/CC2/CC3/

• The selected mode is only set for the program you are

enabling CC with their box.The CC service is depend on the input signal

via the Antenna/Cable input.

Rating

watching at the moment.
Closed Caption is not available when watching TV with a Cable or Satellite box connected via HDMI.
Contact your Cable or Satellite operator for instructions on

Displaying information

Displays or hides information. Shows the

channel banner when watching programs

Channel Program Program duration SAP indication

Favorite channel

Visually impaired

Hearing impaired

— Closed Caption

Signal resolution

7

Press [SAP] to select the desired Audio mode.

CH v buttons on Remote Controls to select programs

Press CH ✓ button to select previous channel.

Turn power on

Select a channel number

For Cable/Satellite box connection-

after the TV is turned off

receiving a digital channel.

enabling SAP with their box.

Use your connected box's remote control.

To directly enter the digital channel number

• Press CH ~ button to select next channel.

Select correct input

Note:

Digital mode

Analog mode

menu

Input

#### First Time Setup

First time setup screen is only displayed automatically after the power cord is inserted into a wall outlet and the TV is turned on for the first time.

- Turn the TV On with the "POWER" button
- Select your language
- English/Español/França
- Set viewing mode
- Select your viewing mode (Be sure to select "Home use") 2 Please confirm your selection (Home use) before pressing
- If you select "Store demonstration" by mistake in "Set viewing
- mode", confirmation screen will be displayed. Select "No" and return to previous screen "Set viewing

#### mode" If you select "Yes", screen enters the store

Finished First time setup.

button and select the appropriate input.

defaults" in the "Setup" menu.

audio and interactive television

respectively.About broadcasting systems

the unit.

- demonstration mode.To display the "Set viewing mode" screen again as shown above and select "Home use", perform "Reset to defaults" If you perform "Reset to defaults", please do not unplug the AC Cord while the TV is being reset.
- ANT/Cable setup (Auto channel setup)
- Select signal type "Over-the-Air" or "Cable service". 2 Select "Auto program" and start scanning, the channel canning star

Congratulations! Setup is complete.

To watch TV via a Cable box, Satellite receiver, or any other

source (DVD, DVR, gaming device, etc.), press the INPUT

• If you turn the TV off before completing "First time setup", the

You can repeat "First time setup" by selecting "Reset to

Analog (NTSC): Conventional broadcasting

After "First time setup", you can also change "Language"

and "ANT/Cable setting" from the "Setup" and "TV" menus

Digital (ATSC): Digital TV Standards include digital high-

definition television (HDTV), standard-definition television

(SDTV), data broadcasting, multi-channel surround sound

initial setup will not launch again the next time you power on

Display the "Options menu" How to Use Menu Functions Press [OPTION] to show the "Options" Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV best suited for you. menu' Press MENU button, the menu will be displayed. This menu consists of shortcuts to convenient functions. This menu is only available when the TV is using the Antenna/ Press ▲ ▼ buttons to select item desired. Press <> buttons to adjust value. Cable input, not when using Cable or Satellite box. Press RETURN button return to the previous menu Channel surf mode Specify favorites or type of channels to view when pressing the [ < / ► Left / Right] button. • "All" / "Favorite" / "Digital only" / "Analog only" "Favorite": Only channels registered as FAVORITE. Signal meter Check the signal strength if interference is found or freezing occurs on a digital image. If the signal is weak, check the antenna. If a problem is found, consult your local dealer. Call up a Favorite channel FAVORITE Channel numbers registered in Favorite are displayed on the "Favorite list" screen. Select the desired channel with the up/ down cursor. To set Favorite channels While viewing the channel that you want to set: • "All" / "Favorite" / "Digital only" / "Analog only" "Favorite": Only channels registered as FAVORITE. ● When watching a Favorite channel, the icon "♥" will be displayed on the channel banner. You can set up to 10 channels as Favorite. • If you set a new channel in a used slot, the original Favorite channel will be deleted first then you can add a new one. You can set Favorite channels when using Cable or Satellite To delete Favorite channels Select the channel you want to remove, then press OK button. ● The icon "♥" will be removed from the channel banner Password setting/entering You need to enter the password when you access locked channel or inputs. Input your 4-digit password

Features

Repeat

MENU

3 Set

Þ 🔟 Pi

enjoying.

Play folder

Drive select

Media select

([Off] / [One] / [Folder])

**1** Display the menu

Picture

Audi

2 Select the "Picture" item

1 Display the "Music options" screen

2 Set the play repeat mode to your preference

[Other settings in Media player]

Adjust the Picture and Audio

Some items are grayed out to indicate that these items are not available. Availability depends on the contents you are

[Music options]

- If it is your first time entering the password, please enter "1234". This is the default password. To change password - Input the new 4-digit password twice.
  Make a note of your password. Do not forget it. (If you have
- When your password, consult your local dealer.)
  When you select a locked channel, a message will be displayed

# that allows you to view the channel after you input your password.

### Set the "Sleep timer"

- The TV automatically goes into Standby after the selected Press [SLEEP] repeatedly until the
- desired time appears.

- It is also possible to set the time from "Sleep timer" in the "Setup" To cancel, set to "Off " or turn off the TV.
- When the remaining time is within 3 minutes, the remaining time
- will flash on screen. • "Off " / "15" / "30" / "60" / "90" (minutes)

#### Videos view

Supported file format  $\rightarrow$  (p.13)

The thumbnail of all the Videos in the USB Flash Memory will be displayed.

Media p	layer 🧌	🖌 Videos	;		Tit	le/Folders view
Trip1	Trip2	Trip3	Trip4	Trip5	Room	Nature1
Nature2	Nature3	Nature4	Nature5	Nature6	2010_4	2010_7
Ac	cess 🔊 E	XIT		nfo		USB
S	cess ) E elect ) E	RETURN		/ideo optio		

### Operation guide


#### Features Play folder

<ul> <li>Play folder</li> </ul>	⇒ 💼
Drive select	⇒ Ŭ
<ul> <li>Media select</li> </ul>	⇒ 💼
<ul> <li>Aspect change</li> </ul>	

#### [Video options]

- 1 Display the "Video options" screen

2 Set the play repeat function to your preference Repeat ("Off" / "On")

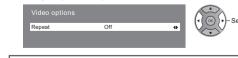

#### Music play

Supported file format → (p.13) Music folders in the USB Flash Memory will be

displayed.			
Media player 🎵 N	lusic		Folders
My Music 1 My Music 2 My	Y Music_3		
Access Select RE Play folder	IT 🚺 Info TURN @ Music o	ptions Drive select	USB edia select
(	T		

Operation guide

Press <b>RETURN</b> button return to the previous menu.					
<ul> <li>Display the menu</li> <li>Shows the functions that can be adjusted.</li> </ul>					
<ul> <li>Some functions will be disable input signal.</li> </ul>					
Menu structure					
Menu bar Press [OK] or [right cursor] to mov	ve to the menu items				
	Menu items				
Picture Reset to defaults     Picture mode Vivid					
Audio Back light Contrast	Press [OK] to enter submenu page				
Lock Brightness	60 if available.				
Sharpness	Intensity bar				
Color temp. Cool=	ttem option				
Picture I Adjust I Picture	Return     Operation guide				
(example: "Picture					
Select the menu					
Picture — Picture settings					
Audio — Audio settings					
Lock – Lock settings					
(Channel, Progra	ım, etc.)				
	nguage, Preferred audio type)				
Setup — Setup (other set	lings)				
Adjust or select a menu item					
Picture Reset to defaults     Picture mode Vivid					
Audio Back light 100 Contrast 100	(     (     )     (     )     (     )     Call of the select option     (     )     (				
Color 60	U Select item				
Sharpness 70 Color temp. Cool •					
Picture ⊕/@Select © Return					
<ul> <li>Some items have submenus, p the submenu.</li> </ul>	press the [OK] button to enter				
Picture     Al. picture     On	Enter submenu				
Audio Advanced picture					
🔂 Lock					
Setup					

•

→

Adjus

Settings	Items	Option	Settings	Items	Option
Picture		Resets all picture adjustments to factory default settings.	Audio	Reset to defaults	Resets all audio adjustments to factory default settings.
	Picture mode	Vivid/Standard/Cinema/Game/ Custom		Bass	[Increases or decreases the bass response.]
	Back light	[Adjusts the luminance of the back light.]		Treble	[Increases or decreases the treble response.]
	Contrast, Brightness,	[Adjusts the color, brightness, etc. for each picture mode to suit your		Balance	[Emphasizes the left / right speaker volume.]
	Color, Tint, Sharpness	preference]		Surround	Off/On Enhances audio L/R response when listening to stereo.
	Color temp.	Cool/Normal/Warm • Selects a choice of Cool (blue), Normal, or Warm (red) color.		TV speakers	Off/On Switches to "Off" when using external speakers.Off: "Surround" does not work if "Off" is selected.
	A.I. picture	Off/On • Controls dark areas without affecting the black level or brightness in the overall picture.		Digital audio out	Auto : Bypass DTS signal if input source is DTS format, or fixed outpu to Dolby Digital besides DTS source
	Video NR	Off/Weak/Medium/Strong		001	<b>PCM</b> : Digital output signal is fixed to PCM.
	(DOT NOISE REDUCTION) • Some menus are signal or condition	Reduces noise, commonly called snow. Leave it off when receiving a strong signal.     e grayed out depending on the input		Audio input	HDMI1-2 in : Digital/Analog Select audio input terminal when DVI cable is connected. (Analog audio input signal)
	Signal or contouch.         Advanced         picture       3D Y/C Filter : Minimizes noise and cross-color in the picture.         Color matrix : Selects image resolution of component-connected devices.         SD: Standard-Definition         HD: High-Definition         Only used with 480p video signal.         Black level : Selects Dark or Light. Valid only for external input signals.         MPEG NR : Reduces picture noise in MPEG-compressed video.         • For Digital TV only         3:2 pulldown : (Off/Auto) Adjusts the picture recorded in 24 fps for optimum quality.         Aspect adjustments : Screen format (FULL/4:3/JUST/ ZOOM/H-FILL) Changes the format (aspect ratio). Lets you choose the aspect depending on the format of received signal.         H size (Size1/Size2) Adjusts the horizontal display range to reduce noise of both side edges of an image. Size 2: Adjusts the image size according to the aspect mode to reduce noise.         HD size (Size1/Size2) 1: Display 95% of HD signal, to trim noise at the edges of the screen. 2: Full image.         Zoom adjustments (V-position/ V-size) Adjusts vertical alignment	3D Y/C Filter : Minimizes noise	You will be the "Lock" r		ur password each time you display
			Settings	Items	Option
		devices. SD: Standard-Definition HD: High-Definition Only used with 480p video signal. <b>Black level</b> : Selects Dark or Light. Valid only for external input	Lock	Mode	Off: Unlocks all the Lock settings of "Channel", "Program" and "Input". All : Locks all the inputs regardless of the Lock settings of "Channel", "Program" and "Input". Custom : Locks specified inputs o "Channel", "Program" and "Input".
		MPEG NR : Reduces picture noise in MPEG-compressed video. • For Digital TV only 3:2 pulldown : (Off/Auto) Adjusts		Channel (These channels will be blocked regardless of the program rating.)	[Select a channel to lock.]
		Aspect adjustments : Screen format (FULL/4:3/JUST/ ZOOM/H-FILL) Changes the format (aspect ratio). Lets you choose the aspect depending on the format of received signal. H size (Size1/Size2) Adjusts the horizontal display range to reduce noise of both side edges of an image. Size 2: Adjusts the image size according to the aspect mode to		Program (To set a rating level)	Mode: (Off/On)Set program lock status. "V-chip" technology enables restricted shows to lock according to TV ratings. On: Set each rating level (U.S.TV Ratings, U.S. Movie Ratings, Canadian English ratings., Canadian French ratings.) U.S.TV ratings/U.S. Movie ratings/Canadian English ratings/Canadian French ratings
		<b>HD size</b> (Size1/Size2) 1: Display 95% of HD signal, to trim noise at the		Input	HDMI1/HDMI2/Component/ Video Locks external inputs accordingly.
			Change password	[Changes the password. Input the new 4-digit password twice.]	

Supported file format in Media Player File extension Image resolution (pi Details / Restrictions seline jpeg DCF and EXIF standards x 4 to 15,360 x 8,640 Sub-sampling: 4:4:4, 4:2:2, 4:2:0 rogressive jpeg: Progressive JPEG is not supported. 4 x 4 to 4.000 x 4.000 Details / Restrictions Audio codec MP3 H.264 BP/MP/HP MPEG1 Layer1/2 MPEG4 SP/ASP AC3 MP3 MPEG1 Layer1/2 H.264 BP/MP/HP DTS Core

			AC3	
ASF	.asf .wmv	VC-1 Windows Media Video Ver. 9	Windows Media Audio v8 Windows Media Audio v9 MP3 AC3	<ul> <li>Copy-protected files cannot be played back.</li> </ul>
MP4	.mp4 .m4v	H.264 BP/MP/HP	MP3	This TV supports this container recorded by Panasonic products. For details, read the manual of the products
тѕ	.ts .tp .trp	MPEG2 MP@HL H.264 BP/MP/HP	MP3 AC3	
PS	.mpg .mpeg .vro .vob	MPEG1 MPEG2 MP@HL	MPEG1 Layer1/2 DVD LPCM AC3	
FLV	.flv .f4v	H.264 BP/MP/HP	MP3	

Music

Photos

JPEG

Videos

AVI <4 ref frame

MKV

Format

jpeg

.mk\

Codec	File extension	Restrictions
MP3	.mp3	Compatible con tasa de bits • 32/40/48/56/64/80/96/112/128/160/192/224/256/320kbits/s • VBR no support
WMA	wma	<ul><li>Copy-protected files cannot be played back</li><li>WMA Lossless is not supported.</li></ul>

Some files may not be played back even if they fulfill these conditions.

Do not use two-byte characters or other special codes for data.
The device may become unusable with this TV if the file or folder names are changed.
The picture may not appear correctly on this TV depending on the recording equipment used.

Display may take some time when there are many files and folders.
The function cannot display Motion JPEG and still image not DCF formatted (i.e. TIFF, BMP).
Data modified with a PC may not be displayed.

Data modified with a PC may not be displayed.
 Images imported from a PC must be compatible with EXIF 2.0, 2.1 and 2.2.
 Partly degraded files might be displayed at a reduced resolution.
 All ".JPG" extension data in the USB flash memory will be read in Photo viewer Mode.

The folder and file names may be different depending on the digital camera used.

Power rating Standby condition Number of pixels Net Weight Sound System

9

Sound Output

**Operating Conditions** 

- exFAT or NTFS).

Items	Option	
ANT in	Cable/Antenna	Madia
Auto program	Automatically retune the channels received in the area.	Media
Manual Program	Set Analogue channel manually after Automatic Channel Search.	The p depe
MTS	Stereo/SAP/Mono	Dis
Audio Language	English/Spanish/French	<ul> <li>Paral</li> <li>res</li> </ul>
Preferred audio type	Main audio/Hearing impaired/ Visually impaired Narration settings for impaired users Hearing Impaired: Activates closed captioning when available on broadcasts. Visual Impaired: Activates the narration soundtrack when available on broadcasts. • For Digital TV only.	<ul> <li>Pic cor</li> <li>The dig</li> <li>Star</li> <li>Ir</li> <li>Ins</li> </ul>
Items	Option	• 1115
Language	English/Español/Français	
Timer set	Sleep Timer : (Off/15/30/60/90 (minutes)) No signal for 10 minutes : (Stay on/ Power TV off) To conserve energy, the TV automatically turns off when NO SIGNAL and NO OPERATION confinue for more than 10 minutes. No activity for 3 hours : (Stay on/ Power TV off) To conserve energy, the TV automatically turns off when no operation of remote and side angle law or thur use for more than 3 hours	<ul> <li>Insestration</li> <li>Me</li> <li>COMI</li> <li>Support</li> <li>Support</li> </ul>
Closed Caption		- Max
Input labels	You can label the terminal with the	- USB
HDMI control	CEC function : (Off/On) On: The TV is turned on automatically and switches to the appropriate HDMI input whenever an HDMI connected equipment is initially turned on and the Play mode is selected. Power off link : (No/Yes) On: When the TV is turned off, all HDMI connected equipment is also automatically turned off. • A Panasonic DVD Recorder will not turn off if it is still in Rec mode. • The TV remains on even if the HDMI connected equipment is turned off.	
About	Displays TV version and software license.	USE
Reset to	Performing reset will clear all settings made in the "Setup" menu, such as channel settings.	■ S ⊢ c 1 Se
Ī	ANT in Auto program Manual Program MTS Audio Language Preferred audio type Items Language Timer set Closed Caption Input labels HDMI control	ANT in         Cable/Antenna           Auto program         Automatically retune the channels received in the area.           Manual         Set Analogue channel manually after Automatic Channel Search.           MTS         Stereo/SAP/Mono           Audio         English/Spanish/French           Language         English/Spanish/French           Preferred         Main audio/Hearing impaired/Visually impaired           audio type         Visual Impaired: Activates closed captioning when available on broadcasts.           Visual Impaired: Activates the narration soundtrack when available on broadcasts.         • For Digital TV only.           Items         Option           Language         English/Español/Français           Sleep Timer : (Off/15/30/60/90 (minutes))         No signal for 10 minutes : (Stay on/ Power TV off)           Timer set         off when NO SIGNAL and NO OPERATION continue for more than 10 minutes.           Timer set         Closed Caption Displays subtitles (Closed caption)           Input labels         You can label the terminal with the type of equipment connected to it.           Closed Caption         Displays subtitles (Noryes) On: When the TV is turned on automatically and switches to the appropriate HDMI connected equipment is also automatically turned off.           HDMI control         Power off link : (Noryes) On: When the TV is turned off.           HDMI control

providing a text display of the audio. The program being viewed must be transmitting the Closed Caption (CC) information. The settings in "Analog" or "Digital" depend on the broadcaster

## Specifications

AC 110-127 V, 60 Hz **Rated Power Consumption** 32" : 56 Watts ; 39" : 56 Watts 32": 0.3 Watts ; 39": 0.3 Watts Visible screen size (diagonal) 32" class : 31.5inch (80cm) 39" class : 38.5inch (98cm) 32" HD (1366X768) 39" FHD (1920X1080) **Dimensions (W × H × D)** (Including Stand)

32" : 29.2" × 20.2" × 8.2" (741 mm × 513 mm × 207 mm) 39" : 35.1" × 23.4" × 8.6" (890 mm × 593 mm × 217 mm)

32": 17.6lb. (8 kg) (Including Stand) 32" : 15.4lb. (7 kg) (TV only) 39" : 27.6lb. (12.5kg) (Including Stand) 39" : 24.3lb. (11 kg) (TV only)

#### 1-way 2 bottom SP System Channel Capability-ATSC/NTSC (Digital/Analog) VHF/UHF: 2 - 69, CATV: 1 - 135

32" : 5W+5W ; 39" : 10W+10W <u>um Visible Range</u> 32" : 27.6" × 15.6" (701 mm x 396 mm) 39" : 33.7" × 19.0" (857 mm x 482 mm)

Temperature: 32° F - 95° F( 0°C to 35°C) Humidity: 20 % - 80 % RH (non-condensing)

• Specifications are subject to change without notice. The On-Screen Menu and figures in this manual may differ slightly from the product.

USB Flash Memory format : FAT16, FAT32 (no support

 Some USB devices (USB HUB or card adapter) or some USB stick may not be used with this TV.

# Using Media player

ia player allows you to enjoy photos, videos or c recorded on a USB Flash Memory.

picture may not appear correctly on this TV nding on the recording equipment used.

- play may be delayed when there are many files and folders. artly degraded files might be displayed at a reduced solution.
- ture settings may not take effect depending on the
- e folder and file names may be different depending on the ital camera or digital video camera used.

rting Media Player

#### nsert the USB Flash Memory to the TV sert the device



Pull straight

out  $/ \wedge$ dia player only supports USB Mass storage class devices.

PLIANCE: ports only USB1.1 or USB2.0 standard.

ports file format of FAT16 or FAT32. kimum USB capacity supported is 32GB. B Hub or card adapter is not supported.

#### wing Contents

tart Media Player MEDIA PLAYER

Select the	contents	
Media select • EXIT • Select		50

I	Select the da	ta [Photo	s] / [Musi	c] / [Video	S
	USB				
	Access	Photos	Music	Videos	
	C RETURN				

low to view the data differs depending on data storage onditions. elect Title/Folder

elect file

#### iew or play

Notes

bnail / Playback view image and operation differ depending on selected contents

10

# Photos view

Supported file format  $\rightarrow$  (p.13)



Operation guide

Features	
0	

<ul> <li>Slideshow</li> </ul>	
<ul> <li>View select</li> </ul>	➡ <b>G</b>
Drive select	⇒ <u> </u>
Media select	⇒ 💼

## : Error display

Displays data information (file name, date, size, etc.) and differs depending on selected data.

#### [View select]


1 Display the viewing mode selection screen


2 Select the view type



Folder view: Displays the thumbnails grouped by folders 3 Select folder view to display the thumbnails of the selected



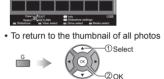

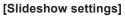

1 Display the "Slideshow settings" screen 

### 2 Select the items and set





- Transition effect Effect for photo switching during slideshow. [None]
- [Dissolve] / [Wipe →] / [Wipe  $\leftarrow$ ] / [Wipe  $\uparrow$ ] / [Wipe  $\downarrow$ ] / [Box in] / [Box out] / [Random] Photo size
- Selects enlarged or normal viewing mode on Single view and Slideshow. [Normal] / [Zoom] • Depending on the photo size, the photo may not be enlarged

#### Display interval

Sets the interval for each image to be displayed in the Slideshow mode. [5] / [10] / [15] / [30] / [60] / [90] / [120] (seconds)

### Repeat

Turn the slideshow repeat (cycle) function on or off. [Off] / [On]

# Background music

Selects the background music during Photo mode [Off] / [Type1] / [Type2] / [Type3] • [Type1], [Type2] and [Type3] are the fixed music each

#### installed in this TV.

- Picture quality may suffer depending on the slideshow settings. Picture setting may not work depending on the slideshow settings.

11

# Useful Information

# **Customer Service**

# **Customer Service Directory**

Obtain products information and operative assistant; localize the closer distributor or Service Center; buy spare parts and accessories by our web site to Latin American:

# http://www.lar.panasonic.com

Also you may contact	us directly by our Contact Center:
Panama	800-PANA (800-7262)
Colombia	01-8000-94PANA (01-8000-947262)
Ecuador	1800-PANASONIC (1800-726276)
Costa Rica	800-PANA737 (800-7262737)
El Salvador	800-PANA (800-7262)
Guatemala	1-801-811-PANA (1-801-811-7262)
Chile	800-390-602
	From a cell phone: 797-5000
Venezuela	800-PANA-800 (800-7262-800)
Uruguay	0-800-PANA (0-800-7262)
Peru	0-800-00- PAN (0-800-00726)
Argentina	0800-333-PANA (0800-333-7262)
	0810-321-PANA (0810-321-7262)
Paraguay	800-11-PANA (800-11-7262)
Dominican Republic	809-200-8000

# Mexico Service

To obtain information in the Republic of Mexico contact us at:

# email: atencion.clientes@mx.panasonic.com

Or you may contact us in the next following phones numbers: 01800-VIP-PANA (01800-847-7262) - Interior (55) 5000-1200 - Mexico D.F. and Metropolitan Area