 
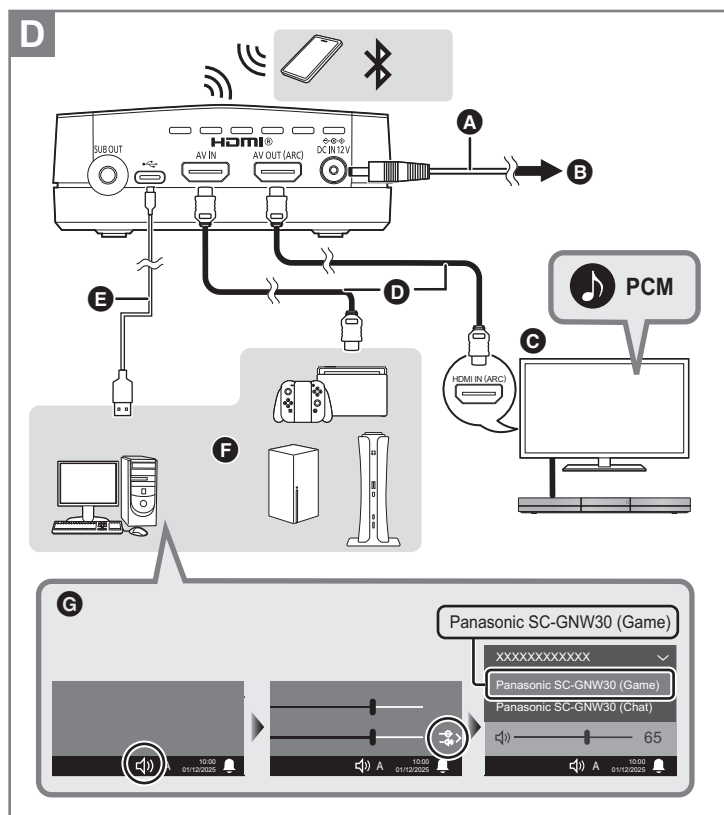 
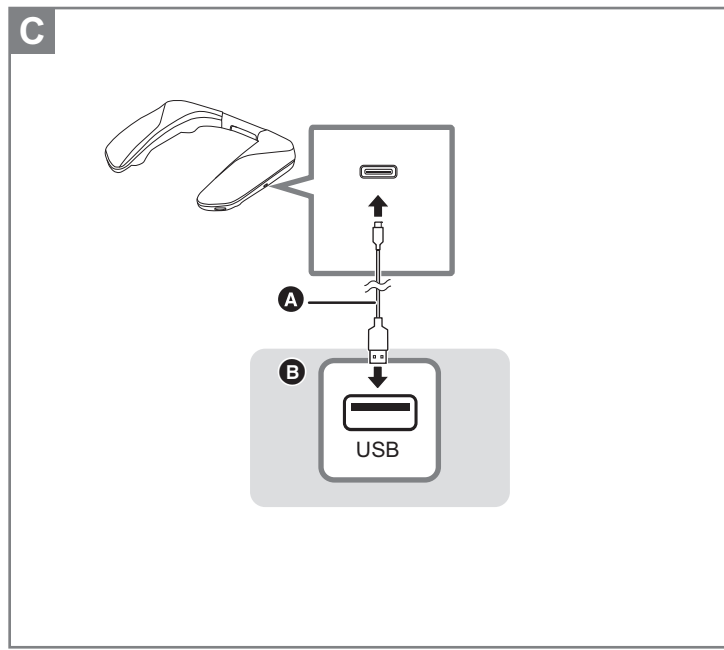 
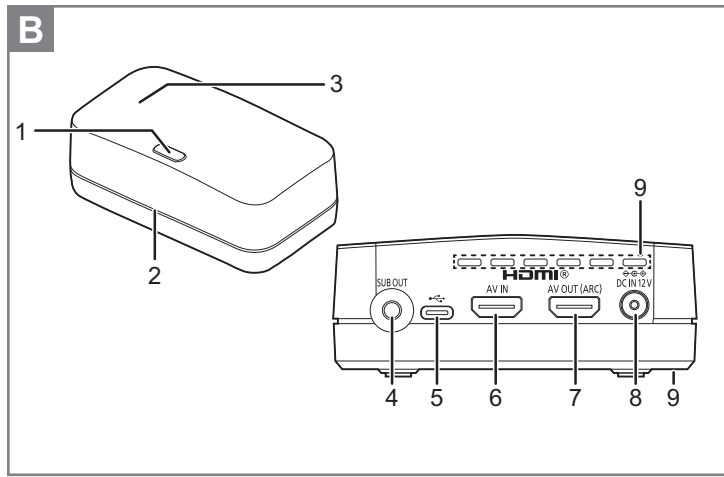 


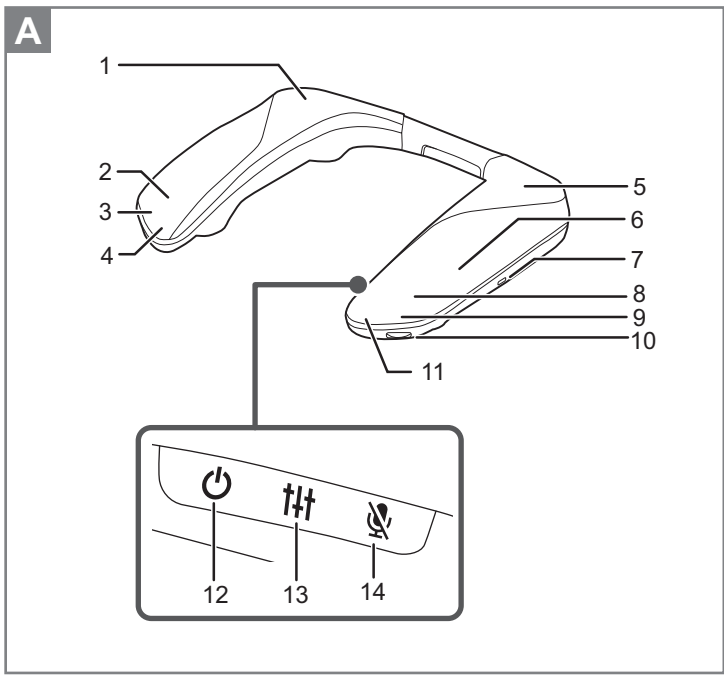

A Part names (Neck Speaker)

- 1 Rear (R) speaker
- 2 Front (R) speaker
- 3 Operation indicator (R)
- 4 Microphone (R)
- 5 Rear (L) speaker
- 6 Built-in antenna
- 7 Charging terminal
- 8 Front (L) speaker
- 9 Operation indicator (L)
- 10 [VOL] dial (volume dial)
- 11 Microphone (L)
- 12 [0] button (standby button)
- 13 [H] button (sound mode button)
- 14 [M] button (microphone mute button)

B Part names (Transmitter)

- 1 [INPUT-PAIRING] button (inputpairing button)
- 2 Operation indicator
- 3 Built-in antenna
- 4 Audio output terminal [SUB OUT]
- 5 USB port
- 6 HDMI AV IN terminal [AV IN] For AV/Game
- 7 HDMI AV OUT terminal [AV OUT(ARC)] For TV (ARC compatible)
- 8 DC IN terminal [DC IN]
- 9 Ventilation holes

C Charging

- 1 USB cable (optional)
- 2 USB AC adaptor (optional), etc.

The rechargeable battery (installed in the neck speaker) is not charged initially. Charge the battery before using the neck speaker. Use a USB AC adaptor (optional) and USB Type-C cable (optional) to charge.

- The operation indicator (R) lights (red) during charging and goes out when charging finishes.

■ Charging time (→ Specifications)

- Note:**
- When using a USB AC adaptor first connect the neck speaker to the charger, then plug the charger into the AC power source.
 - Charging may not be performed or may stop if the computer is in or switched to standby or sleep mode.
 - The built-in rechargeable battery may deteriorate if it is not used for long periods, so recharge once every 6 months.
 - The volume reduces if you use the neck speaker with the USB cable connected.

■ Battery level notification

- When the battery level drops to 20%, an operation tone sounds and the operation indicator (R) changes to blinking (red).
- When you press and hold the [H] button while the neck speaker is on, you can see the remaining battery charge with the operation indicators.

Remaining battery charge	Operation indicator (L)	Operation indicator (R)
75 % to 100 %	Lights (blue)	Lights (blue)
25 % to 75 %	Lights (blue)	Off
5 % to 25 %	Lights (red)	Off
5 % or less	Blinks (red)	Off

D Connecting the transmitter

- 1 AC adaptor (supplied)
 - 2 To a household AC outlet
 - 3 TV (Monitor)
 - 4 HDMI cable (optional)
 - 5 USB cable
 - 6 PC, PS4/PS5, Xbox, Nintendo Switch
- Connect the supported device and the transmitter. The neck speaker supports PC, PS4/PS5, Xbox, Nintendo Switch.
- Do not connect the AC adaptor of the transmitter to the AC power source until all connections have been completed.
 - Before connecting the transmitter, make sure your PC/Game Console is powered on.
 - The operation indicator of the transmitter lights (cyan) when there is a wireless connection with the neck speaker and blinks (cyan) when there is no wireless connection with the neck speaker.
 - For the HDMI cable, purchase a "Ultra High Speed HDMI cable". Cables that do not comply with the HDMI specification will not work.

■ When connecting to a PC

In order to properly use the neck speaker, depending on the operating environment and OS, you need to change some sound settings on the computer. Two devices are shown when you connect the transmitter, so make the settings as follows:

- Make "Panasonic SC-GNW30 (Game)" the default device for "Playback" (B).
- Make "Panasonic SC-GNW30 (Chat)" the default device for "Recording" (B).

(Refer to the "Owner's Manual (PDF format)" for details.)

- Note:**
- Do not use any other AC adaptors except the supplied one.
 - You can use either the supplied USB cable or a commercially available USB cable. When using a commercially available one, use a USB Type-C cable (approx. 1.0 m (3.2 ft)) that supports data transfer.
 - When connecting to a TV, select the ARC-compatible HDMI IN terminal on your TV. Also change the audio output on your TV to PCM output.
 - For information about connecting to the audio output terminal (SUB OUT) on the transmitter, refer to the "Owner's Manual (PDF format)".

■ Pairing the transmitter with a Bluetooth device

- Turn on the power of the neck speaker and the Bluetooth device, and move the Bluetooth device close to the transmitter.
- Enable the Bluetooth function on the Bluetooth device.

- 1 Press and hold the [INPUT-PAIRING] button until the operation indicator on the transmitter blinks rapidly (blue).
- If the operation indicator is blinking slowly (blue), take your finger off the [INPUT-PAIRING] button, then do the operation again.

- 2 Open the Bluetooth connections screen on the Bluetooth device and select "SC-GNW30" to connect.

- Note:**
- Only one Bluetooth device can be connected.
 - Refer to the "Owner's Manual (PDF format)" for details about connecting a paired Bluetooth device, restrictions, etc.

E Using the neck speaker

The neck speaker is worn by placing it around your neck, on your shoulders.

Wirelessly connecting the neck speaker and the transmitter

Turn on the neck speaker

Before turning on the neck speaker, connect the transmitter and the supported device with the cable.

- 1 Press and hold the [0] button for about 2 seconds until the operation indicator (R) blinks (cyan).

The wireless connection between the neck speaker and the transmitter starts. When the wireless connection is completed, the neck speaker and the transmitter are in the following states:

Neck Speaker	Operation indicator (L)	Lights (cyan) ¹⁾
Transmitter	Operation indicator (R)	Lights (cyan) ¹⁾²⁾
	Operation indicator	Lights (cyan)

¹⁾ If the "Lighting Settings" in the app are set to "OFF", the indicators turn off after about 3 seconds.

²⁾ Blinks (red) when the battery level drops to 20 %.

- 2 Press the [H] button on the neck speaker or [INPUT-PAIRING] button on the transmitter, then select the connected device.

- The input source changes in the following order each press:
USB → HDMI → TV → Bluetooth
- If you selected USB, HDMI, or TV:
Change the input on the connected device to the one the transmitter is connected to, then start play on the device connected to the transmitter.
- If you selected Bluetooth:
Start play on the Bluetooth device connected to the transmitter.

- To turn the neck speaker off**
- Press and hold the [0] button for about 2 seconds until the operation indicator (L) blinks 3 times.
- The operation indicator (L) turns off and the power of the neck speaker turns off.

- Note:**
- When connected wirelessly, if there is no sound for 5 minutes or more, the neck speaker automatically turns off. (Auto off function)
 - The auto off function may not work in some cases when there is noise from other devices.
 - The settings for the auto off function can be changed in the app. (Factory default: on (5 min))

Basic operations

Adjusting the volume

Turn the [VOL] dial.

- An operation tone sounds when you reach either the minimum volume or the maximum volume.

- Note:**
- The volume setting is maintained for each input source even when the power is turned off.

Enjoying sound field effects that suit the source (sound mode)

You can enjoy sound field effects that suit the images on connected equipment by switching the sound mode. (Factory default: RPG)

Press the [H] button.

- The mode switches each time you press the button.
- Note:**
- The setting is maintained until it is changed again.

Microphone muting

Press the [M] button.

The operation indicator (L) and operation indicator (R) of the neck speaker and the operation indicator of the transmitter light (red) and the microphones are muted.

- Press again to cancel.

- Note:**
- Microphone muting is maintained even when the power is turned off.
 - Microphone muting can be changed while the neck speaker and the transmitter are connected wirelessly.

Changing the neck speaker's settings

The following settings can be changed on the neck speaker. Refer to the "Owner's Manual (PDF format)" for instructions on how to change the settings.

- Changing the volume of the other party in a chat and speaker output balance
- Adjusting the bass
- Restore factory settings
- Turning off the operation indicators during wireless connection
- Pairing the neck speaker and the transmitter again
- Simultaneously using two neck speakers to enjoy music

Changing settings using the app (SOUNDSLAYER Engine)

You can use the app to change the settings for the neck speaker.

- Equalizer settings
- Adjusting speaker balance
- Turning off the operation indicators (lighting settings)
- Updating software

Refer to the following website for details about the app:
<https://panasonic.jp/support/global/cs/audioidownload/ise/>
(This site is in English only.)

Software update

Occasionally, Panasonic may release updated software for this system that may add or improve the way a feature operates. These updates are available free of charge.

For more details, refer to the following website.
<https://panasonic.jp/support/global/cs/>
(This site is in English only.)

When disposing of the product

The built-in batteries are a valuable recyclable resource. When disposing of the neck speaker, rather than disposing of in general waste (non-combustible garbage), follow the local national laws and take to the appropriate collection point. Contact your local government organization if you are unsure of your local collection point.

- Refer also to the "Owner's Manual (PDF format)" for more "When disposing of the product" items.