

**Panasonic**

PROFESSIONAL  
KITCHEN 食

## NE-SCV3 CLEANING GUIDE

---





1




**Cool Down Oven:** To initiate the cool-down process, start by pressing the 280°C rectangle on the control panel.

2



**Select Cooling Mode:** Once pressed, a screen will appear. Select the cooling option, and follow the on-screen instructions by slightly opening the door until it naturally holds in a position around 1/4 open. Then, press the start button to begin the cool-down process.

2a

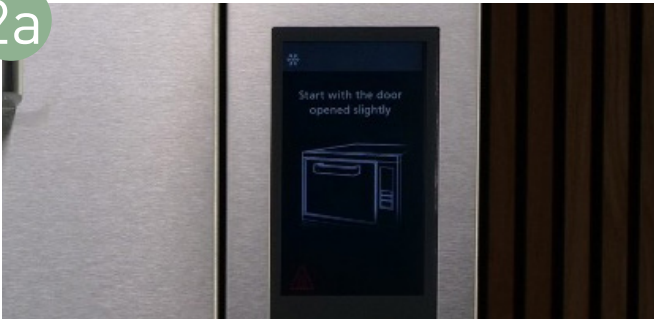


Example of the screen that appears when cooling is selected. Refer to on-screen instructions for opening the oven door.

2b




During the cool-down process, the oven door should be slightly opened to allow heat to escape. Here, you can see the natural angle at which the door rests when left slightly ajar.

2c

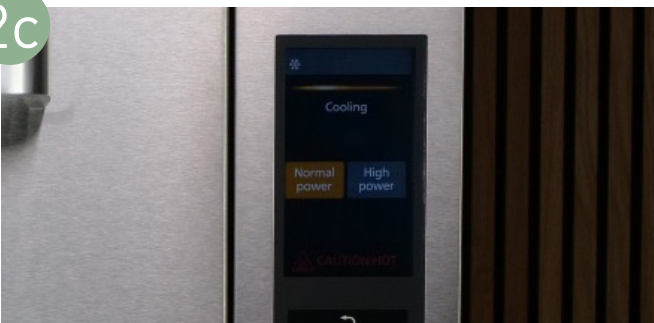


Note that there are two power levels for cooling the oven—normal and high power. Either setting is suitable.

3

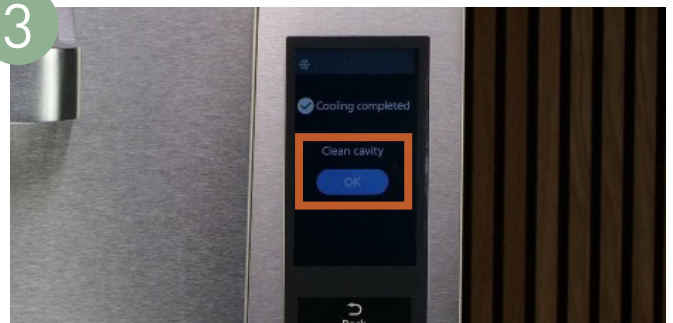


**Cooldown Completion:** After the cool-down is complete, a new screen will appear. Press OK on the screen to proceed.

3a

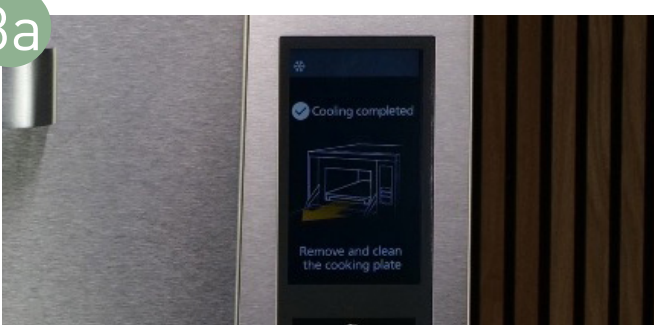

The on-screen instructions for cleaning the oven's interior will now cycle through.

3b

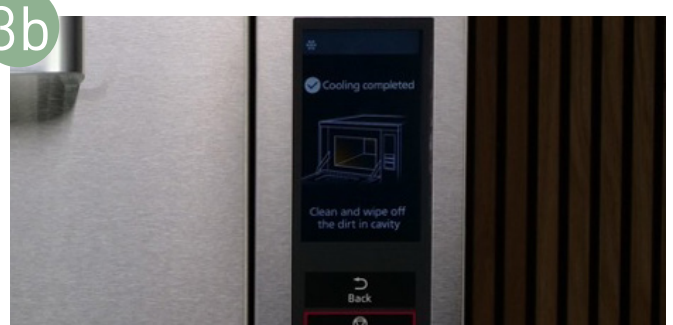

Further indications of the cleaning procedure for the oven can be found on the screen.



4




**Preparation:** Ensure you have a bowl of hot, soapy water and a green scouring pad ready.

4a



Remove the cook plate and place it into the bowl of hot, soapy water to soak.

4b

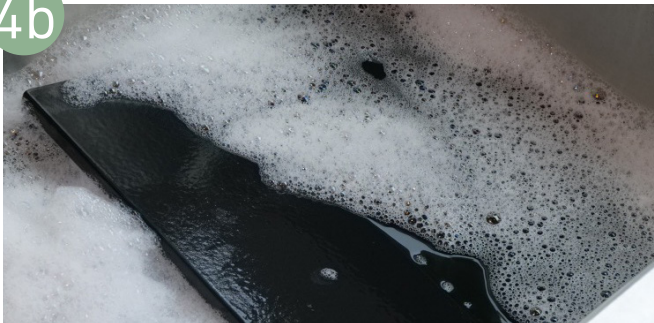

**Cook Plate Cleaning:** After removing the cook plate, place it in a bowl of hot, soapy water and let it soak. This will help loosen any dirt or debris from the surface.

5



**Clean Interior:** With the cook plate now removed, clean the inside cavity's side and back walls using hot, soapy water and the green scouring pad. Be sure to also clean the back of the oven and the door.

5a



After cleaning the cavity, wipe the interior with paper towels to remove as much moisture as possible.

6




**Remove Drip Crumb Collector:** The drip crumb collector is located just below the door. Pull it to remove. Dry it thoroughly with a paper towel before gently placing it back into position.

6a



Use a green scouring pad to clean using hot soapy water, then dry thoroughly with paper towel before gently placing back into place.

6b

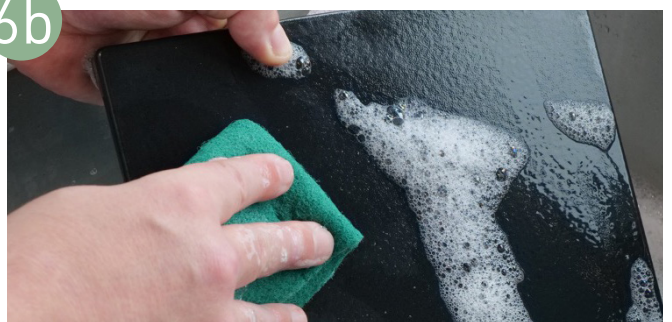

After the cook plate has time to soak, use a green scouring pad to scrub away any remaining dirt and debris. Once clean, dry the cook plate thoroughly before returning it to the oven.



7



**Front Filter Access:** To access the front filter for cleaning, first pull down the black filter. It will naturally rest at an angle, allowing you to easily lift it out of its slots. When replacing the filter, ensure it is properly aligned, and avoid forcing it back into place.

7a




Here, the whole filter can be seen removed in one piece.

8



**Filter Cleaning:** Remove the filter by tilting it forward and pulling it up. Take out the inner mesh filter and wash both filters with warm, soapy water, then dry them with paper towels. Wipe out the bottom of the slot that is accessible once the filter is removed. Reinsert the mesh filter, ensuring it is correctly aligned, and carefully realign the entire filter on its hinge before closing.

8a

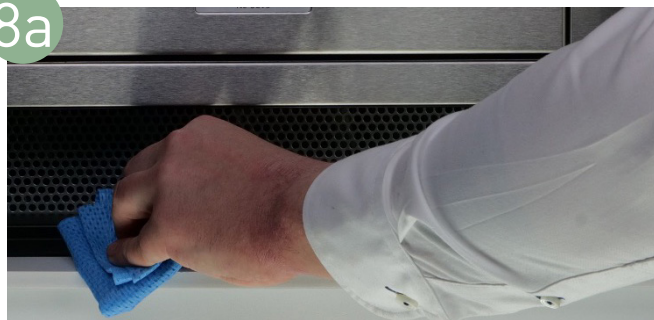

As mentioned in step 5, make sure to clean the area of any debris exposed from the removal of the filter.

9



**Clean Exterior:** Use D10 and a blue cloth to clean the outside of the oven, ensuring that all touch points are thoroughly cleaned.

10




**Final Wipe Down:** Use a dry paper towel to wipe down the oven, removing any excess moisture and helping to achieve a nice shine.

# Monthly Clean



1

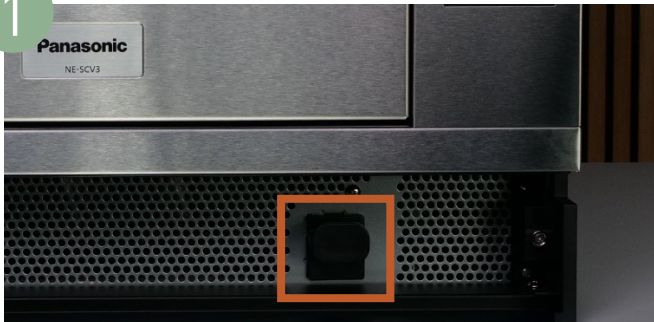

**Drip Tray Cleaning:** With the front filter removed, you can access the location of the drip tray. This tray is easily removed by pulling it towards yourself. Remove the drip tray, wash it with hot, soapy water, then dry it and replace it back in its slot.

2




**Exhaust Vent Scrubbing:** The back of the oven's exhaust vent needs to be scrubbed with a damp green scouring pad to remove any grease buildup. Once cleaned, dry it thoroughly with a paper towel.

2a



Here, the oven exhaust vent is being dried with a paper towel. Depending on the oven's location, you may need to twist or turn the oven to access the vent properly.

3

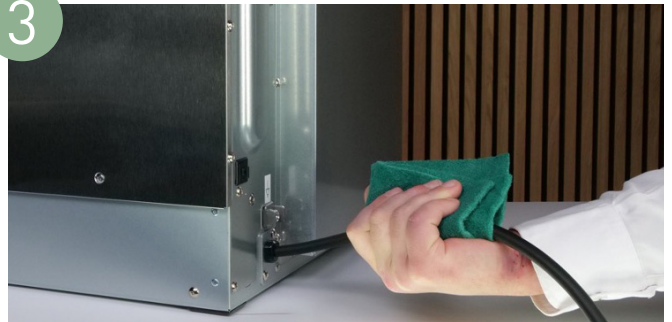

**Power Cable Cleaning:** Using a damp green scouring pad, clean the power cable to remove any grease or grime that may have accumulated. After cleaning, dry it thoroughly with a paper towel. Also, ensure that the countertop area exposed when moving the oven is cleaned before returning it to its original position.

3a



Make sure the power cable is completely dry before returning the oven to its original position.



**Panasonic**

**PROFESSIONAL  
KITCHEN 食**