


Panasonic[®]

Operating Instructions

Premium Design Phone with Smartphone Connect

Model No. **KX-PRW130C**

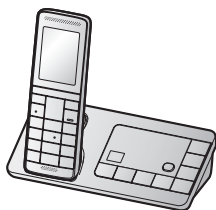

*Before initial use, see “Getting Started”
on page 8.*

Thank you for purchasing a Panasonic product.

Please read these operating instructions before using the unit and save them for future reference.

For assistance, please visit our support page on: www.panasonic.ca

Table of Contents

Introduction		
Accessory information	3	
Important Information		
For your safety	5	
Important safety instructions	6	
For best performance	6	
Other information	7	
Specifications	7	
Getting Started		
Setting up	8	
Intelligent eco mode	9	
Controls	10	
Display icons	10	
Language settings	11	
Date and time	11	
Recording your greeting message	12	
Other settings	12	
Making/Answering Calls		
Making calls	13	
Answering calls	13	
Useful features during a call	13	
Intercom	15	
Phonebook		
Phonebook	16	
Speed dial	18	
Programming		
Menu list	20	
Alarm	26	
Night mode	27	
Call block	28	
Baby monitor	29	
Other programming	31	
Registering a unit	32	
Call Display Service		
Using Call Display service	33	
Caller list	35	
Answering System		
Answering system	36	
Turning the answering system on/off	36	
Greeting message	36	
Listening to messages	37	
Advanced new message alerting features	39	
Remote operation	40	
Answering system settings	41	
Smartphone Integration		
Smartphone integration	43	
Network settings	43	
Smartphone Connect app	44	
Other network features	45	
Useful Information		
Voice Mail service	46	
Error messages	47	
Troubleshooting	48	
Network connection troubleshooting	53	
Industry Canada Notices and other information	55	
Warranty	56	
Index		
Index.....	57	

